



powered by **WebOS** Hub

HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model:43WOS625D

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

EN

SR

CONTENTS

General Safety	4
Installation	8
Controls and Connections	10
Magic Remote Control	12
Quick Settings	16
Smart Home	18
USB Media	21
Menu	
Picture	23
Sound	24
Programme	25
Connection	26
General	27
Accessibility	28
Support	29
FAQs	30

GENERAL SAFETY

Read this manual thoroughly before you start using the TV.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock.

This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

- Using Cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the television or its controls and to call for an adult to assist.

GENERAL SAFETY INSTRUCTIONS (Cont.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.
- Danger of explosion if battery is incorrectly placed. Replace with same or equivalent type.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this TV set, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- Do not allow anything to rest on or roll over the power cord and antenna cable. Doing so may cause a fire or an electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this TV during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the wall socket.

GENERAL SAFETY INSTRUCTIONS (Cont.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

WARNING!

It is STRONGLY RECOMMENDED that you ANCHOR this product.

Toppling furniture and TV's can cause serious injury or death.

TO HELP AVOID ANY SERIOUS OR FATAL INJURY, WE STRONGLY RECOMMEND THAT THIS PRODUCT BE PERMANENTLY FIXED TO THE WALL OR OTHER SUITABLE SURFACE. FIXING DEVICES ARE NOT INCLUDED SINCE DIFFERENT SURFACE MATERIALS REQUIRE DIFFERENT ATTACHMENTS. PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT WHAT FIXING DEVICE TO USE.

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

GENERAL SAFETY INSTRUCTIONS (Cont.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the TV set near heat sources such as radiators, stoves or other audio

visual equipment that produce heat.

- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the TV set.
- The antenna must be installed away from high-voltage power line,
- Please contact an antenna professional installer to install the antenna to avoid incorrect installation which could result in fire, electric shock or serious injury.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.
- If mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



“HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.”

INSTALLATION

 
Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer.

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

Attaching the stand

Step 1

Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right.

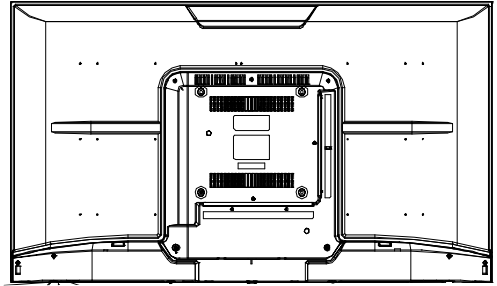

Step 2

Align the stand leg to the installation point, as illustrated below



Step 3

Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated on the right.

CAUTION!

Do not apply excessive force as this may damage the screw holes.

INSTALLATION (Cont.)

 
Wall-Mounting Instructions

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

- We recommend you use a professional installer as we assume no liability for any eventual damage to the product or injury to yourself if you mount the TV on your own.



BACK OF TV

VESA PATTERN: 200 x 200mm

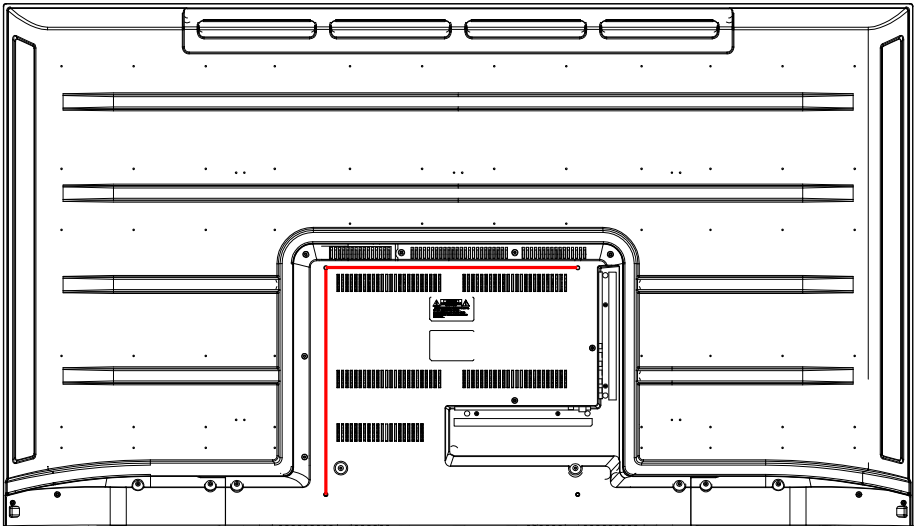


NOTE: If you are wall-mounting the TV, this should be done by a qualified installer.

  CONTROLS AND CONNECTIONS

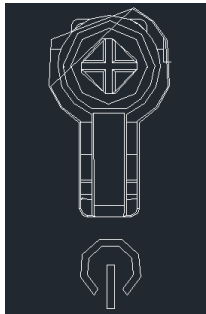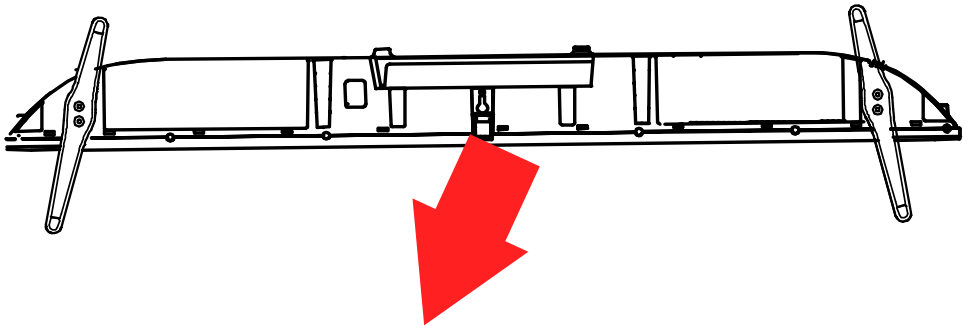

CONTROLS AND CONNECTIONS

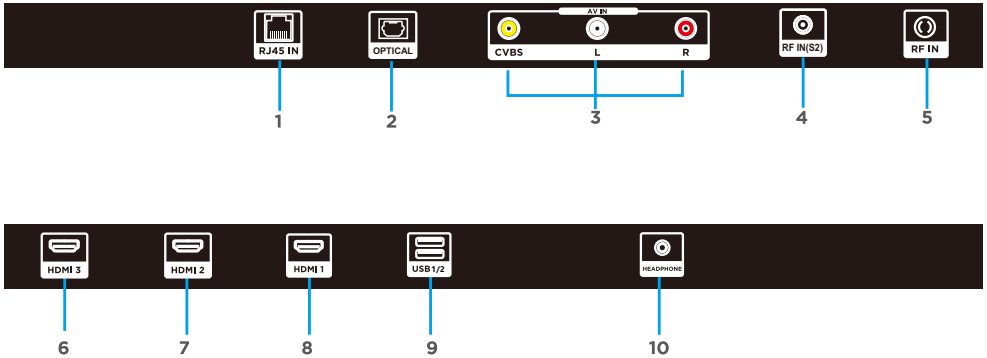 

1. **RJ45 (ETHERNET)**
2. **OPTICAL OUT**
3. **CVBS/ AUDIO LEFT & RIGHT**
4. **RF IN (SATELLITE)**
5. **RF IN (ANTENNA)**
6. **HDMI 3**
7. **HDMI 2**
8. **HDMI 1**
9. **USB INPUT*2**
10. **HEADPHONE OUT**

USB connection

Insert a USB storage device into the USB port to record, playback of video/photo/music

MAGIC REMOTE CONTROL



Next few pages of MAGIC REMOTE CONTROL explains the following:

- First Time Pairing
- Re-Registering The Magic Remote Control

MAGIC REMOTE CONTROL (cont.)

Please follow instruction when pairing magic mouse remote control for your webOS TV

Your Smart TV works with a Magic Remote Control that acts as both a cursor and a remote control and a Screen Remote that allows you to operate your Smart TV and the external devices connected to your Smart TV.

You can use the Magic Remote Control like a mouse to select and run content on your Smart TV. The Magic Remote Control also supports voice commands (ThinQ AI) and gestures to allow you convenient access to various Smart TV functions.

FIRST TIME PAIRING



Registering the Magic Mouse Remote Control



You must register the Magic Remote Control on your Smart TV when you use it for the first time. To register your Magic Remote Control using the **Wheel (OK)** button, perform the following steps:


1. Turn on your Smart TV.
2. Wait for 10 seconds while your Smart TV turns on.
3. Aim the Magic Remote Control at the Smart TV, and then press the **Wheel (OK)** button. A message appears after the Magic Remote Control is registered.
 - If the Magic Remote Control does not register, turn your Smart TV off and on again and repeat the registration process.

MAGIC REMOTE CONTROL (cont.)

RE-REGISTERING THE MAGIC REMOTE CONTROL

If the Magic Remote Control is not functioning properly, initialize it and then re-register it. To use the **Smart Home** () button and **BACK** () button on the Magic Remote Control to re-register the Magic Remote Control, perform the following steps:

1. Hold down the **Smart Home** () button and **BACK** () button on the Magic Remote Control for 5 seconds to initialize the Magic Remote Control.
2. Aim the Magic Remote Control at your Smart TV, and then press the **Wheel (OK)** button. A message appears after the Magic Remote Control is registered.

Note Aim the Magic Remote Control at your Smart TV, and then hold down the **BACK** () button for 5 seconds to re-register the Magic Remote Control.

 
MAGIC REMOTE CONTROL (cont.)

Using the Remote Control

- Battery should normally last for about one year.
- Do not mix old and new batteries in the remote
- Do not use different types of battery
- If you do not intend to use the unit for a long time, please remove batteries from the remote to avoid accident.
- Keep batteries away from children and pets.
- Never throw batteries into a fire.
- Do not drop, or impact the remote control as it void warranty immediately.
- The remote control operate at a range of 5 to 6M effectively
- Do not expose the remote control sensor to a bright light.

OPENING REMOTE BATTERY COMPARTMENT TO REPLACE BATTERIES

1. Turn the remote control over to its back.
2. Press and slide the battery compartment to open the cover.
3. Place 2x AA batteries (provided) into the battery compartment and be sure to match the polarities (+/-) marked on battery compartment.
4. Close and shut the battery compartment.
Make sure it clicks when completely closing it.

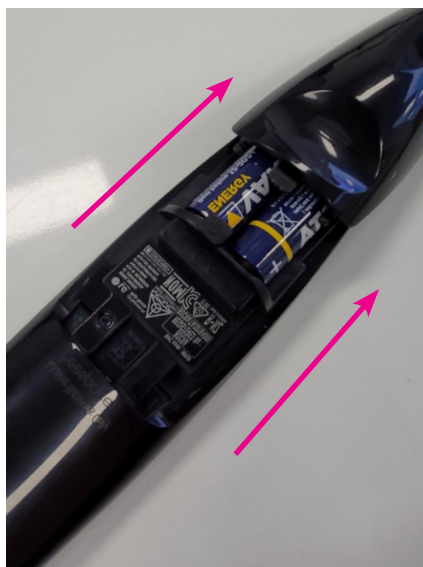


SETTINGS


Quick Settings

To Use Setting Function Quickly

Displays a set of light-weight controls quickly and simply such as **Picture Mode**, **Sound Out**, **Game Optimiser** and so on.

Press the  button on the remote control.



1. You can set **Picture Mode**.
 2. You can set **Sound Mode**.
 3. You can choose **Sound Out**.
 4. Directs to the **Game Optimiser** settings.
 5. Directs to the **OLED Care** settings.
 6. Directs to the **Network** settings.
 7. You can set more options.
- You can also long-press  button of the remote control to run the All settings directly.
 - 8. You can add/delete the quick setting items or change their order.
 - After entering each item, press and hold the **Wheel (OK)** button on the remote control to go to the corresponding menu.
 - The configurable items differ depending on model.

 
Enjoy Live TV

Making the Most of Live Menu

Using Live Menu

You can use the relevant features with ease when watching TV broadcasts.

Press the **LIST** button on the remote control.

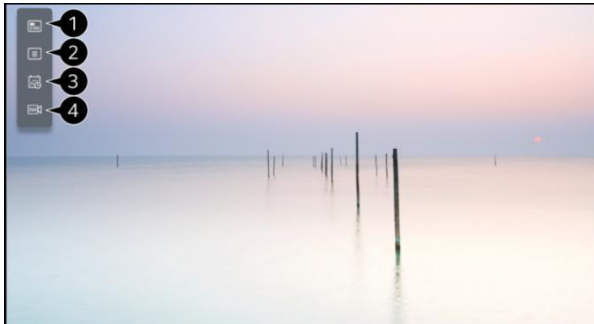

1.**Programmes** : View a list of broadcast content that is currently being broadcast.

2.**Guide** : You can view programmes and the schedule of each programmes.

To see the details, click the [Enjoy Live TV](#)→ [Viewing Guide](#) in [User Guide](#).

3.**TV Scheduler** : You can enter the time and date of a programme to schedule watching or recording it at the set time.

To see the details, click the [Enjoy Live TV](#)→ [Using TV Scheduler](#) in [User Guide](#).

4.**Recordings** : You can check the recordings stored in the storage device and play the recordings.

To see the details, click the [Enjoy Live TV](#) → [Playing Recorded TV Programs](#) in [User Guide](#).

- The menu appears only if an external storage device is connected and the recorded video can be viewed.
- The programmes displayed in Programme List are a configuration of programmes provided by the broadcast service provider. Therefore, if the broadcast service provider has changed its programme configuration without notice, the programmes displayed in Programme List may differ from the actual TV programmes.

Getting Started with webOS TV

Home Tutorial

 
Using the Home Feature of the webOS TV

You can open the Home screen by pressing the  button on your remote control.

Roll the **Wheel (OK)** button on the Magic Remote to scroll through the menu.

You can open apps and content or use various features of the smart TV.

- Standard remote control allows you to scroll through the menu with the  /  buttons.

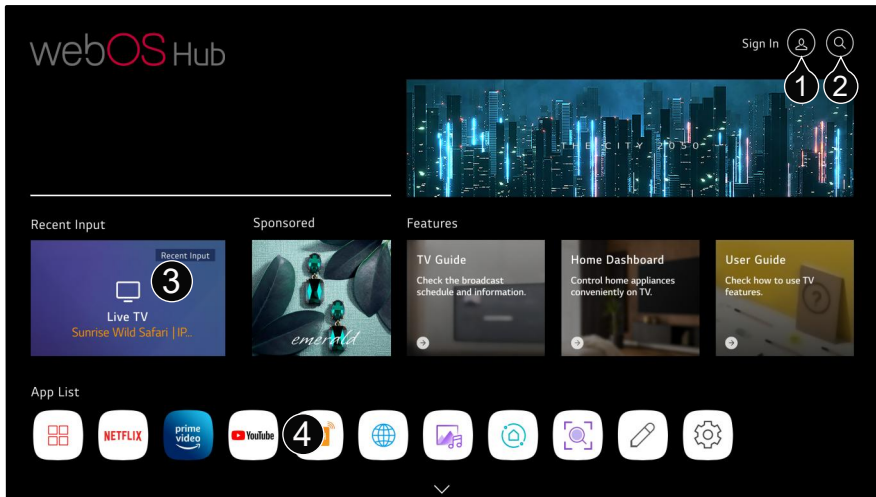

1. You can log in to your **LG Account** or view basic information about the account to which you are currently logged in.

For more information, see [Getting Started with webOS TV](#) → [Managing Your LG Account in User Guide](#).

2. Launch **Search**.

To see the details, click the **Apps and Content** → **Content Search** in [User Guide](#).

3. Returns to the most recently used TV or external input.
4. You can run, move, and delete the apps installed on your TV.


Getting Started with webOS TV

- **Apps List** is automatically shown on the screen each time the TV is turned on. To change the Home screen display, change the setting of **Home Auto Launch** in **Settings** → **General** → **System** → **Additional Settings** → **Home Settings**.
- The availability of and access to Contents and Services in device are subject to change at any time without prior notice.
- Available features vary depending on the region or service.

Manage Home

 


Manage webOS TV Home

You can change the order of the displayed apps or content lists by pressing the  button on the remote control.

Roll the **Wheel (OK)** button on the Magic Remote to scroll through the menu.

You can enter edit mode by selecting  located at the bottom of the screen.

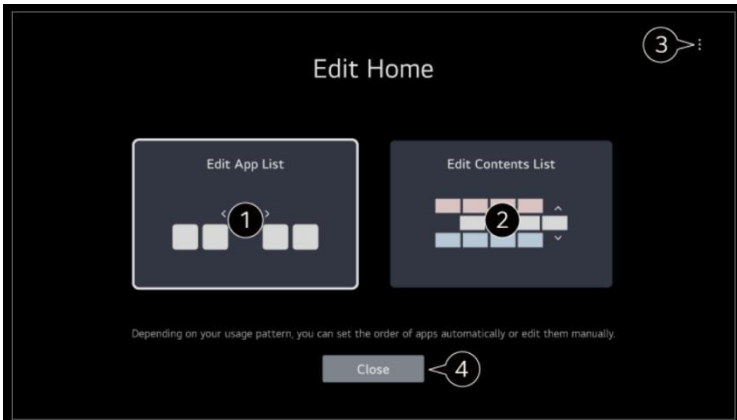

1. Enters the **Edit App List** mode.

Depending on your usage pattern, you can set the app order automatically or edit it yourself.

 
CONNECTING EXTERNAL DEVICES

Using Home Dashboard

You can select or control a device (mobile, external device, Home IoT Devices, etc.) connected to the TV.

Run **Home Dashboard** by pressing the  button on the remote control .

You can also press and hold the  button on the remote control.

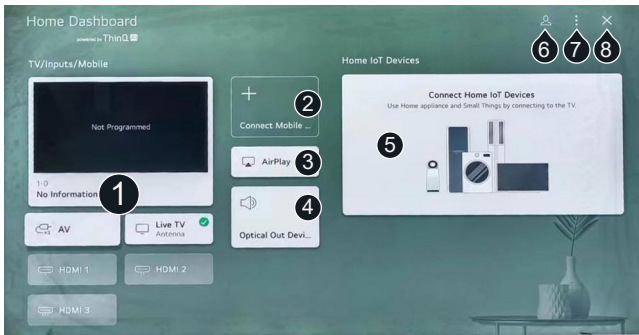

1. You can check and select the external device connected through the external input port or network.

2. Connect your mobile device to TV to share the mobile screen and enjoy the stored contents.

3. Airplay support. Clicking on AirPlay sends the phone's screen to the TV.

4. Optical output device, The output is more outstanding sound quality effect.

5. You can check and control the device connected via the Home IoT.

Please refer to **Connecting External Devices** → **Connecting Home IoT Devices** in **User Guide** for more information on the action.

6. You can log in or out with your LG ThinQ account.

7. **Edit Inputs** : You can edit the name of the connected device or apply the related settings.

Edit home IoT devices : You can hide or show connected Home IoT Devices and rearrange the list.

Notification : You can turn on or off the notification on the connected device.

Universal Control Settings : Move to the **Universal Control Settings** app.

User Guide : Move to the **User Guide** app.

Quit App : Turns off the app from running in the background.

 
8. Closes the app.

USB MEDIA




USB Media Player


Connect a USB storage device to the USB port on the TV to enjoy the content files stored on the USB storage device on your TV.

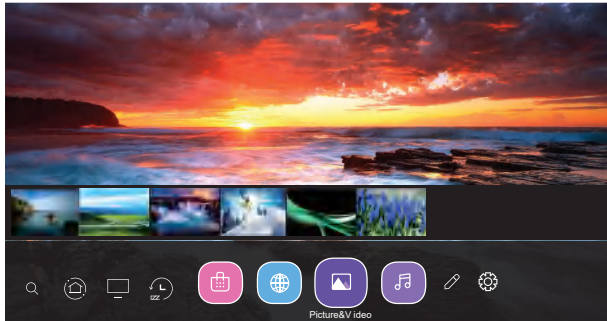Support format: jpeg, jpg, jpe, png and bmp for photo, mp3, wav, ogg, wma, flac for music, asf, avi, mp4, 3gp, mkv, ts, mpg, vob for video.





 
Using Photo Player

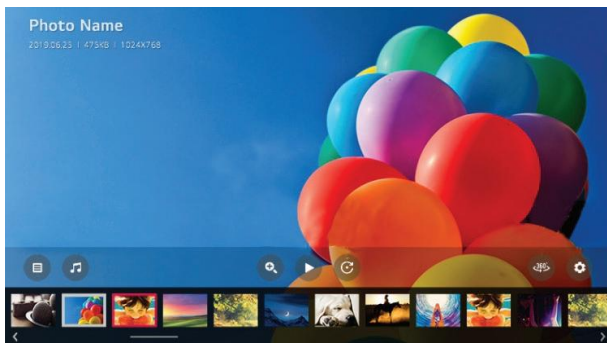
Selecting Photo & Video app and press () button to enter the menu. You can view your saved photos. Press Arrow buttons to select the file you want to watch in the file selecting menu, then press () button to start playing. When playing media, press the () button to display and operate file details.






USB MEDIA (CONT.)

 Playing Video

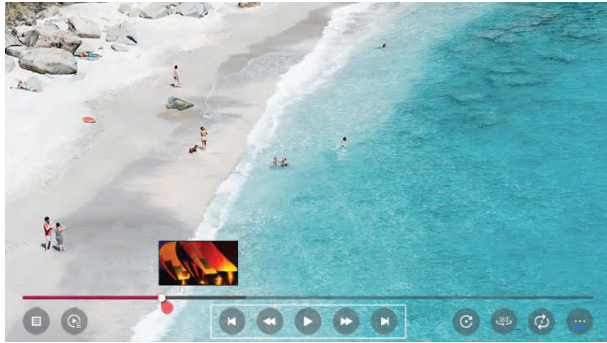Selecting Photo & Video app and press () button to enter the menu. You can view your saved videos. Press Arrow buttons to select the file you want to watch in the file selecting menu, then press () button to start playing. When playing media, press the () button to display and operate file details.



Playing Music

Selecting Music app press () button to enter the menu. You can listen your saved music. Press Arrow buttons to select the file you want to listen to music in the file selecting menu, then press () button to start playing. When playing media, press the () button to display and operate file details.




MENU

Picture Menu

Select All settings in settings menu, press () button to enter the submenu.

Press **▲/▼** buttons to select **Picture** in the submenu, it will highlight the option, then press **▶** button to enter menu.

Press **▲/▼** button to select the option and press () button to enter the submenu.



Picture Mode Settings

Select a video mode that matches the viewing environment, or specify settings for a video mode, such as contrast, color and more.

Aspect Ratio Settings

View the original screen as it is or set the screen size and aspect ratio.

Energy Saving

Energy saving modes to limit power consumption. Adjust screen brightness to reduce energy consumption.

If you use Energy Saving function, brightness of your TV will be affected.




Additional Settings




Set additional picture settings. Include Eye Comfort Mode, HDMI Ultra HD Deep Color and Instant Game Response.

 
MENU (CONT.)

Sound Menu

Select All settings in settings menu, press () button to enter the submenu.

Press  /  buttons to select **Sound** in the submenu, it will highlight the option, then press  button to enter menu.

Press  /  button to select the option and press () button to enter the submenu.

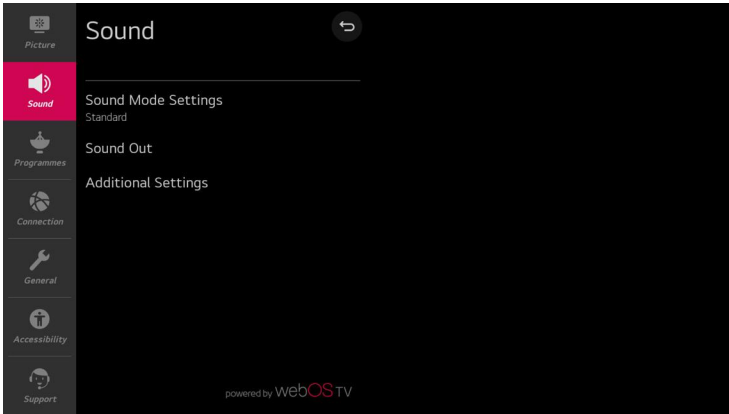

Sound Mode Settings

Select the Sound mode and set detailed Audio effects. This settings is only available for Internal TV Speaker. Include Standard, Cinema, Clear Voice III, Sports, Music and Game.

Sound Out

Select device or speaker for audio output. Include Internal TV Speaker, Bluetooth, Mobile Device, Optical, HDMI ARC, Wired Headphones, Optical + Internal TV Speaker etc. for your choice.




Additional Settings



Set additional sound-related settings. Include TV Installation Type, Volume Mode, AV Sync Adjustment, HDMI Input Audio Format, LG Sound Sync and Digital Sound Out for your choice. You can perform the operations you want according to the prompt information on the TV screen.

 
MENU (CONT.)

Programmes Menu

Select All settings in settings menu, press () button to enter the submenu.

Press  /  buttons to select **Programmes** in the submenu, it will highlight the option, then press  button to enter menu.

Press  /  button to select the option and press () button to enter the submenu.

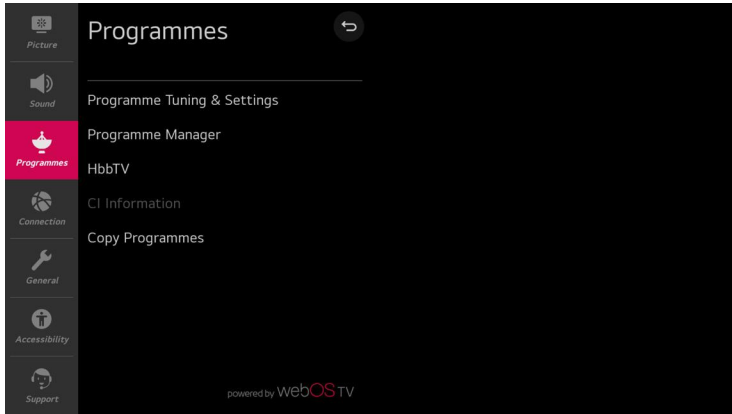

Programme Tuning & Settings

Tune and save available programmes.

You can set satellite programme options.

Programme Manager

Manage programmes stored on the TV.

HbbTV

This service provides you with more information about watching programme and enjoys related contents.

CI Information

View current Common Interface (CI) information.

Copy Programmes




Import / export your TV's programme list information from / to a connected USB device.




Note: Available options depend on the broadcast program.

 
MENU (CONT.)

Connection Menu

Select All settings in settings menu, press () button to enter the submenu.

Press  /  buttons to select **Connection** in the submenu, it will highlight the option, then press  button to enter menu.

Press  /  button to select the option and press () button to enter the submenu.

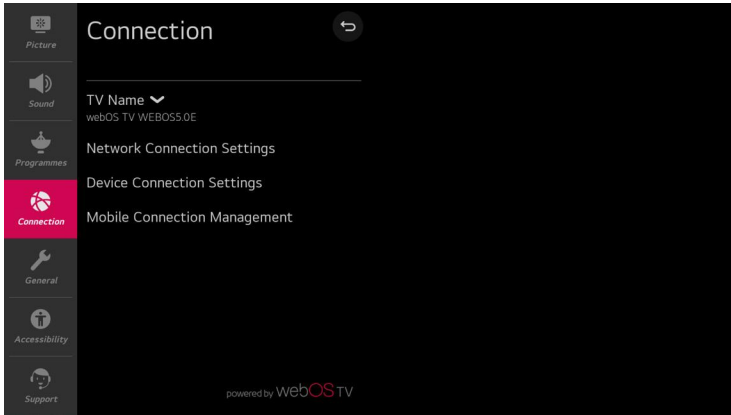

TV Name

Set the TV name.

Network Connection Settings

Set settings related to your wired / wireless network.

Device Connection Settings

Set easy connection settings with external devices. After entering the menu, you can select and set these options of Auto Device Detection, SIMPLINK (HDMI-CEC), Auto Power Sync, LG Wireless , Keyboard and Universal Control Settings.

Mobile Connection Management


Connection Management with a smartphone or PC is available. In order to connect a TV with a mobile device, connection settings and requests are required on the smartphone and PC.

 
MENU (CONT.)

General Menu

Select All settings in settings menu, press () button to enter the submenu.

Press **▲/▼** buttons to select **General** in the submenu, it will highlight the option, then press **▶** button to enter menu.

Press **▲/▼** button to select the option and press () button to enter the submenu.

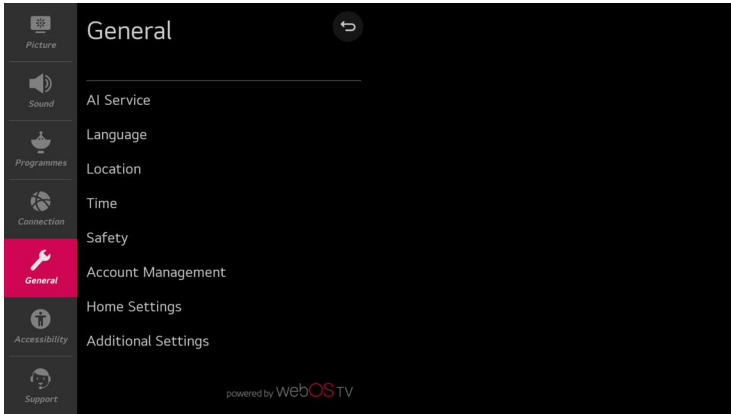

AI Service

Set detailed options for the AI functions.

Language

Select TV's language settings. You can set the Menu Language, Audio Language and Keyboard Languages.

Location

Set the region and country for broadcasts and special services.

Time

Set the current date and time. If the time you set is much different from the current time, some of the smart features may not be displayed. Include Time, date and Time Zone.

Safety

Set locking on the specified channels, apps, inputs and etc to use under parents guidance.

Account Management

Set up an account to use Services.

Home Settings

Set detailed options for the Home feature.

Additional Settings


Set the additional functions related to the TV.

 
MENU (CONT.)

Accessibility Menu

Select All settings in settings menu, press () button to enter the submenu.

Press **▲/▼** buttons to select **Accessibility** in the submenu, it will highlight the option, then press **▶** button to enter menu.

Press **▲/▼** button to select the option and press () button to enter the submenu.

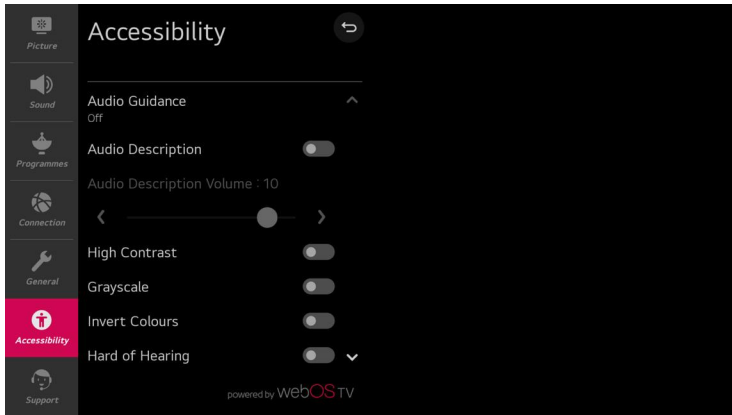

Audio Guidance

Guide menus and operations with voice for visually impaired viewers to use TV. Specify detailed voice guidance settings after turning on this feature.

Audio Description

Alerts you by sound when the TV is turned on or off. The sound may not be output when digital sound output is set to Pass Through.

High Contrast

Enhance the contrast between bright and dark areas of some menus, such as the background and text, for being easily viewed by those with low-vision.

Grayscale

Change the color of the menu on the screen to black and white tone for higher clarity.

Invert Colors

Invert and compensate certain colors in some menus to enhance the visibility of items displayed on the screen.

Hard of Hearing

Display captions for hearingimpaired viewers to use TV.

It works only when thebroadcasting programmesupports subtitles.

 
MENU (CONT.)

Support Menu

Select All settings in settings menu, press () button to enter the submenu.

Press **▲/▼** buttons to select **Support** in the submenu, it will highlight the option, then press **▶** button to enter menu.

Press **▲/▼** button to select the option and press () button to enter the submenu.

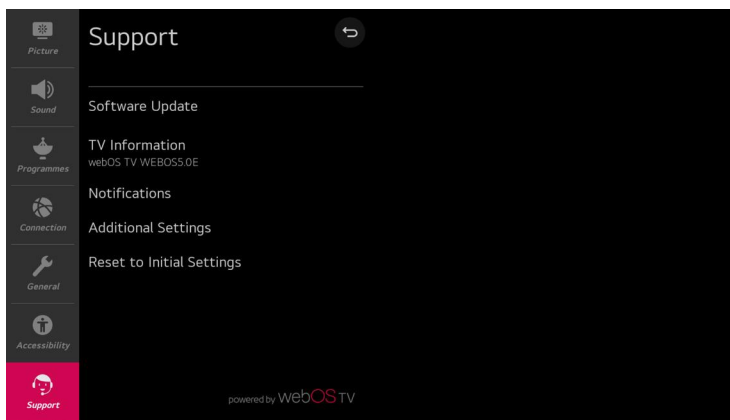

Software Update

Check for software updates and update if available.

TV Information

Check TV information.

Notifications

Check alarm messages about the user settings or TV status.

Additional Settings

Set up additional features related to customer support. Include User Agreements, Legal Notice and Open Source Software Notice These options.

Reset to Initial Settings


Revert TV to its initial settings. This will revert all options on TV to their default settings.


FAQs

GENERAL PROBLEMS WITH TV SET


Symptoms	Items to check and actions to follow
"ghost" or double image	This may be caused by obstruction to antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	<ul style="list-style-type: none">• Check if the TV's AC power cord is plugged into the outlet.• Unplug the TV, wait for 60 seconds. Then reinsert plug into the outlet and turn on the TV again.
No picture	<ul style="list-style-type: none">• Check antenna connections at the rear of the TV to see if it is properly connected to the TV.• Possible broadcast station trouble. Try another channel.• Adjust the contrast and brightness setting.• Check the Closed Captions control. Some TEXT modes could block the screen.
Good picture but no sound	<ul style="list-style-type: none">• Increase the volume level by pressing the VOL+ button on the remote control or on the TV side control panel.• Press the MUTE button on the remote control to ensure mute is off.
Good sound but poor color	Adjust the contrast, color and brightness settings
Snowy picture and noise	Check the antenna connection
Horizontal dotted line	This may be caused by electrical interference (e.g. hair dryer, near-by neon lights, etc.) Turn off the equipment.
Television not responding to remote control	<ul style="list-style-type: none">• Check whether the batteries are working. Replace if necessary.• Clean the remote control sensor lens on the TV.• You can still use the buttons on the side of your TV.
Pixels (dots) that are always dark or always lit	Your TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.

ELECTRONIC INSTRUCTION MANUAL

 Press the  on the remote control to enter

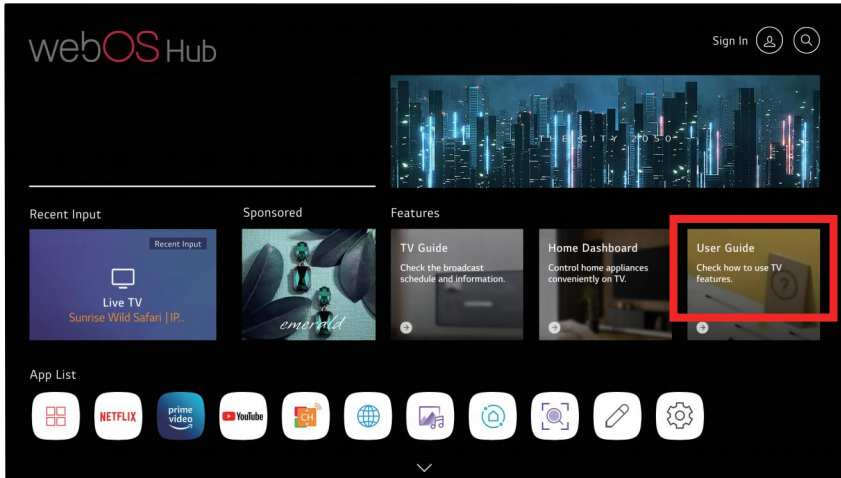

Click User Guide to enter

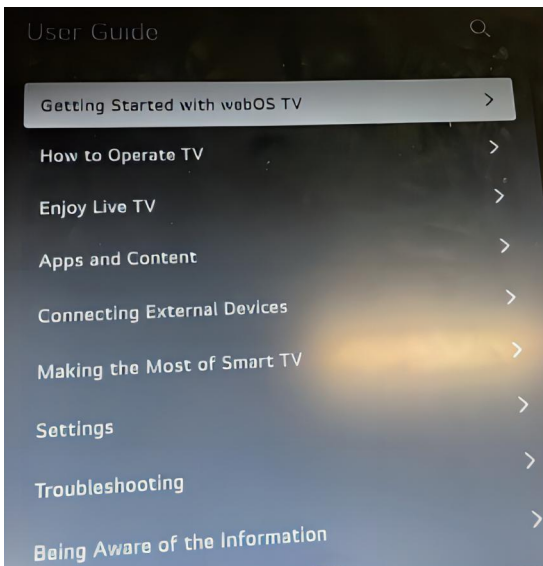 

This is the content of the OSD operating manual

STAND INSTALLATION

Stand Installation

