



UPUTSTVO ZA UPOTREBU

VENTILATOR Model: FS1725

Hvala Vam što ste kupili ovaj uređaj.

FOX ventilatori prepoznaju se po izvrsnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR

Hvala Vam što ste kupili ovaj ventilator.

Pažljivo pročitajte sva uputstva i čuvajte ih za buduću upotrebu.

Poštovani kupci,

 
Molimo Vas da pažljivo pročitate ova uputstva pre nego što povežete uređaj sa na napajanje, kako bi se izbegla oštećenja usled nepravilne upotrebe.

Obratite posebnu pažnju na informacije o bezbednosti.

Ako uređaj prenesete na treće lice, ova uputstva za upotrebu takođe moraju biti predana.

STRUKTURA

1. PREDNJI ŠTITNIK
2. PROPELERI
3. TASTERI
4. UNUTRAŠNJE CEVI
5. MATICA
6. SPOLJAŠNJE CEVI
7. OSNOVA

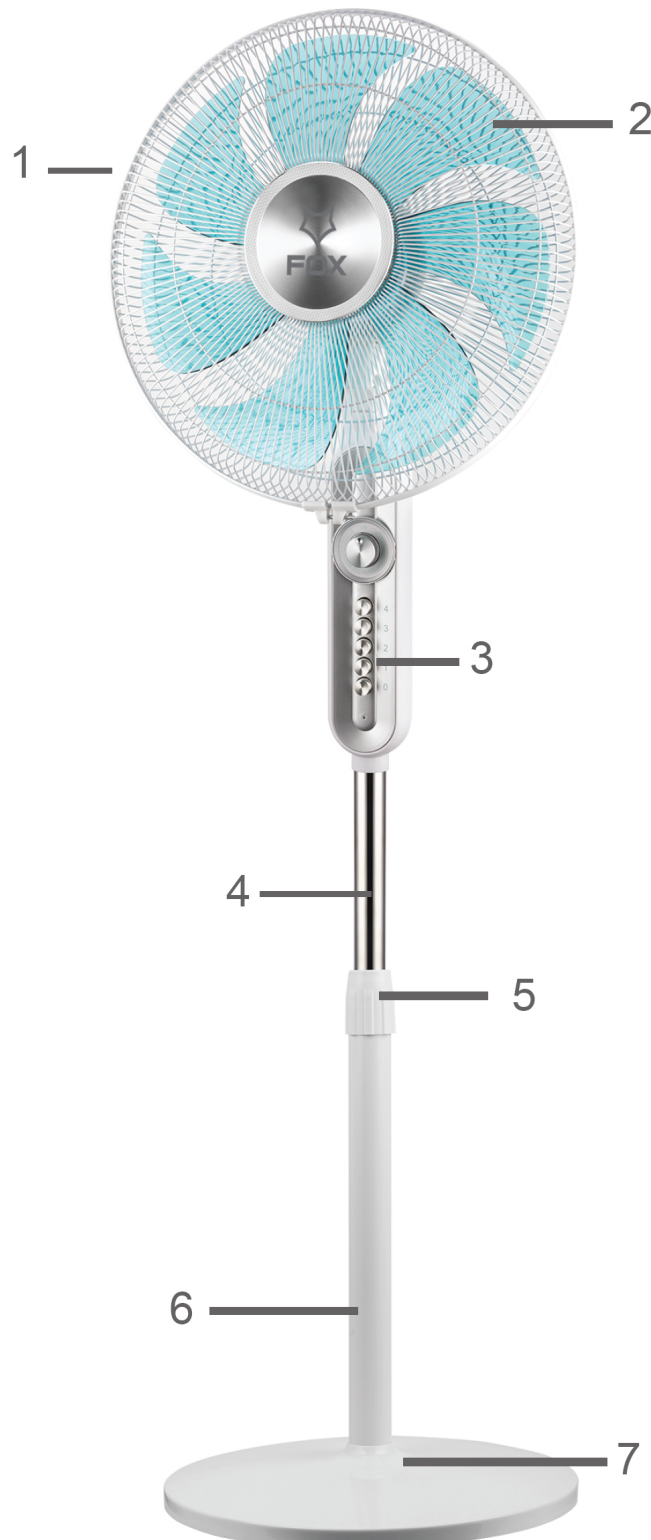

PRVA INSTALACIJA UREĐAJA

Sklapanje baze ventilatora

- Stavite cev na poprečnu bazu i pričvrstite sa četiri vijka, kao što je prikazano.



 
- Odvrnite cev, zategnite i podesite produžni stub na odgovarajuću dužinu.



- Stavite kontrolnu ploču na cev i čvrsto zategnite vijkom, kao što je prikazano.



- Postavite zadnji štitnik na osovinu motora i pričvrstite ga maticom. Gurnite podlošku na osovinu motora i pričvrstite poklopcem podloške, okrećući da ga sigurno zategnete, kao što je prikazano.

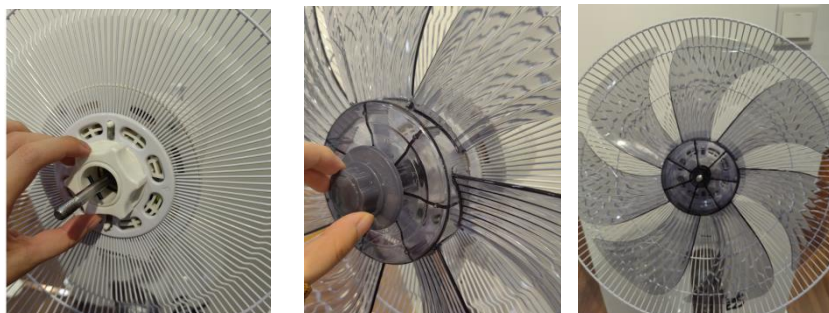

- Koristite vijak da zategnete prednji štitnik sa zadnjim štitnikom, kao što je prikazano.



KONTROLA RADA

1. Pritisnite taster za uključivanje.
2. Pritisnite taster da biste zaustavili rad.

DALJINSKI UPRAVLJAČ

VREME: sa 120 min tajmerom

BRZINA: 4 brzine

OPREZ

1. Pročitajte i sačuvajte ova uputstva za buduću upotrebu.
2. Nepravilna instalacija može dovesti do opasnosti od požara, strujnog udara ili ozbiljnih povreda osoba.
3. Utikač mora biti isključen iz utičnice pre čišćenja, servisiranja, održavanja i kada se kreće sa jedne lokacije na drugu.
4. Ventilator treba postaviti na ravnu i stabilnu površinu kada radi kako bi se izbeglo prevrtanje.
5. Ventilator ne treba postavljati na vlažno mesto ili gde je vlažnost visoka (kao što je kupatilo).
6. Ne ubacujte prste ili druge predmete kroz štitnik ventilatora.
7. Isključite iz napajanja ako nije u upotrebi.
8. Čuvati van domašaja dece.

9. Aparat nije namenjen za upotrebu od strane osoba (uključujući i decu) sa smanjenim fizičkim, senzornim ili mentalnim sposobnostima, ili nedostatkom iskustva i znanja, osim ako su dobili nadzor ili instrukcije u vezi sa upotrebom uređaja od strane osobe odgovorne za njihovu bezbednost.
10. Deca treba da budu pod nadzorom kako bi se osiguralo da se ne igraju sa uređajem.
11. Ako je kabl oštećen, treba ga zameniti serviser ili kvalifikovani tehničar.

Tehničke specifikacije

NAPAJANJE	220V-240V, 50Hz
POTROŠNJA	70W

Odlaganje elektronskog otpada



Simbol precrtanog kontejnera za otpad na točkovima koji se nalazi na proizvodima obaveštava da se korišćena električna i elektronska oprema (u daljem tekstu "otpadna oprema" ili "elektrootpad") ne sme odlagati sa komunalnim otpadom. Bacanjem e-otpada u kontejner, predstavljate pretnju za životnu sredinu. Polovna oprema može sadržavati supstance (npr. olovo, kadmijum, hrom, brom, živa, freon) koje su opasne po ljudsko zdravlje i životnu sredinu. Sortiranjem i predajom korišćene opreme licima ovlašćenim za preradu, reciklažu i odlaganje, štitite životnu sredinu od zagađenja i kontaminacije, doprinosite smanjenju korišćenja prirodnih resursa i smanjenju troškova proizvodnje nove opreme.



USER MANUAL

FAN Model: FS1725

Thank you for purchasing this device. FOX fans are recognized for their excellent technical specifications as well as their modern, functional, and elegant design.
You made the right choice. Below are the instructions for use.
They are not complicated, but you must follow them

EN

 
Thank you for your purchasing this fan. Please read all instructions carefully and keep for future use.

Dear Customer,

Please read these operating instructions through carefully before connecting your device to the mains, in order to avoid damage due to incorrect use. Please pay particular attention to the safety information. If you pass the device on to a third party, these operating instructions must also be handed over.

STRUCTURE

1. MESH
2. FAN BLADES
3. CONTROL BOARDS
4. INNER TUBE
5. PIEP TIGHTEN
6. OUTER TUBE
7. BASE

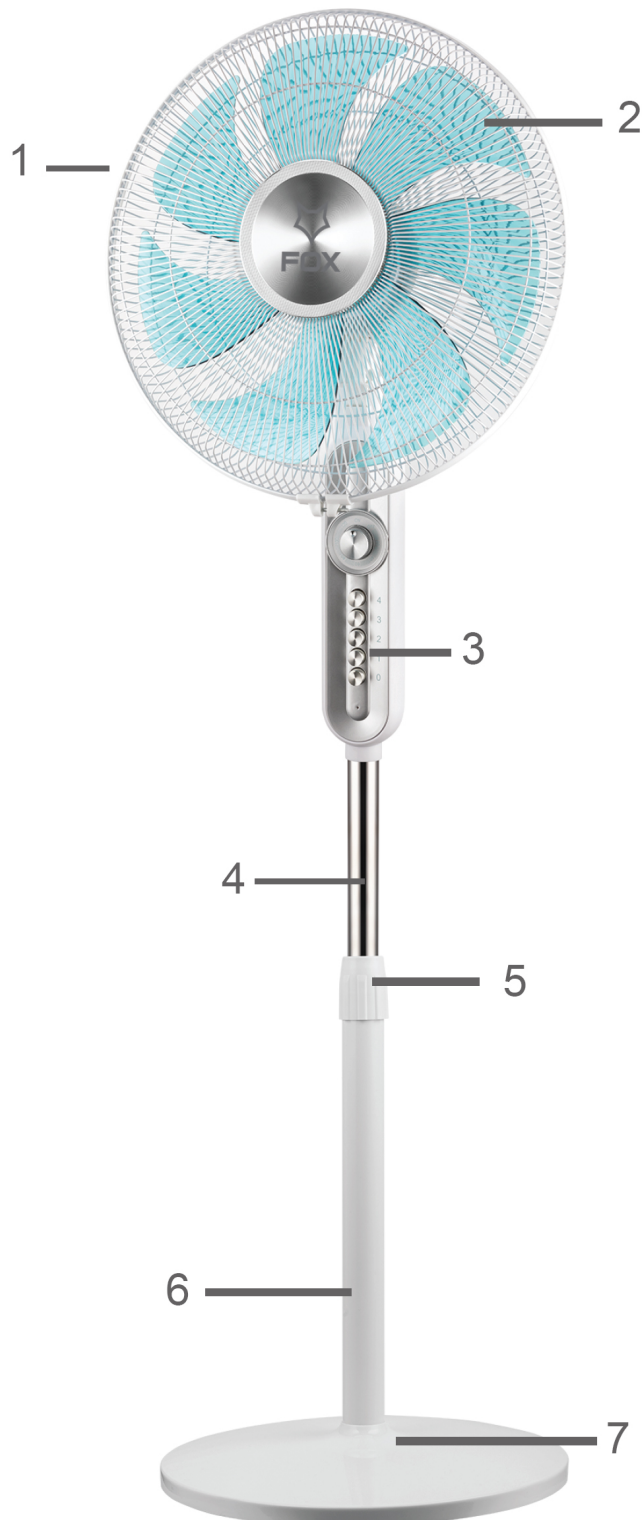

ASSEMBLY

Assembling the fan base

- Put the tube on the cross base and affix with the four screws, as illustrated.



 
- Unscrew the pipe tighten and adjust the extension pole to the appropriate length.



- Put the control board on the tube and tighten securely with screw, as illustrated



- Place the rear guard on the motor shaft and secure it with the nut. Slide the blade onto the motor shaft and fasten it with the blade cap, turning it to tighten it securely, as illustrated.

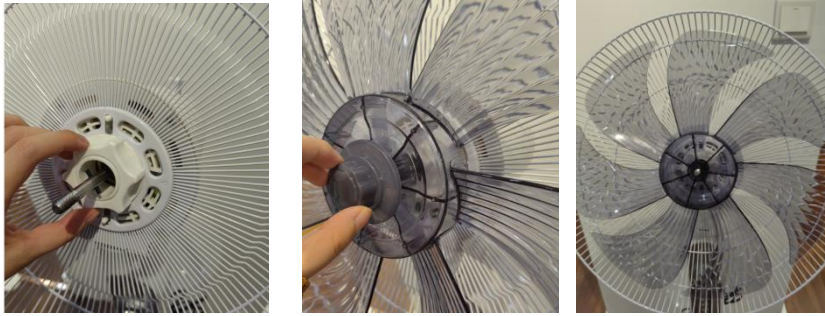

- Use the screw to tighten the front guard with the rear guard, as illustrated.



OSCILLATION CONTROL

3. Push the oscillation knob to oscillate.
4. Pull the oscillation knob to stop.

REMOTE CONTROL

TIME: with 120 min
timer SPEED: 4 speeds

CAUTION

12. Read and retain these instructions for future use.
13. Improper installation may result in the risk of fire, electric shock, or serious injury to persons.
14. Power plug must be removed from power socket before cleaning, servicing, maintenance and when moving from one location to another.
15. The fan should be placed on a flat and stable surface when operating to avoid overturning.
16. The fan should not be placed in a damp place or where humidity is high (such as in a bathroom).
17. Do not insert fingers or other objects through the fan guard.
18. Unplug from mains if not in use.
19. This is not a toy. Keep out of reach of children.
20. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

21. Children should be supervised to ensure that they do not play with the appliance.
22. If the cord is damaged, it should be replaced by service agent or qualified technician.

Technical Specification

VOLTAGE	220V-240V , 50Hz
POWER	55W

Disposal of electronic waste



The symbol of the crossed-out wheeled waste container placed on the products informs that used electrical and electronic equipment (hereinafter also "waste equipment" or "electro-waste") may not be disposed of with municipal waste. By throwing e-waste into the container, you pose a threat to the environment. Used equipment may contain substances (e.g. lead, cadmium, chromium, bromine, mercury, freon) that are dangerous to human health and life and to the environment. By sorting and handing over used equipment for processing, recovery, recycling and disposal, you protect the environment against pollution and contamination, you contribute to reducing the use of natural resources and lowering the production costs of new equipment.



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati. Za više informacija o FOX uređajima posjetite našu internet stranicu.

www.foxelectronics.rs