

包装通知单

送至部门: 彩电工程部 生产计划部 销售中心
采购中心 彩电物料部 彩电生产部 质量中心

图纸编号
客户名称
订 单 号
客户牌子 FOX
CPU

主题：说明书

说明： A5规格，塞英合订本。
材质： 封面封底80g双胶纸彩色印刷，内页70g双胶纸单色印刷。
此页无需印刷

制图： 美工审核： 美工批准：
结构审核： 电子审核： DQA审核：



UPUTSTVO ZA UPOTREBU

LED TELEVIZORI **Model: 40AOS480G**

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori su poznati po svojim odličnim performansama, kao po modernom, funkcionalnom i elegantnom dizajnu. Pored toga, konstantno unapređujemo korisničku podršku, imamo veoma efikasnu i široku mrežu usluga, zbog kojih se naši ponosni kupci osećaju bezbedno.

Napravili ste pravi izbor.

Sada je vreme za uputstva, nisu komplikovana, ali ih se morate pridržavati.

SR

Informacije o proizvodu

Delegirana uredba EU komisije 2019/2013

 
Informacije		Vrednost	Jedinica
1. Ime ili zaštitni znak isporučioaca:		FOX	
Naziv i adresa isporučioaca::		Vimport doo, Batajnički drum 23, Beograd	
2. Identifikaciona oznaka modela:		40AOS480G	
3. Klasa energetske efikasnosti za Standardni dinamički opseg (SDR)		E	
4. Snaga u uključenom stanju za Standardni dinamički opseg (SDR)		36	W
5.Klasa energetske efikasnosti za Veliki dinamički opseg (HDR)			
6. Snaga u uključenom stanju za Visok dinamički opseg (HDR)			W
7. Snaga u isključenom stanju		0.0	W
8. Snaga u stanju pripravnosti		0.4	W
9. Snaga u umrežanom stanju pripravnosti		2.0	W
10. Kategorija elektronskog ekrana		Televizor	
11. Odnos veličina		16 : 9	
12. Rezolucija ekrana (u pikselima)		1920 x 1080	piksela
13. Dijagonala ekrana		40.0	inča
14. Dijagonala ekrana		101	cm
15. Vidljiva površina ekrana		42.6	dm²
16. Korišćena tehnologija panela		LCD sa LED	
17. Dostupna Automatska regulacija sjajnosti (ABC)		Ne	
18. Dostupan senzor za prepoznavanje glasa		Ne	
19. Dostupan senzor prisutnosti u prostoriji		Ne	
20. Frekvencija osvežavanja slike		60	Hz
21. Minimalna garantovana raspoloživost ažuriranja softvera i integrisanog softvera uređaja od datuma stavljanja na tržište (do):		3	(u godinama)
22. Minimalna garantovana raspoloživost rezervnih delova (do):		3	(u godinama)
23. Minimalno trajanje opšte garancije koju daje isporučilac (do):		3	(u godinama)
24. Tip napajanja:		Unutrašnje	
25.Spoljašnje napajanje (ako je priloženo uz proizvod, nije standardizovano)	Standardno ime		
	Ulazni napon		V
	Izlazni napon		V
26.Spoljašnje standardizovano napajanje (ako nije priloženo uz proizvod, drugo odgovarajuće napajanje)	Standardno ime		
	Potreban izlazni napon		V
	Potrebna minimalna jačina struje		A
	Potrebna frekvencija struje		Hz

Tehničke karakteristike: napajanje 100-240Vac, 50/60Hz
snaga potrošnje: 65W

VAŽNA BEZBEDNOSNA UPUTSTVA

UPOZORENJE

- DA BISTE SPREČILI OPASNOST OD POŽARA ILI ELEKTRIČNOG ŠOKA, NEMOJTE KORISTITI PRODUŽNI KABAL.
- DA BISTE SPREČILI OPASNOST OD POŽARA ILI ELEKTRIČNOG ŠOKA, NE IZLAŽITE OVAJ UREĐAJ KIŠI ILI VLAGI.

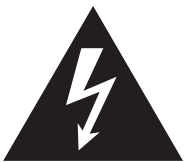 Ovaj bljesak munje sa simbolom strelice u jednakokraničnom trouglu upozorava korisnike na prisustvo neizolovanog opasnog napona unutar kućišta proizvoda koji može biti dovoljne veličine da predstavlja rizik od strujnog udara.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN Upozorenje: Da biste smanjili rizik od strujnog udara, nemojte skidati poklopac (ili poledinu). Unutra nema delova koje korisnik može servisirati. Za servisiranje se obratite kvalifikovanom servisnom osoblju.	 Znak uzvika unutar jednakokraničnog trougla upozorava korisnike na prisustvo važnih uputstava za rad i održavanje (servisiranje) u literaturi koja prati uređaj.
--	---	---

Ovaj uređaj ne bi trebalo da bude izložen vodi i nijedan predmet napunjen tečnošću, kao što je vaza, ne bi treba da se postavlja na uređaj.

OPREZ

- Opasnost od eksplozije ako se baterije nepravilno zamene.
- Zamenite samo ekvivalentnom vrstom baterije.
- Ne izlažite bateriju direktnoj sunčevoj svetlosti ili bilo kom drugom izvoru toplote.
- Osigurajte pravilno odlaganje istrošenih baterija.
- Kada se utikač za mrežu uređaja koristi kao uređaj za uključivanje, uređaj za isključivanje treba da ostane u funkciji.
- Da biste smanjili rizik od strujnog udara, nemojte obavljati nikakve druge servise osim onoga što je navedeno u uputstvu za upotrebu.
- Unutar televizora nema delova koje korisnik može da servisira; ne otvarajte kućište televizora.

VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnu lokaciju, može biti potencijalno opasan zbog pada. Mnoge povrede, posebno kod dece, mogu se izbeći preduzimanjem jednostavnih mera predostrožnosti kao što su:

- Korišćenje ormara ili postolja koje preporučuje proizvođač televizora.
- Koristite samo nameštaj koji može bezbedno da izdrži televizor.
- Uverite se da televizor ne visi preko ivice nosećeg nameštaja.
- Ne postavljajte televizor na visoki nameštaj (na primer, ormariće ili police za knjige) bez pričvršćivanja i nameštaja i televizora na odgovarajući oslonac.
- Ne postavljati televizore na tkaninu ili druge materijale postavljene između televizora i pratećeg nameštaja.
- Edukacija dece o opasnostima od penjanja na nameštaj da bi došla do televizora ili njegovih komandi.



Sigurna instalacija

 
Koristite kaiš za fiksiranje televizora da biste sprečili televizor da se okrene napred.



1. **Pročitajte uputstva** - Sva bezbednosna uputstva i uputstva za upotrebu treba pročitati pre nego što počnete da koristite uređaj.
2. **Sačuvajte uputstva** - Bezbednosna uputstva i uputstva za upotrebu treba sačuvati za buduću upotrebu.
3. **Obratite pažnju na upozorenja** - Treba se pridržavati svih upozorenja na uređaju i u uputstvu za upotrebu.
4. **Sledite uputstva** - Sva uputstva za upotrebu treba da se poštuju.




5. **Voda i vlaga** - Uređaj ne treba koristiti u blizini vode
6. **Kolica i postolja** - Aparat treba da se koristi samo sa kolicima ili postoljem koje preporučuje proizvođač
7. **Montaža na zid ili plafon** - Uređaj treba da se montira na zid ili plafon samo prema preporuci proizvođača
8. **Ventilacija** - Uređaj treba da bude dobro postavljen tako da njegova lokacija ili položaj ne ometaju njegovu pravilnu ventilaciju.
9. **Toplota** - Ovaj uređaj treba postaviti dalje od izvora toplote kao što su radijatori, grejni registri i peći.
10. **Izvori napajanja** - Aparat treba da bude priključen na napajanje samo onako kako je opisano u uputstvu za upotrebu ili kako je označeno na uređaju.
11. **Uzemljenje ili polarizacija** - treba preduzeti mere predostrožnosti.
12. **Zaštita kabla za napajanje** - Kabl za napajanje treba da bude postavljen tako da se po njemu ne može hodati.
13. **Čišćenje** - Aparat treba čistiti samo prema preporuci proizvođača
14. **Električni vod** - Spoljna antena treba da se nalazi dalje od dalekovoda.
15. **Uzemljenje spoljne antene** - Ako je spoljna antena povezana na prijemnik; antenski sistem mora biti uzemljen kako bi se zaštitio od napona i nakupljenog statičkog naelektrisanja.
16. **Periodi neupotrebe** - Kabl za napajanje uređaja treba da se izvuče iz utičnice kada se ne koristi duži vremenski period.
17. **Ulazak predmeta i tečnosti** - Treba paziti da predmeti ne padnu i da se tečnosti ne prosu u kućište kroz otvore.
18. **Uslovi koji zahtevaju servis** - Aparat treba da servisira kvalifikovano servisno osoblje kada:
 - Kabl za napajanje ili utikač su oštećeni.
 - Predmeti su pali ili je tečnost prosuta u uređaj.
 - Aparat je bio izložen kiši.
 - Čini se da uređaj ne radi normalno ili pokazuje značajnu promenu u performansama.
19. Ventilaciju ne treba ometati pokrivanjem ventilacionog otvora predmetima, kao što su novine, stolnjaci, zavese itd.
Na aparat ne bi trebalo da se stavljaju izvori otvorenog plamena, kao što su upaljene sveće.
Aparat treba da bude priključen na utičnicu sa zaštitnim uzemljenjem.

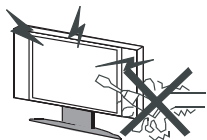


Upozorenje

 Za rad ovog proizvoda koriste se visoki naponi.
Ne skidajte zadnji poklopac kućišta. Za servisiranje se obratite kvalifikovanom servisnom osoblju.

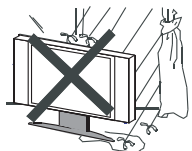


Upozorenje

 Da biste sprečili opasnost od požara ili električnog udara, ne izlažite uređaj kiši i vlazi.

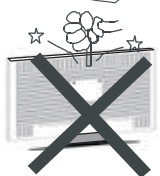

Upozorenje

 Nemojte ispuštati ili gurati predmete u otvore televizora.

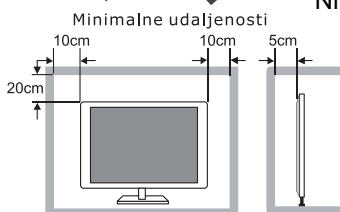

Nikada ne prosipajte tečnost po televizijskom prijemniku.

Oprez

Ako televizor treba da se ugradi u pregradu ili na sličan način da bude zatvoren, minimalna rastojanja se moraju održavati.

 
Nagomilana toplota može smanjiti životni vek vašeg televizora.



Oprez

Nikada nemojte stajati, oslanjati se, naglo gurati proizvod ili njegovo postolje.


Posebnu pažnju treba obratiti na decu.

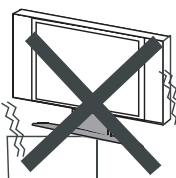

Oprez


Ne postavljajte glavnu jedinicu na nestabilno postolje za kolica, policu ili sto.

 Ako padne, može doći do ozbiljnih povreda pojedinca i oštećenja televizora.

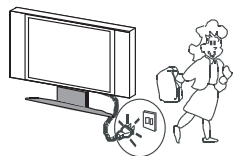

Oprez

 Kada se proizvod ne koristi duži vremenski period, preporučljivo je da isključite kabl za napajanje naizmeničnom strujom iz utičnice.

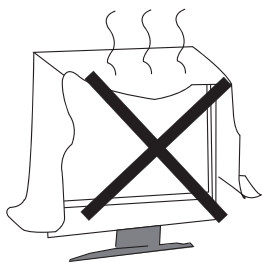

Oprez

Izbegavajte izlaganje uređaja direktnoj sunčevoj svetlosti i drugim izvorima toplote. Ne postavljajte televizijski prijemnik direktno na druge proizvode koji emituju toplotu. Npr. Video kasetofoni, audio pojačala. Ne blokirajte otvore za ventilaciju na zadnjem poklopcu. Ventilacija je neophodna da bi se sprečio električni kvar.

Nemojte postavljati kabal za napajanje ispod uređaja.

 


Oprez



Ekran koji se koristi u ovom proizvodu je napravljen od stakla. Može se slomiti kada se proizvod ispusti ili primeni silom. Pojedinci treba da budu oprezni kada rade sa slomljenim staklom ako se ekran razbije.





- Postavite TV na čvrstu i ravnu površinu, ostavljajući prostor od najmanje 10 cm oko seta i 30 cm od vrha seta do zida ili ormarića. Uverite se da je televizor postavljen blizu zida kako biste izbegli da padne.

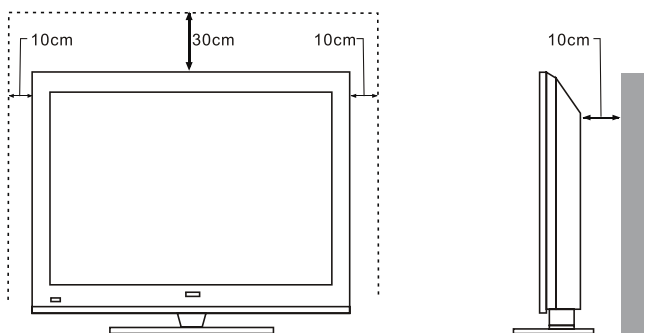

  - Kada okrećete televizor, ne držite ga za gornju stranu, već za donju stranu.

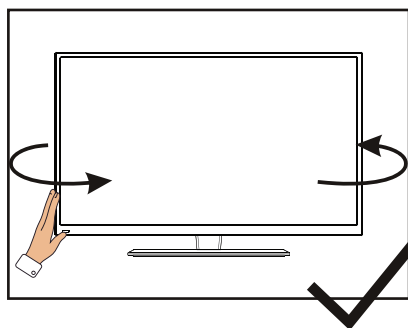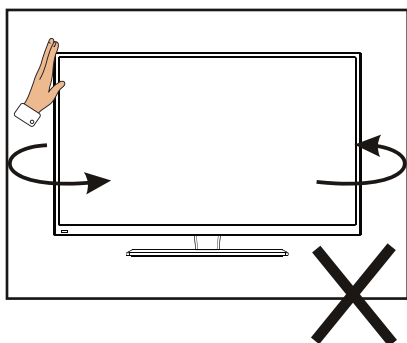

  - Kada podižete televizor, nemojte koristiti samo jednu ruku, televizor treba da podignete sa dve ruke.

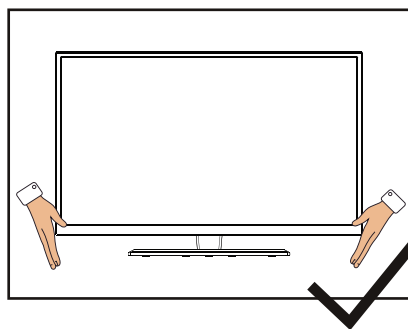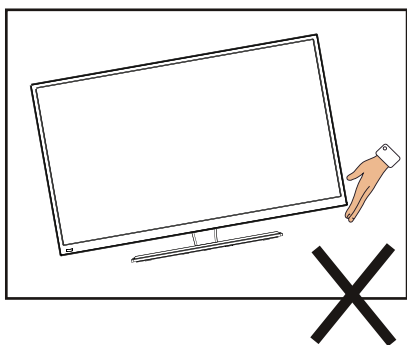

SADRŽAJ


1. Priključivanje i priprema TV-a	2
1.1 Pribor	2
1.2 Instalacija postolja	2
1.3 Tasteri i interfejsi	3
1.4 Daljinski upravljač	4
1.5 Instalacija baterija	5
2. Osnovna operacija	5
2.1 Uključivanje/isključivanje napajanja (opciono)	5
2.2 Podešavanje režima pripravnosti	5
2.3 Prva instalacija	6
2.4 Podešavanja zvuka	10
2.5 Deljenje ekrana	12
2.6 TV podešavanje	15
2.7 Zajednički	19
3. Tehnička specifikacija	20
4. Podržani režimi signala	21
5. Jednostavno rešavanje problema	22

1 . Priključivanje i priprema TV-a

1.1 Pribor


- * Uputstvo za upotrebu
- * Daljinski upravljač
- * Baterija (7. 40AAA 1.5V)
- * Komplet za montiranje na zid (unapred montiran) (opciono)

 1.2 Instalacija postolja

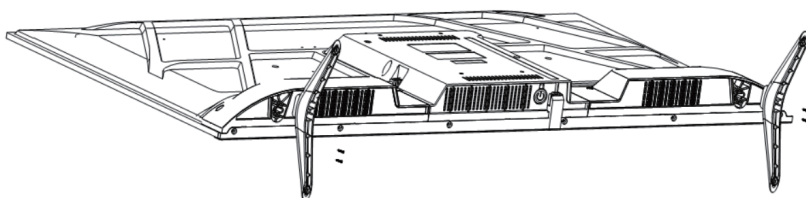


- ① Postavite televizor tako da prednja ploča bude okrenuta nadole na mekanu tkaninu ili meke podloge na stolu.
- ② Postavite postolje u donja ležišta televizora.
- ③ Postavite postolje u donja ležišta televizora.

 1.3 Tasteri i interfejsi

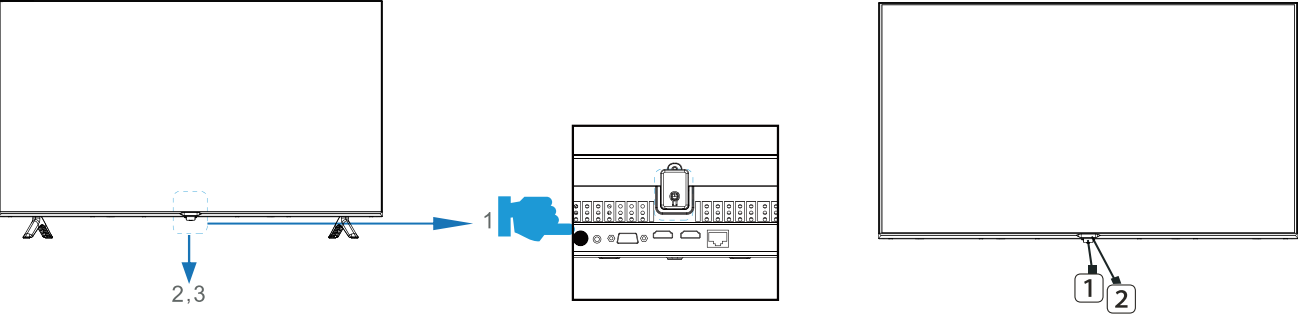


ITEM	NAZIV TESTERA	OPIS FUNKCIJE
1		Pritisnite da biste uključili TV u režimu pripravnosti ili ga isključili.
		Pritisnite da biste prikazali glavni meni na ekranu.
		Pritisnite za izbor ulaza / Pritisnite za potvrdu.
		Pritisnite za skeniranje kroz kanale /Pritisnite za kretanje nagore ili nadole.
		Pritisnite da povećate ili smanjite nivo zvuka/Pritisnite da se pomerite levo ili desno.
2	POWER INDICATOR	Indikator pokazuje crveno u režimu pripravnosti i gasi se kada se LED uključi.
3	DALJINSKI SENZOR	Infracrveni senzor za daljinski upravljač.
4	POWERPLUG INPUT	Uvek prvo izvucite kabl za naizmjeničnu struju kada instalirate/ postolje.

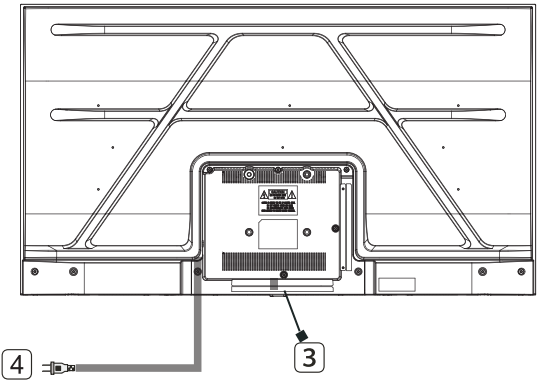 

HDMI1 (ARC)	HDMI2	HDMI3	USB2 USB1	CI EARPHONE
RJ45	COAXIAL	VIDEO	AV IN L R	LNB IN (S2)
				RF IN (C/T2)

1.4 Daljinski upravljač

 *Daljinski upravljač se ne može koristiti osim ako nije u dometu pretraživanja . Pre nego što upotrebite daljinski upravljač, uverite se da nema prepreka između daljinskog upravljača i prijemnika.

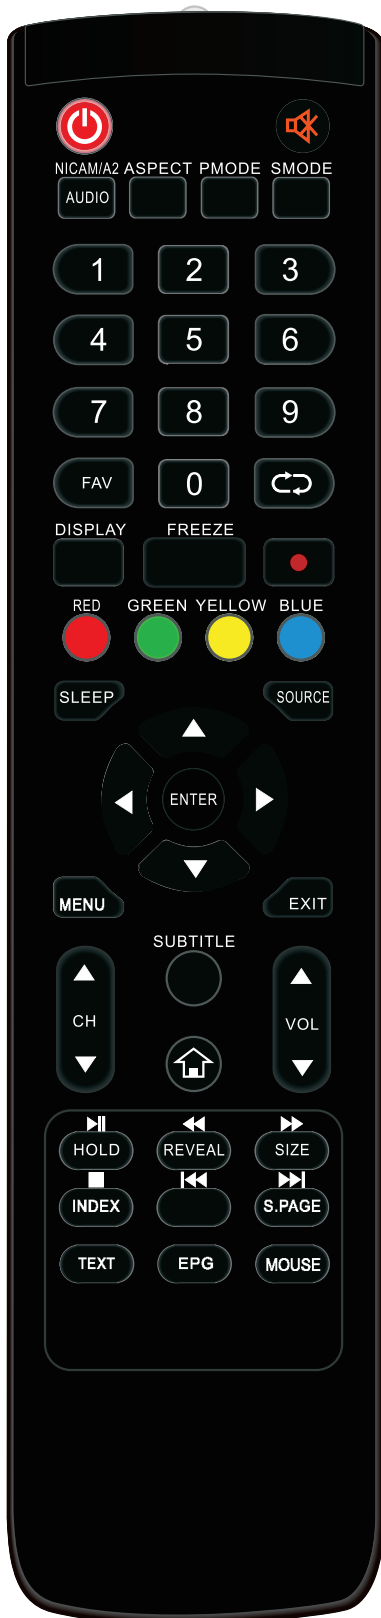

 : Pritisnite ovo dugme da biste uključili TV kada ste u režimu pripravnosti.

 : Pritisnite ovo dugme da biste isključili ili vratili zvuk.

NJCAM/A2: U TV stanju, pritisnite ovaj taster da izaberete stereo režim.

AUDIO: Pritisnite da biste izabrali DTV audio.

(Koristi se samo za modele sa DTV funkcijom)

ASPEKT: Pritisnite da biste izabrali drugu veličinu slike.

PMODE: Izaberite režim slike.

SMODE: Izaberite režim zvuka.

0-9: Izaberite i prebacite se na kanal pomoću 0-9.

FAV: Podesite omiljeni kanal.

 : Prebacivanje sa trenutnog na prethodni kanal napred i nazad.

DISPLAY: Prikaži TV informacije.

FREEZE: Pritisnite ovaj taster da zadržite sliku.

 : Početak snimanja.

(USB disk će biti formatiran prilikom snimanja, nemojte čuvajte važne datoteke na U disku)

RED. GREEN. YELLOW. BLUE: Tasteri različitih boja.

SLEEP: Podesite tajmer za spavanje.

SOURCE: Pritisnite da promenite izvor signala.

ENTER: Unesite izabranu opciju ili izvršite izabranu operaciju.

MENU: Pritisnite ovo dugme da biste ušli u glavni meni za različita opciona podešavanja.

EXIT: Izadite iz OSD (prikaz na ekranu).

CH▲/CH▼: Promenite kanal gore i dole.

VOL▲/VOL▼: Podesite jačinu zvuka.

SUBTITLE: Uključite ili isključite titl.

 : Prebacite na TV ili SMART.

TEXT: Pritisnite da biste ušli u režim teleteksta.

(Koristi se samo za evropski region)

HOLD: Zamrznite pasus sa više stranica na ekranu u režimu teleteksta.

REVEAL: Pritisnite ovo dugme da biste otkrili skrivene informacije na stranici Teleteksta. Pritisnite ponovo da sakrijete informacije.

SIZE: Displai top, na dnu ili na celoj strani za lako čitanje u režimu teleteksta.

INDEX: Pritisnite ovo dugme da biste otišli na stranicu indeksa.

S.PAGE: Izvršite funkcije SUBPAGE u tekstu dok ulazite u režim prikaza teksta.

EPG: Uključite elektronski programski vodič. (Koristi se samo za modele sa DTV funkcijom)

 : Pritisnite da biste započeli reprodukciju diska ili medija, ili da biste pauzirali reprodukciju, (koristi se samo za modele sa MEDIA)

 : Pritisnite za premotavanje unazad. (Koristi se samo za modele sa MEDIA)

 : Pritisnite za premotavanje unapred. (Koristi se samo za modele sa MEDIA)

 
 
 
 : Pređi na prethodno poglavlje. (Koristi se samo za modele sa MEDIA)

 : Zaustavite reprodukciju diska (koristi se samo za modele sa MEDIA)

 : Pređi na sledeće poglavlje. (Koristi se samo za modele sa MEDIA)

MOUSE: Pritisnite da uključite/isključite miš.

1.5 Instalacija baterija



- ① Otvorite zadnji poklopac daljinskog upravljača.
- ② Instalirajte dve 7#(AAA)1,5V baterije. Pazite na ispravan polaritet baterija.
- ③ Zatvorite zadnji poklopac.

Izvadite baterije iz daljinskog upravljača na duže vreme bez upotrebe.

Ako daljinski upravljač ne radi ispravno, izvršite sledeće provere.

- Proverite da li je TV uključen.
- Proverite da li je polaritet baterija ispravan.
- Proverite da li su baterije ispražnjene.
- Proverite da li je napajanje normalno ili da li je kabl za napajanje ispravno povezan.
- Proverite da nema posebne fluorescentne ili neonske svetlosti u blizini.

2. Osnovna operacija

2.1 Uključivanje/isključivanje napajanja (opciono)

- Povežite kabl za napajanje sa AC ulazom. Uključite kabl za napajanje u odgovarajuću utičnicu.
- Pritisnite **Prekidač za napajanje** da biste uključili TV.
- Ponovo pritisnite **Prekidač za napajanje** da isključite TV.

 
 
Napomena: Nakon što isključite TV, molimo Vas, nemojte odmah ponovo pritisnuti prekidač za napajanje. Treba još jedan minut da biste ponovo uključili prekidač za napajanje.

2.2 Podešavanje režima pripravnosti

- Pritisnite dugme (⏻) da biste uključili TV.
- Pritisnite dugme (⏻) ponovo da vratite ekran u režim pripravnosti. Indikator napajanja postaje crven.
- Uverite se da ne postavljate TV u režim pripravnosti na duži vremenski period.



2.3 Prva instalacija

Nakon prve instalacije, pritisnite taster <OK> da uđete na početnu stranicu. Pritisnite ▼/▲ da izaberete svoj jezik. Pritisnite taster <OK> da potvrdite i uđete u sledeći korak, a zatim pritisnite ► da direktno uđete u sledeći korak.

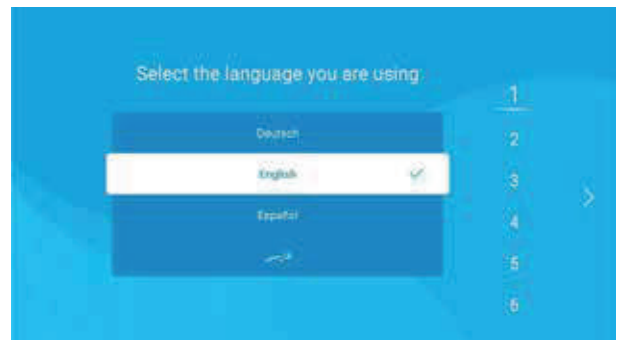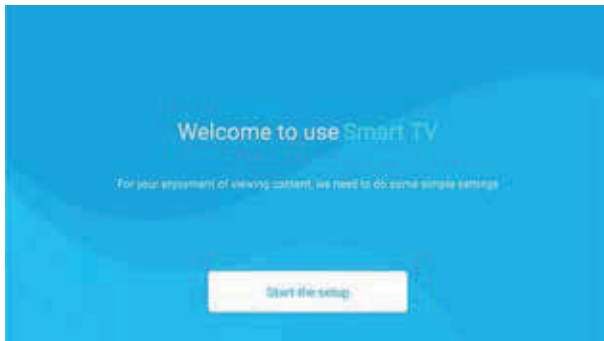

Pritisnite ▼/▲ da odaberete zemlju. Pritisnite taster <OK> da potvrdite, uđete u sledeći korak, pritisnite ◀ da se vratite na prethodni korak i pritisnite ► da direktno uđete u sledeći korak.

 
 
Pritisnite ▼/▲ da izaberete vremensku zonu koju koristite. Pritisnite taster <OK> da potvrdite, uđete u sledeći korak, pritisnite ◀ da se vratite na prethodni korak i pritisnite ► da direktno uđete u sledeći korak.

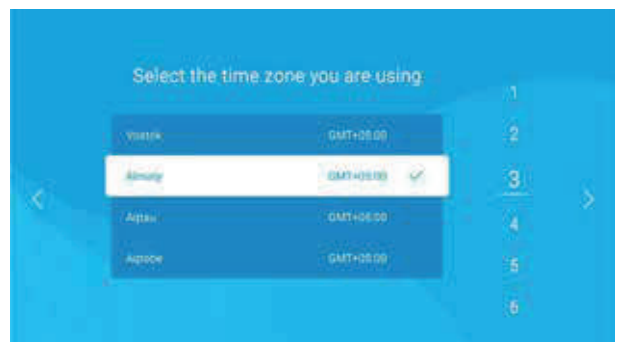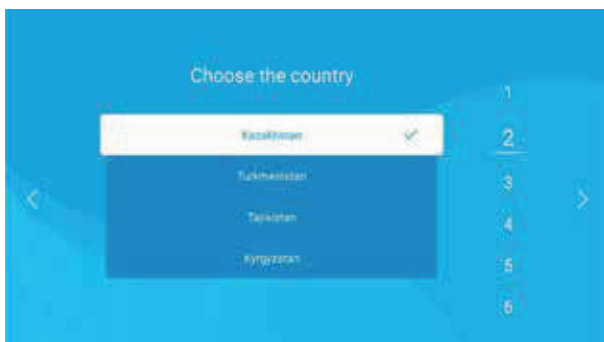

Pritisnite ▼/▲ da izaberete StoreMode. Pritisnite taster <OK> da potvrdite, uđete u sledeći korak, pritisnite ◀ da se vratite na prethodni korak i pritisnite ► da direktno uđete u sledeći korak.


Podesite svoju TV mrežu:

  1. Žična veza: pritisnite ◀ da biste se vratili na prethodni korak i pritisnite ► da biste prešli direktno na sledeći korak.

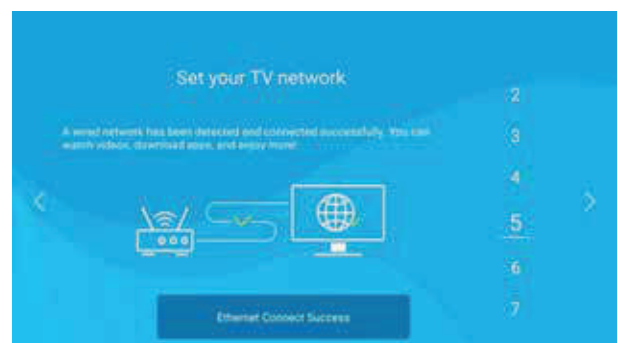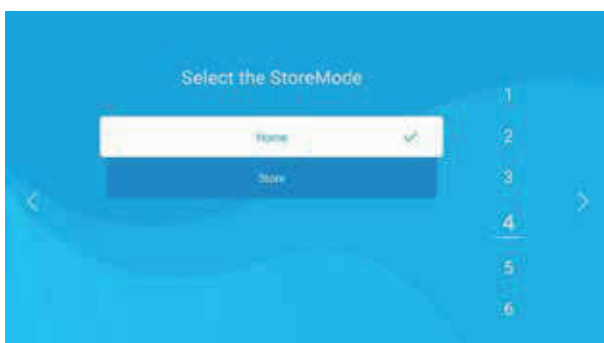



2. WI FI bežična veza: pritisnite ▼/▲ da izaberete WI FI, pritisnite <OK> da biste se povezali, pritisnite ◀ da se vratite na prethodni korak i pritisnite ▶ da direktno uđete u sledeći korak.

 Skenirajte QR kod da biste preuzeli aplikaciju za povezivanje TV-a. Pritisnite ◀ da se vratite na prethodni korak, a pritisnite ▶ da pređete direktno na sledeći korak.

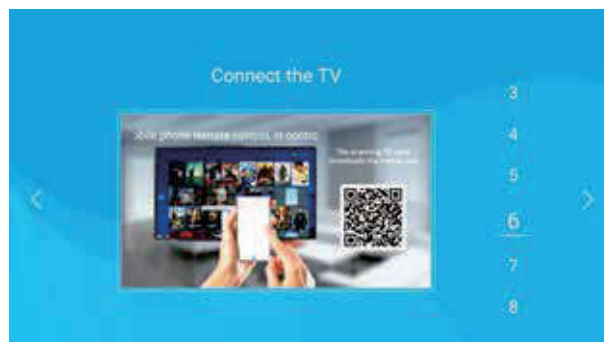

Podesite lozinku i pritisnite taster <OK> da potvrdite, uđete u sledeći korak, pritisnite ◀ da se vratite na prethodni korak i pritisnite ▶ da direktno uđete u sledeći korak.

  
Pritisnite ▼/▲ da izaberete način gledanja TV programa ili izvora. Pritisnite <OK> ili ▶ Potvrdi da uđete u odgovarajući odabrani kanal ili početnu stranicu, a zatim pritisnite ◀ da se vratite na prethodni korak.

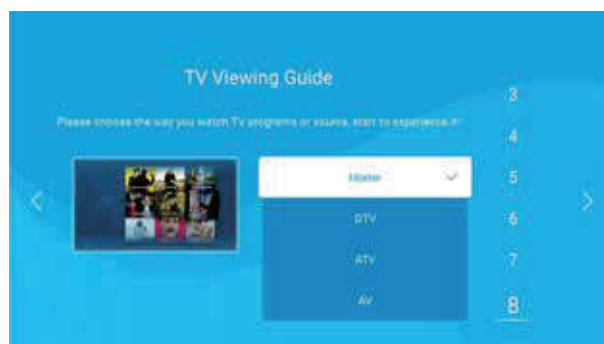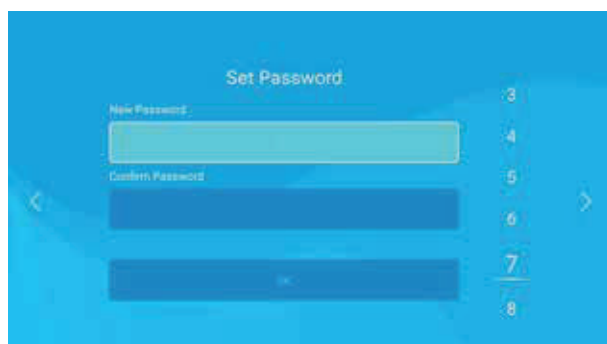

Početna stranica

Sledi interfejs glavnog menija. Pritisnite ▼/▲ da biste promenili navigaciju. Ova stranica sadrži red omiljenih aplikacija i red alata.

 Alati uključuju: Fav Apps, My Apps, App Store, Assistant, Media, Scr i Settings.

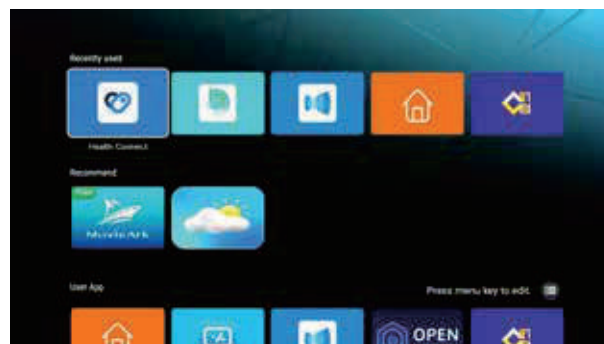

Omiljene aplikacije

Ovde možete pogledati ili dodati sve svoje omiljene aplikacije.

Moje aplikacije

Pritisnite ▼/▲/◀/▶ da izaberete Moje aplikacije, a zatim pritisnite taster <OK> da uđete u interfejs Moje aplikacije, koji prikazuje aplikacije u kategorijama prema Nedavno korišćeni, Preporučiti, Korisnička aplikacija I Ažuriranje.

App Store

Pritisnite ▼/▲/◀/▶ da izaberete App Store, a zatim pritisnite taster <OK> da uđete u interfejs App Store, gde možete da tražite i instalirate željeni softver aplikacije.

Traži

 
 
Pritisnite ▼/▲ da izaberete Pretraga, a zatim pritisnite <OK> da uđete u interfejs za pretragu, gde možete da unesete naziv softvera za pretragu.

Preporučite

Pritisnite ▼/▲ da izaberete Preporučiti i pritisnite ▶ da uđete u interfejs Preporučiti, gde je prikazan preporučeni softver.

Klasifikujte

Pritisnite ▼/▲ da izaberete Klasifikuj, a zatim pritisnite ▶ da uđete u interfejs Klasifikujte. Ovaj interfejs prikazuje softver po kategorijama. Klasifikacija je intuitivna. Možete odabrati željeni softver po kategoriji.

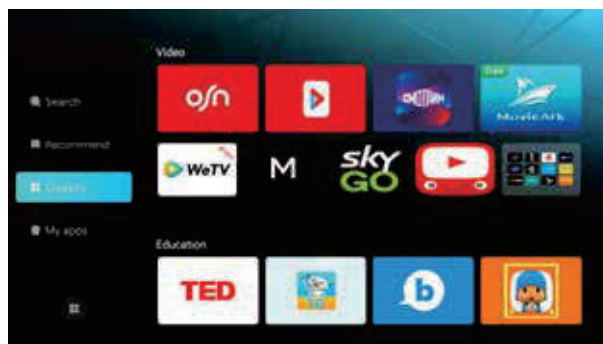
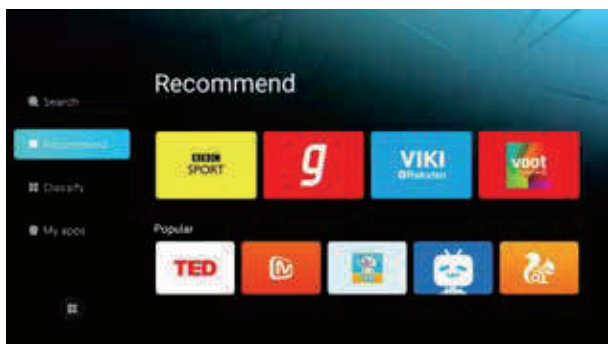


Moje aplikacije

Pritisnite ▼/▲ da izaberete Moje aplikacije i pritisnite ▶ da uđete u interfejs Moje aplikacije, koji prikazuje aplikacija koji ste nedavno koristili.


Najnovija verzija

  Pritisnite ▼/▲ da biste izabrali [icon], pritisnite <OK> da biste ušli u interfejs najnovije verzije i pritisnite <OK> da biste ažurirali na najnoviju verziju.

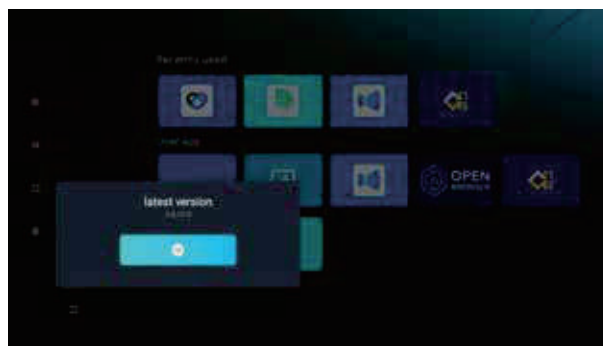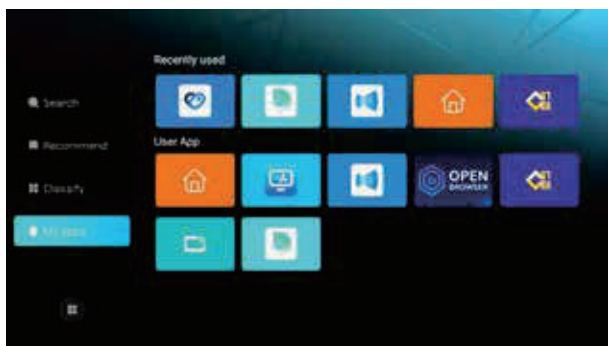

Asistent


 
Pritisnite ▼/▲/◀/▶ da izaberete TV asistent , a zatim pritisnite taster <OK> da biste ušli na stranicu Pomoćnika za sledeću operaciju.

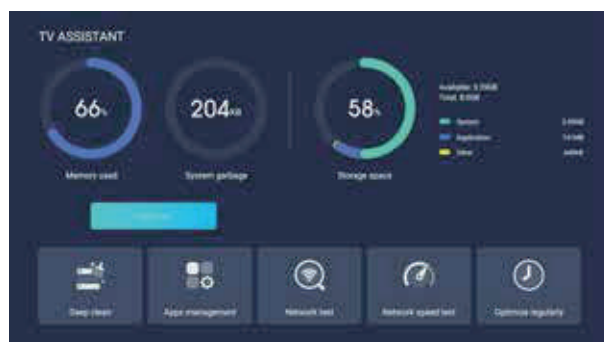

Optimizujte
Duboko čist
Upravljanje aplikacijama

Mrežni test
Test brzine mreže
Redovno optimizujte

  Povećajte brzinu reakcije.
Očistite podatke aplikacije i korisničke datoteke.
Deinstaliranje aplikacije/Upravljanje dozvolama/
Automatsko pokretanje aplikacije/Očisti apk.
Testirajte trenutno stanje mreže.
Testirajte trenutnu brzinu mreže.
Podesite periodično vreme optimizacije.
(1 sat/2 sata/4 sata/8 sati)

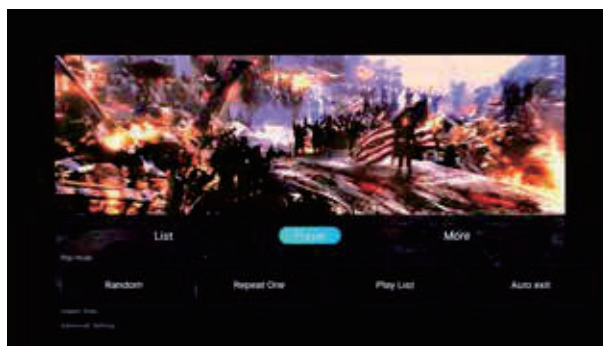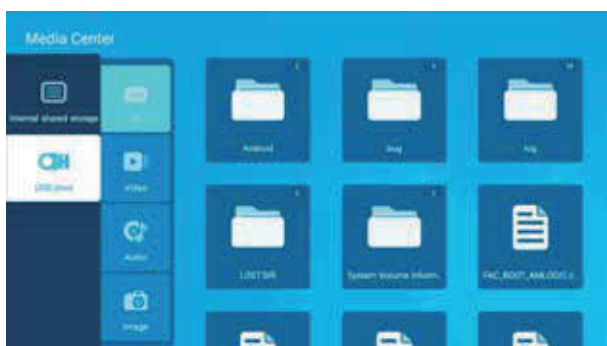

Mediji

Nakon uključivanja USB uređaja, sistem će Vas pitati da li da uđete na stranicu sa medijima. Izaberite OK da biste ušli.

Ako ne postoji takva stranica, možete da pritisnete ▼/▲/◀/▶ da izaberete MEDIA, a zatim da pritisnete taster <OK> da uđete u stranicu sa medijima za sledeću operaciju. Takođe možete pritisnuti dugme MEDIA na daljinskom upravljaču da biste pristupili ovoj stranici.

Nakon unosa, stranica se prikazuje na sledeći način.

Video

Pritisnite ▼/▲ da izaberete video, a zatim pritisnite ▼/▲/◀/▶ da izaberete video koji želite da pustite.

Pritisnite taster <MENU> da biste prikazali donju stranicu menija.

List

Pritisnite taster <Meni> da biste ušli u donju stranicu menija, a zatim pritisnite ◀/▶ da biste izabrali listu. Ova stranica prikazuje sve dostupne video snimke.

Player

Pritisnite taster <Meni> da biste ušli u donju stranicu menija, a zatim pritisnite ◀/▶ da biste izabrali plejer.

1 .Pritisnite ▼/▲ da izaberete meni.

(opcija: Režim reprodukcije/Razmera/Napredna podešavanja)

2 .Pritisnite <OK>/◀/▶ da biste podesili ili izabrali.

Plai Mode

Pritisnite ▼/▲ da biste izabrali Režim reprodukcije, a zatim pritisnite ◀/▶ da biste izabrali.

(opcija: Nasumično / Ponovi jedno / Lista za reprodukciju / Automatski izlaz / Ponovi sve)

Aspect Ratio

Pritisnite ▼/▲ da izaberete Aspect Ratio, a zatim pritisnite ◀/▶ da izaberete.

(opcija:Auto/4:3/16:9/Zum1/Zum22)

Napredna podešavanja

Pritisnite ▼/▲ da izaberete Advanced Settings, a zatim pritisnite ◀/▶ da izaberete.

(opcija: audio traka/titlova numera/jezik regiona/spoljni titl/isključivanje prikaza liste/informacije)

Audio Track

Pritisnite ◀/▶ da biste izabrali Audio zapis, a zatim pritisnite <OK> da biste izabrali.

Subtitle Track

Pritisnite ◀/▶ da biste izabrali zapis titla, a zatim pritisnite <OK> da biste izabrali.

Region Language

Pritisnite ◀/▶ da biste izabrali jezik regiona, a zatim pritisnite <OK> da biste prikazali sve regionalne jezike.

(opcija: podrazumevano/zapadni evro/centar evro/baltik/ćirilica/arapski/grčki/hebrejski/turska/tajlandski/vijetnamski/kineski)

Ekternal Subtitle

Pritisnite ◀/▶ da biste izabrali Eksterni titl, a zatim pritisnite <OK> da biste izabrali spoljašnji titl koji želite da dodate.

Uključite prikaz liste

Pritisnite ◀/▶ da izaberete Uključi prikaz liste, a zatim pritisnite taster<OK> da biste uključili/isključili.

Informacije

Pritisnite ◀/▶ da biste izabrali Informacije, a zatim pritisnite <OK> da biste prikazali specifične informacije o trenutnom video snimku.

2.4 Podešavanja zvuka

Pritisnite ▼/▲/▶ da biste izabrali Podešavanja zvuka, a zatim pritisnite <OK> da biste ušli na odgovarajuću stranicu sa podešavanjima.

Audio

Pritisnite ▼/▲ da izaberete audio, a zatim pritisnite ▼/▲/◀/▶ da izaberete audio koji želite da reprodukujete.

Pritisnite taster <MENU> da biste prikazali donju stranicu menija.

List

Pritisnite taster <Meni> da biste ušli u donju stranicu menija, a zatim pritisnite ▶/◀ da biste izabrali

List. Ova stranica prikazuje sve dostupne audio zapise.

Player

Pritisnite taster <Meni> da biste ušli u donju stranicu menija, a zatim pritisnite ▶/◀ da biste izabrali plejer.

1 .Pritisnite ▼/▲ da izaberete meni.

(opcija: Režim reprodukcije/Napredna podešavanja)

2 .Pritisnite < OK>/▶/◀ za podešavanje ili odabir.

Play mode

Pritisnite ▼/▲ da biste izabrali Režim reprodukcije, a zatim pritisnite ▶/◀ da biste izabrali.

(opcija: Nasumično / Ponovi jedno / Lista za reprodukciju / Automatski izlaz / Ponovi sve)

Progress Jump

Pritisnite ▶/◀ da izaberete Progress Jump, a zatim pritisnite <OK> da biste izabrali.

Uključite prikaz liste

Pritisnite ▶/◀ da izaberete Uključi prikaz liste, a zatim pritisnite taster <OK> da biste uključili/isključili.

Informacije

Pritisnite ▶/◀ da biste izabrali Informacije, a zatim pritisnite <OK> da biste prikazali specifične informacije o trenutnom zvuku.

Više

Pritisnite taster <Meni> da biste ušli u donju stranicu menija, a zatim pritisnite ▶/◀ da biste izabrali Još.

Pritisnite ▼/▶/◀<OK> da biste izabrali Podešavanja slike ili Podešavanja zvuka.

Podešavanja slike

Pritisnite ▼/▲/▶ da izaberete Podešavanja slike, a zatim pritisnite <OK> da uđete na odgovarajuću stranicu sa podešavanjima.

Slika

Pritisnite ▼/▲ da izaberete sliku, a zatim pritisnite ▼/▲/▶/◀ da izaberete sliku koju želite da reprodukujete.

Pritisnite taster <MENU> da biste prikazali donju stranicu menija.

Aspect Ratio

Pritisnite ▼/▲ da izaberete Aspect Ratio, a zatim pritisnite ▶/◀ da izaberete.

(opcija: Auto/Ceo ekran/Umanji/Originalno/Zumiranje1/Zumiranje2)

Rotiraj

 
 
Pritisnite ▼/▲ da izaberete Rotate, a zatim pritisnite ▶/◀ da izaberete.

(opcija: Podrazumevano/Rotiraj udesno/Rotiraj ulevo)

Napredna podešavanja

Pritisnite ▼/▲ da izaberete Advanced Settings, a zatim pritisnite ▶/◀ da izaberete.

(opcija: Pusti slajd/vreme intervala/Podesi kao pozadinu/Uključi prikaz liste/informacije)

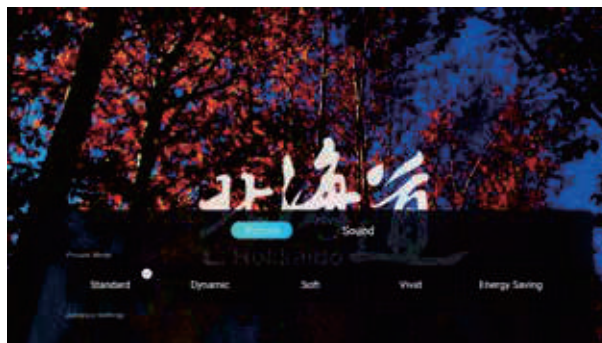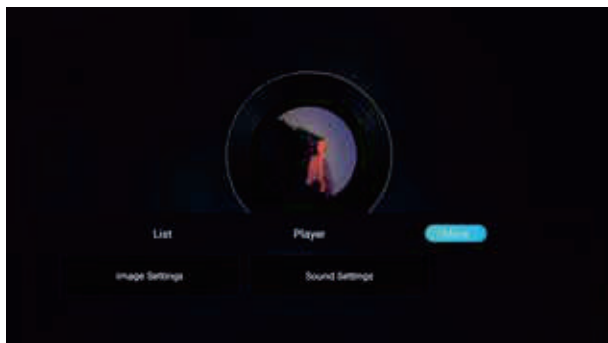

Pusti slajd

Pritisnite ◀/▶ da biste izabrali Pusti slajd, a zatim pritisnite <OK> da biste prikazali sve slike.

Interval Time

Pritisnite ◀/▶ da biste izabrali Vreme intervala, a zatim pritisnite <OK> da biste ušli na odgovarajuću stranicu sa podešavanjima.

(opcija: 3 sek./5 sek./8 sek./12 sek.)

Postavi kao pozadinu

Pritisnite ◀/▶ da biste izabrali Postavi kao pozadinu, a zatim pritisnite <OK> da biste postavili kao pozadinu.

Uključite prikaz liste

Pritisnite ◀/▶ da izaberete Uključi prikaz liste, a zatim pritisnite taster <OK> da biste uključili/isključili.

 
Informacije

Pritisnite ◀/▶ da biste izabrali Informacije, a zatim pritisnite <OK> da biste prikazali izabrani prikaz.

Podešavanja zvuka

Pritisnite ▼/▲/▶ da biste izabrali Podešavanja zvuka, a zatim pritisnite <OK> da biste ušli na odgovarajuću stranicu sa podešavanjima.

2.5 Deljenje ekrana


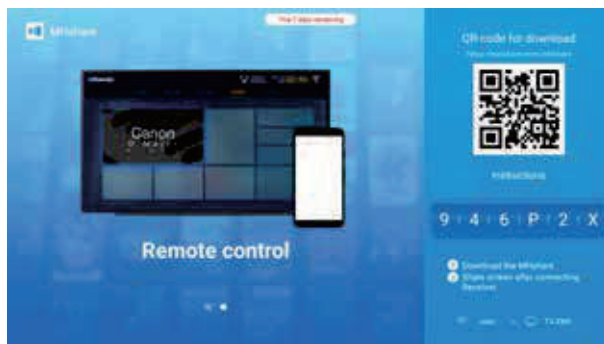


Deljenje ekrana

Pritisnite ◀/▶ da izaberete Deljenje ekrana, a zatim pritisnite taster <OK> da uđete na stranicu Deljenje ekrana za sledeću operaciju. Možete da radite u skladu sa uputstvima na ekranu da biste postigli deljenje ekrana.

Podešavanja

  Pritisnite ◀/▶ da biste izabrali Podešavanja, a zatim pritisnite taster <OK> da biste ušli na stranicu podešavanja za sledeću operaciju.

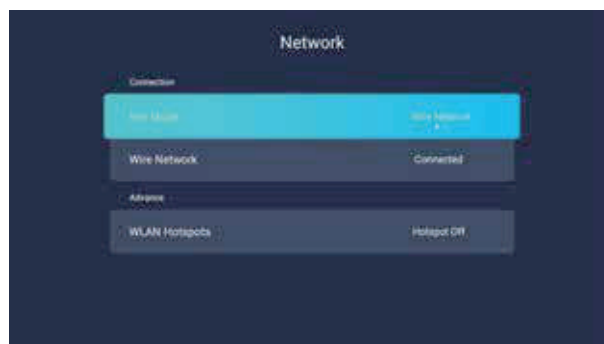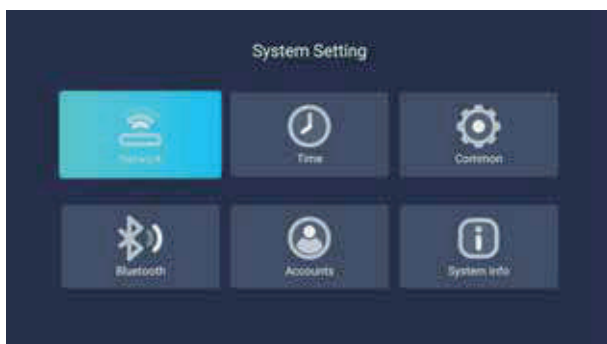

Mreža

Na stranici sa podešavanjima pritisnite ▼/▲ ◀/▶ da biste izabrali Mreža, a zatim pritisnite <OK> da biste ušli na stranicu Mreža za sledeću operaciju.

Net Mode

Pritisnite ▼/▲ da izaberete Net Mode, a zatim pritisnite ◀/▶ da izaberete Wire Network ili Wireless.

VLAN Hotspots

Postavite TV kao Wi Fi predajnik.

Vreme

Na stranici sa podešavanjima, pritisnite ▼/▲ ◀/▶ da izaberete Vreme, a zatim pritisnite <OK> da uđete na stranicu Vreme za sledeću operaciju.

Auto Attach

Dobijte trenutno vreme automatski nakon otvaranja.

Vremenska zona

Podesite trenutnu vremensku zonu.

Vreme Edit

Podesite vreme.

Format datuma

Podesite trenutni datum.

24 sata

Uključite ili isključite 24-časovni format.

 
Vreme čuvara ekrana

 
Podesite vreme čuvara ekrana

(isključeno/1 min/2min/3min/4min/5 min).

Common

Na stranici sa podešavanjima, pritisnite ▼/▲/◀/▶ izaberite Common, a zatim pritisnite <OK> da biste ušli na Zajedničku stranicu za sledeću operaciju.

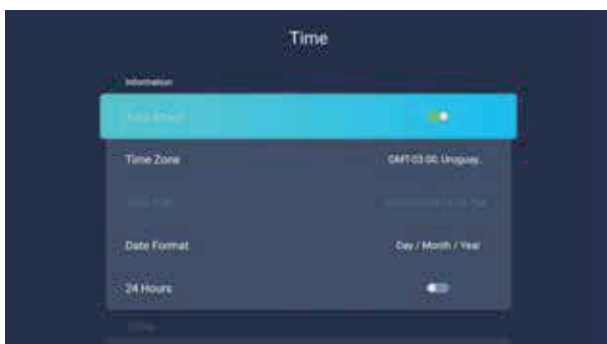

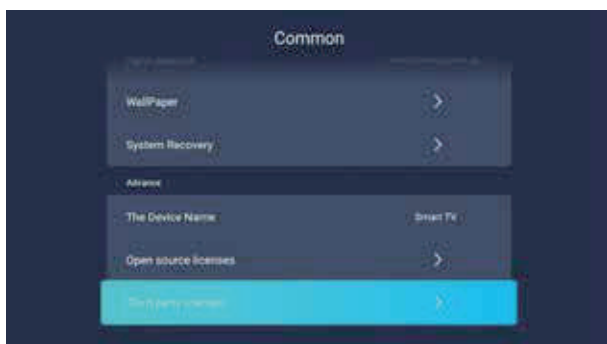


Pritisnite ▼/▲ da izaberete Jezik/Metod unosa/Pozadinu/Oporavak sistema/Naziv uređaja/Licence otvorenog koda/Licence trećih strana.

Jezik	Podesite jezik sistema (engleski podrazumevano).
Input Method	Podesite metod unosa.
Vallpaper	Postavite pozadinu.
Sistem Recoveri	Vratite sistemske postavke u prvobitno stanje.
Ime uređaja	Podesite naziv uređaja.
Licence otvorenog koda	Pogledajte licence otvorenog koda.
Licence treće strane	Pogledajte licence treće strane.

Bluetooth

 Na stranici sa podešavanjima pritisnite ▼/▲◀/▶ da izaberete Bluetooth, a zatim pritisnite <OK> da biste ušli na Bluetooth stranicu za sledeću operaciju.

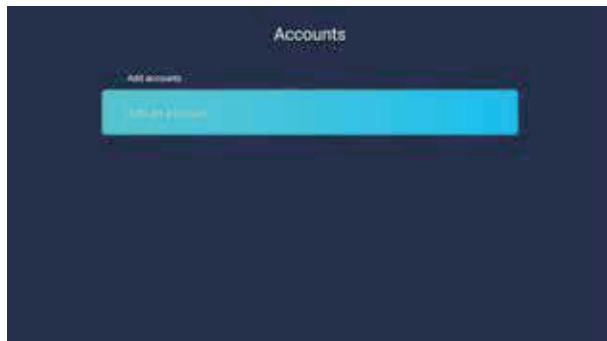

Nalozi

Na stranici Podešavanja pritisnite ▼/▲◀/▶ da biste izabrali Nalozi, a zatim pritisnite <OK> da biste ušli na stranicu Nalozi za sledeću operaciju. Na ovoj stranici možete dodati nalog ili napustiti tekući nalog.

Informacije o sistemu

Na stranici sa podešavanjima pritisnite ▼/▲/◀/▶ da biste izabrali Sistem Info, a zatim pritisnite <OK> da biste ušli na stranicu sa informacijama o sistemu za sledeću operaciju. Na ovoj stranici možete pogledati informacije vezane za sistem.

2.6 TV podešavanje

U interfejsu za gledanje TV-a, pritisnite dugme <Meni> na daljinskom upravljaču da biste ušli u meni TV podešavanja.

Pritisnite ◀/▶ na daljinskom upravljaču da biste izabrali. Pritisnite taster <OK> na daljinskom upravljaču da biste ušli.

 
(opcija: Izvor/Slika/Zvuk/Kanal/Zajedničko)

Izvor

Pritisnite taster <Meni> da biste ušli u interfejs glavnog menija, a zatim pritisnite ◀/▶ da biste izabrali meni Izvor.

U ovom interfejsu, možete pritisnuti ▼/◀/▶ /<OK> da biste promenili izvor signala.

(opcija: DTV/ATV/AV/HDMI 1/HDMI 2/HDMI 3)

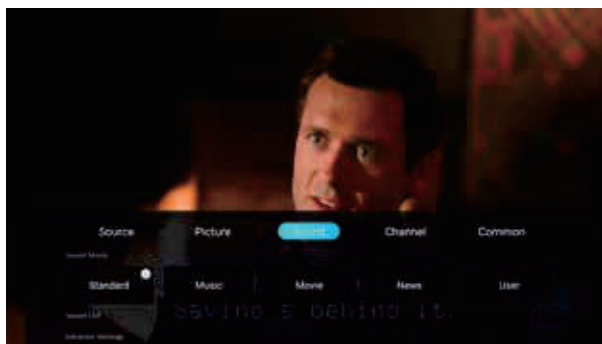

Izvor

Pritisnite taster <Meni> da biste ušli u interfejs glavnog menija, a zatim pritisnite ◀/▶ da biste izabrali meni Slika.

1. Pritisnite ▼/▲ da izaberete meni.

(opcija: Režim slike/Odnos/Napredna podešavanja)

2. Pritisnite <OK>/◀/▶ da biste podesili ili izabrali.

Režim slike

Pritisnite ▼/▲ da izaberete Režim slike. Pritisnite ◀/▶ da izaberete režim slike.

(opcija: Standard/Dinamic/Soft/Vivid/Ušteda energije/Korisnički)

Standard	Standardni efekat slike.
Dinamic	Poboljšajte kontrast, hromu i oštrinu slike, tako da slika bude u dinamičkom balansu boja.
Soft	Smanjite kontrast, osvetljenost, hromu i definiciju slike da bi slika izgledala meko.
Vivid	Poboljšajte kontrast, hromu i definiciju slike da biste boju učinili svetlijom.
Ušteda energije	Smanjite potrošnju energije.
Korisnik	Izaberite Prilagođena podešavanja slike.

Napomena: Možete pritisnuti prečicu PMODE na daljinskom upravljaču da izaberete režim slike.

Aspect Ratio

Pritisnite ▼/▲ da izaberete Aspect Ratio. Pritisnite ◀/▶ da biste izabrali.

(opcija: Auto/16:9/4:3/Zum 1/Zum2)

Napredna podešavanja

Pritisnite ▼/▲ da izaberete Advance Settings. Pritisnite ◀/▶ da biste izabrali.

(opcija: smanjenje šuma/temperatura boje/pozadinsko osvetljenje/DLC)

Smanjenje buke

Postavlja opcije za intenzitet eliminacije šuma slike.

Pritisnite ◀/▶ da biste izabrali Smanjenje šuma, pritisnite taster <OK> da biste ušli na stranicu za izbor, a zatim pritisnite ◀/▶ da biste izabrali.

(opcija: Off/Lov/Middle/High)

Temperatura boje

Podesite ukupnu boju slike.

Pritisnite ◀/▶ da biste izabrali Temperaturu boje, pritisnite taster <OK> da biste ušli na stranicu za izbor i pritisnite ◀/▶ da biste izabrali.

(opcija: hladno/normalno/toplo)

Cool	Slika je zelena i plava, manje crvena, a ukupna boja je svetla. Slika je svežija i elegantnija.
Normalno	Slika nije pristrasna i boja je umerena.
Toplo	Slika je crvena i zelena, manje plava, a boja je svetlija i meka.

Pozadinsko osvetljenje

Pritisnite taster ◀/▶ da biste izabrali Pozadinsko osvetljenje, pritisnite taster <OK> da biste ušli na stranicu za podešavanje i pritisnite taster ◀/▶ da biste podesili.

DLC

Pritisnite ◀/▶ da izaberete DLC, pritisnite taster <OK> da uđete na stranicu za izbor i pritisnite ◀/▶ da izaberete Uključeno/Isključeno.

Zvuk

Pritisnite taster <Meni> da biste ušli u interfejs glavnog menija, a zatim pritisnite ◀/▶ da biste izabrali meni Zvuk.

1 .Pritisnite ▼/▲ da izaberete meni.

(opcija: Režim zvuka/Izlaz zvuka/Napredna podešavanja)

2 .Pritisnite <OK> /◀/▶ da biste podesili ili izabrali.

Režim zvuka

Pritisnite ▼/▲ da izaberete Režim zvuka. Pritisnite ◀/▶ da izaberete režim zvuka.

(opcija: Standard/Muzika/Film/Vesti/Korisnik)

Standard	Uravnotežen zvuk u svakom okruženju.
Muzika	Visoki tonovi su pojačani, a bas spušten.
Film	Film Poboljšajte visok i nizak ton, bogat melodijom i poboljšajte efekat na licu mesta.
Vesti	Poboljšajte glas.
Korisnik	Izaberite Prilagođene postavke zvuka.

Napomena: Možete pritisnuti prečicu SMODE na daljinskom upravljaču da izaberete režim zvuka.

Sound Out

Pritisnite ▼/▲ da izaberete Sound Out. Pritisnite ◀/▶ da biste izabrali režim audio izlaza.

(opcija: interni TV zvučnik/SPDIF/HDMI ARC/Bluetooth/slušalice)

Napredna podešavanja

Pritisnite ▼/▲ da izaberete Napredna podešavanja. Pritisnite ◀/▶ da biste izabrali.

(opcija: Balans/AVC/Oslabljeni sluh/Audio opis/Digitalni audio izlaz/SPDIF kašnjenje/surround/samo audio)

Balans

Podesite različite frekvencijske komponente da biste kompenzovali defekte zvučnika i zvučnog polja.

Pritisnite ◀/▶ da izaberete Balans, pritisnite taster <OK> da biste ušli, a zatim pritisnite ◀/▶ da biste podesili.

AVC

Pritisnite tastere ◀/▶ da izaberete AVC, a zatim pritisnite taster <OK> da biste uključili/isključili.

Nakon što je „Automatska kontrola jačine zvuka“ uključena, kada je jačina zvuka podešena, ona može da zadrži jačinu zvuka u zvučniku stabilnom bez obzira na to koji se zvuk TV-a na svakom kanalu razlikuje.

Oštećenog sluha

Pritisnite tastere ◀/▶ da izaberete Osobe oštećenog sluha, a zatim pritisnite taster <OK> da biste uključili/isključili.

Audio opis

Pritisnite tastere ◀/▶ da izaberete Audio opis, a zatim pritisnite taster <OK> da biste uključili/isključili.

Digitalni audio izlaz

Pritisnite ◀/▶ da izaberete Digitalni audio izlaz, koji je podrazumevano PCM.

SPDIF Delay

Pritisnite ◀/▶ da izaberete SPDIF odlaganje, pritisnite taster <OK> da biste ušli, a zatim pritisnite ◀/▶ da biste podesili.

Surround

Pravac svakog izvora zvuka u originalnom signalu se reprodukuje kako bi se korisnik osećao okružen zvucima iz različitih pravaca.

Pritisnite tastere ◀/▶ da izaberete Surround, a zatim pritisnite taster <OK> da biste uključili/isključili.

Samo audio

Pritisnite ◀/▶ da izaberete Samo audio, a zatim pritisnite taster <OK> da biste uključili/isključili

Kanal

Pritisnite taster <Meni> da biste ušli u interfejs glavnog menija, a zatim pritisnite ◀/▶ da biste izabrali meni Kanal.

Napredna podešavanja

(opcija: Tip antene/Jezik zvuka/Titl/Informacije o signalu/Skeniranje/Listu kanala/EPG/CI kartica)

Antenna Tipe

Pritisnite ◀/▶ da biste izabrali tip antene, a zatim pritisnite taster <OK> da biste ušli.

 
Pritisnite ◀/▶ da izaberete Air/Cable/Satellite.

Audio jezik

Pritisnite ◀/▶ da izaberete Audio jezik, a zatim pritisnite taster <OK> da biste ušli.

Podnaslov

Pritisnite ◀/▶ da biste izabrali titl, a zatim pritisnite taster <OK> da biste ušli.

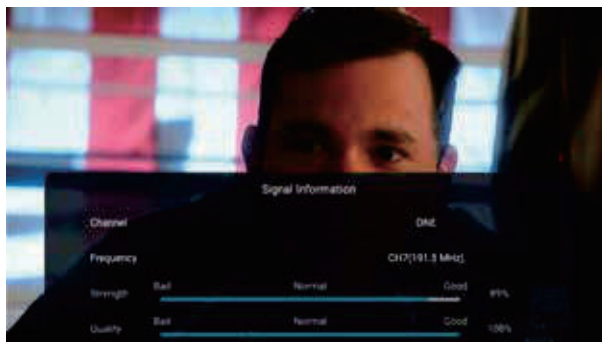

Signal Information

Pritisnite ◀/▶ da biste izabrali Informacije o signalu, a zatim pritisnite taster <OK> da biste ušli.

Skeniraj

Pritisnite ◀/▶ da biste izabrali Skeniraj, a zatim pritisnite taster <OK> da biste ušli.

Pritisnite ▼/▲ da izaberete Tip pretrage/Automatsko skeniranje/Digitalno ručno skeniranje.

Auto Scan

Start Scan će automatski tražiti važeće programske kanale. Pritisnite ▼/▲ da izaberete LCN/Start Scan.

LCN

Pritisnite ▼/▲ da izaberete On/Off.

Započni skeniranje

Pritisnite <OK> da biste ušli, a zatim započnite pretragu.

 
 
Ako želite da zaustavite proces pretrage, možete pritisnute taster EXIT ili Meni.

Digitalno ručno skeniranje

Ručno potražite važeći digitalni programski kanal.

Pritisnite ▼/▲ da izaberete Digitalno ručno skeniranje, pritisnite <OK> da biste ušli, a zatim započnite ručnu pretragu kanala.

Ako želite da zaustavite proces pretrage, možete pritisnuti dugme Izadi ili Meni.

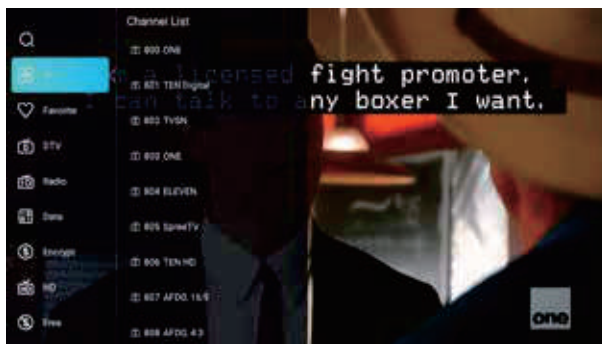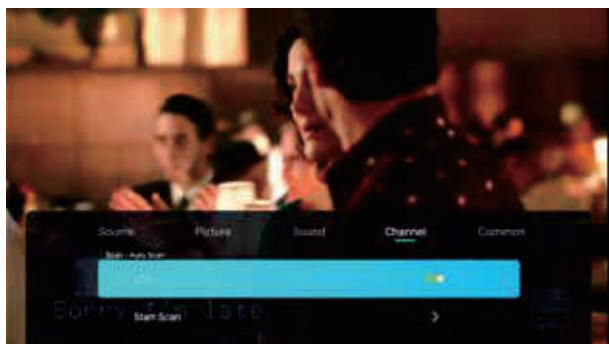

Broj kanala

Pritisnite ▼/▲ da izaberete broj kanala i pritisnite ◀/▶ da izaberete broj kanala.

Frekvencija

Pritisnite ▼/▲ da izaberete Frekvencija, a zatim pritisnite ◀/▶ da izaberete.

 
Lista kanala

Pogledajte sve postojeće kanale programa. Pritisnite ◀/▶ da izaberete Lista kanala, a zatim pritisnite ▶ da uđete u podmeni.

Pritisnite ▼/▲ da biste izabrali program i pritisnite <Meni> da biste uredili program. (opcija: Omiljeno/Izbriši/Preskoči)

Ako je program izabran kao program za analogni signal, program se može preimenovati.

2.7 Zajednički

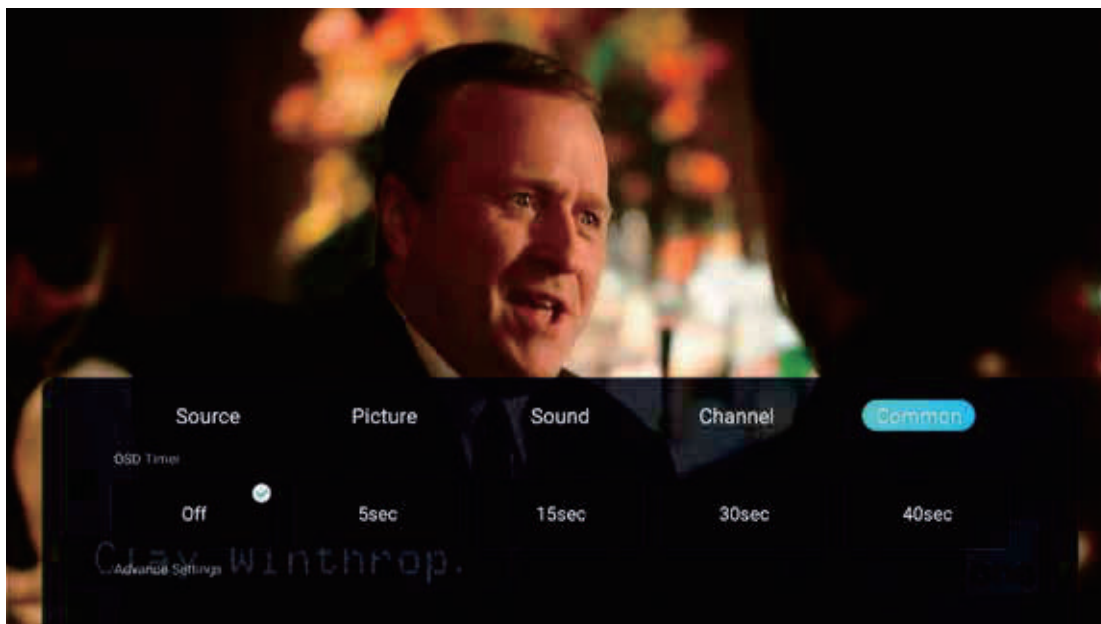

Common

Pritisnite taster <Meni> da biste ušli u interfejs glavnog menija i pritisnite ◀/▶ da biste izabrali zajednički meni.

1. Pritisnite ▼/▲ da izaberete meni. (opcija: OSD tajmer/napredna podešavanja)
2. Pritisnite <OK>/◀/▶ da biste podesili ili izabrali.

OSD tajmer

Pritisnite ▼/▲ da izaberete OSD tajmer, a zatim pritisnite ◀/▶ da izaberete.

(opcija: Off/5sec/15sec/30sec/40sec)

Napredna podešavanja

Pritisnite ▼/▲ da izaberete Advance Settings.

Sleep Timer

Pritisnite ◀/▶ da izaberete tajmer za isključivanje, pritisnite taster <OK> da biste ušli, a zatim pritisnite ◀/▶ da biste izabrali.

(opcija: 5min/30min/45min/60min/90min/120min/240min)

On Time

Pritisnite ◀/▶ da izaberete On Time, pritisnite taster <OK> da biste ušli, a zatim pritisnite ◀/▶ da biste izabrali.

(opcija: isključeno/jednom/ponedeljak-nedelja/ponedeljak-petak/ponedeljak-subota/subota-nedelja/nedelja)

Off Time

Pritisnite ◀/▶ da izaberete Vreme isključivanja, pritisnite taster <OK> da biste ušli, a zatim pritisnite ◀/▶ da biste izabrali.

(opcija: isključeno/jednom/ponedeljak-nedelja/ponedeljak-petak/ponedeljak-subota/subota-nedelja/nedelja)

Auto Standby Timer

Pritisnite ◀/▶ da izaberete tajmer automatskog režima pripravnosti, pritisnite taster <OK> da biste ušli, a zatim pritisnite ◀/▶ da biste izabrali.

(opcija: isključeno/3 sata/4 sata/5 sati)

Letnje računanje vremena

Pritisnite ◀/▶ da biste izabrali letnje računanje vremena, pritisnite taster <OK> da biste ušli i pritisnite ◀/▶ da biste izabrali.

(opcija: Isključeno/Uključeno/Auto)

Plavi ekran

Kada nema signala, ekran će biti plave boje.

Pritisnite ◀/▶ da biste izabrali Plavi ekran, a zatim pritisnite taster <OK> da biste izabrali uključivanje/isključivanje.

Režim prodavnice

Pritisnite dugme ◀/▶ da biste izabrali režim prodavnice, a zatim pritisnite taster <OK> da biste izabrali uključivanje/isključivanje.

Teletext

Pritisnite ◀/▶ da biste izabrali teletext, pritisnite taster <OK> da biste ušli, a zatim pritisnite ◀/▶ da biste izabrali.

Audio jezik 1

Pritisnite dugme ◀/▶ da izaberete Audio jezik 1. Pritisnite ▼/▲ da biste izabrali.

Audio jezik 2

Pritisnite dugme ◀/▶ da izaberete Audio jezik 2. Pritisnite ▼/▲ da biste izabrali.

Jezik titlova 1st

Pritisnite dugme ◀/▶ da izaberete Audio jezik 1. Pritisnite ▼/▲ da biste izabrali.

Jezik titlova 2nd

Pritisnite dugme ◀/▶ da izaberete Audio jezik 2. Pritisnite ▼/▲ da biste izabrali.

CEC

Pritisnite ◀/▶ da izaberete CEC, a zatim pritisnite taster <OK> da uđete u podmeni.

Pritisnite ◀/▶ /<OK> u podmeniju da biste uključili ili isključili funkcije CEC, TV Auto Power On i Device Auto Power Off.

Zaključaj

Pritisnite ◀/▶ da biste izabrali Zaključaj, pritisnite taster <OK> da biste ušli.

PVR Setting

Pritisnite ◀/▶ da izaberete PVR podešavanje, a zatim pritisnite taster <OK> da uđete u podmeni.

Pritisnite ◀/▶ /<OK> u podmeniju da biste uključili ili isključili funkcije Select Disk,

Format, brzina, lista zapisa i lista rasporeda.

Menu Reset

Vrati podrazumevana podešavanja.

Pritisnite ◀/▶ da biste izabrali Resetovanje menija, a zatim pritisnite taster <OK> da biste izabrali da li želite da resetujete.

3. Tehnička specifikacija

Model proizvoda	40AOS480G	
Veličina ekrana	40" dijagonala	
Aspect Ratio	16:9	
Pover Suppli	AC 100-240V~,50/60Hz	
Potrošnja energije	65W	
TV sistem	PAL B/G D/K I, SECAM B/G D/K DVB-T/T2/C/S/S2(s/s2 opcija) (Nema DVB-C signala u nekim zemljama ili područjima.)	
Audio izlazna snaga (interno)	8Wx2	
Ulazni terminal	Antenski ulaz	x 2 (S2 option)
	USB ulaz	x 2
	HDMI ulaz	x 3
	VGA ulaz	NO
	PC AUDIO ulaz	NO
	Audio ulaz (L/R)	x 1
	Video ulaz	x 1
	IPbPr ulaz	NO
	RJ45 ulaz	x 1
	CI kartica ulaz	x 1
	SCART ulaz/izlaz	NO
	DC ulaz (2V)	NO
	CARD SLOT	NO
Izlazni terminal	Slušalica	x 1
	Audio linijski izlaz (L/R)	NO
	Video Output	NO
	Optical	NO
	Koaksijalni izlaz	x 1
Radna temperatura	0°C~40°C	
Radna vlažnost	20% ~ 80% bez kondenzacije	

Napomena: gore prikazana specifikacija može da se promeni bez prethodne najave radi poboljšanja kvaliteta.



Proizvedeno po licenci Dolby Laboratories. Dolby, Dolby Audio i simbol dvostrukog D su zaštitni znakovi Dolby Laboratories Licensing Corporation.

4. Podržani režimi signala

A.HDMI režim

Rezolucija	Horizontalna frekvencija (Khz)	Vertikalna frekvencija (Hz)
480p	31.468	59.94
576p	31.25	50.00
720p	45.00	60.00
1080i	33.75	60.00
1080p(1920x1080)	67.50	60.00

- *Kada signal primljen na displeju premaši dozvoljeni opseg, na ekranu će se pojaviti poruka upozorenja.*
- *Možete potvrditi format ulaznog signala na ekranu.*



Termini HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress i HDMI logotipi su zaštitni znaci ili registrovani zaštitni znaci HDMI Licensing Administrator, Inc.

5. Jednostavno rešavanje problema

Ako se performanse televizora dramatično promene, proverite TV u skladu sa sledećim uputstvima. Ne zaboravite da proverite periferne uređaje da biste precizno odredili izvor kvara.

Simptom	Rešenje
Napajanje se ne može uključiti. (Indikator napajanja ne svetli.)	— Proverite da li su oba kraja kabla za napajanje pravilno uključena u utičnicu i da li zidna utičnica radi.
Ne pojavljuje se poruka o ulaznom signalu.	— Proverite da li je signalna linija pravilno povezana. — Proverite da li je uključeno napajanje relevantnih perifernih uređaja. — Proverite da li se izabrana opcija Ulaz poklapa sa ulaznim signalom.
Daljinski upravljač ne funkcioniše ispravno.	— Proverite da li su baterije ispražnjene. (Koristite nove baterije.) — Proverite da li je daljinski upravljač u radnom dometu. — Proverite da li je daljinski upravljač usmeren na IR senzor u donjem delu televizora. — Proverite da između daljinskog upravljača i prozora IR senzora na TV-u nema prepreka.
Na ekranu se pojavljuju treptuće tačke ili pruge.	— Proverite da nema emisije (VN kabl ili neonska lampa) ili drugih mogućih izvora smetnji. —
Boja ili kvalitet slike se pogoršavaju.	— Proverite da li su sva video podešavanja pravilno podešena, kao što su osvetljenost, kontrast, boja itd. — Za više informacija o video postavkama, pogledajte OSD funkcije u poglavlju 2.
Položaj i veličina ekrana su netačni.	— Proverite da li su položaj i veličina ekrana pravilno podešeni.
Slika ili boja su netačne.	— Proverite da li je signalna linija pravilno povezana. — Kada se povezujete sa računarom, možete promeniti rezoluciju računara da biste dobili ispravnu sliku. Nepodudarnost izlaznog signala računara može uticati na prikaz slike.
Prikažite poruku upozorenja.	— Proverite da li je linija ulaznog signala pravilno fiksirana. — Izaberite tačan ulazni signal. — Za više informacija pogledajte Podržani režimi signala u poglavlju 4.



USER MANUAL

LED Television Model: 40AOS480G

Thank you for purchasing this device.

FOX LED televisions are known for their great performance, as for modern, functional and elegant design. Besides that, we constantly improve our customer support, we have highly efficient and wide network of services, that make our proud customers feel safe.

You made a right choice.

Now it's time for instructions, they are not complicated, but you have to follow them.

EN

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

Warning: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



Safe installation

 
Use the belt fixing the television to facilitate restraining the television from toping forward.



1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.




5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects did not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.
No naked flame sources, such as lighted candles, should be placed on the apparatus.
The apparatus shall be connected to mains socket outlet with a protective earthing connection.
The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.

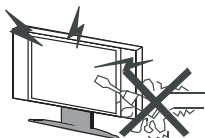


Warning

 High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.

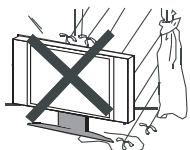


Warning

 To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.

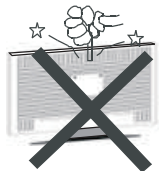

Warning

 Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

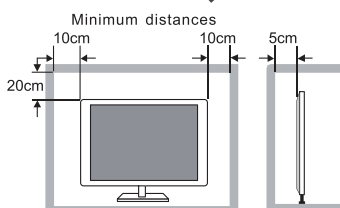

Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

 
Heat built up can reduce the service life of your television, and can also be dangerous.



Caution

Never stand on, lean on, push suddenly the product or its stand.


You should pay special attention to children.

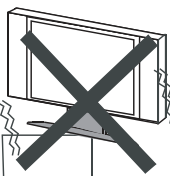

Caution


Do not place the main unit on an unstable cart stand, shelf or table.

 Serious injury to an individual, and damage to the television, may result should it fall.

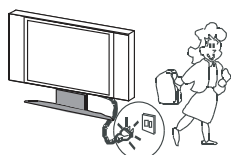

Caution

 When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

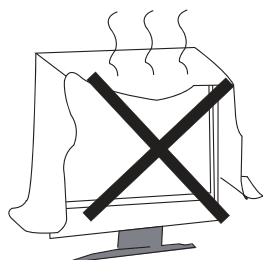

Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.

 


Caution



The panel used in this product is made of glass. It can break when the product is dropped or applied with force. Individuals should execute caution when dealing with broken glass should the panel break.





- Place the TV on a firm and flat surface, leaving a space of at least 10cm around the set and 30cm from the top of the set to the wall or cabinet. Ensure the TV is positioned close to the wall to avoid it falling when pushed.

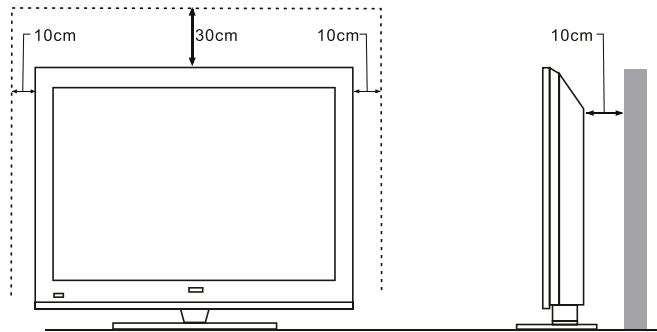

  - When you turning the TV set, do not hold the top side of the TV set, you should hold the bottom side.

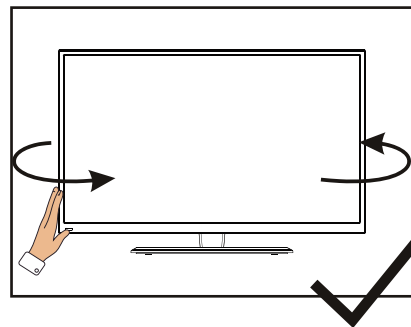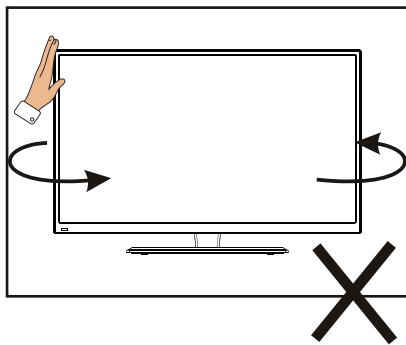

  - When you lifting the TV set, do not use one hand to handle it, you should lift the TV set by two hands.

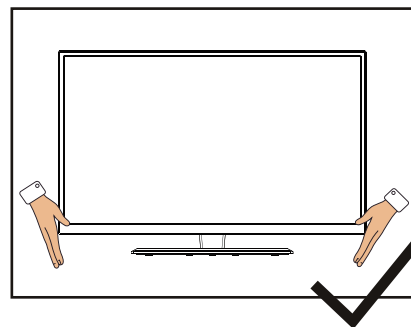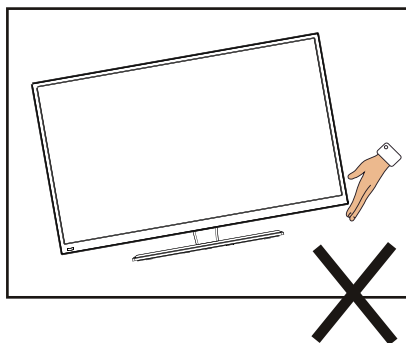

CONTENTS

1. Connection and Preparation of TV.....	2
1.1 Accessories	2
1.2 Installation of Stand.....	2
1.3 Keysand Interfaces.....	3
1.4 Remote Control.....	4
1.5 Installation of Batteries.....	5
2. Basic Operation.....	5
2.1 Power ON/OFF(Optional).....	5
2.2 Setting of Standby Mode.....	5
2.3 First Time Installation	6
2.4 Screen Share	10
2.5 Sound Settings	12
2.6 TV Setting	15
2.7 Common	19
3. Technical Specification.....	20
4. Supported Signal Modes.....	21
5. Simple Troubleshooting	22

 
1.Connection and Preparation of TV

1.1 Accessories

- ★ User Manual
- ★ Remote Control
- ★ Battery(The 7th 40AAA 1.5V)
- ★ Wall Mount Kit (Pre-assembled)(Optional)

1.2 Installation of Stand


(For the physical structure, please refer to the real object)

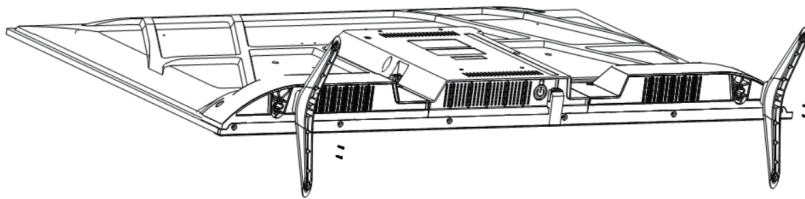


- ① Place the TV with the front panel facing downwards on the soft cloth or soft pads on a desk.
- ② Insert the stand into the bottom socket of the TV.
- ③ Insert the screws into the sockets and tighten them.

1.3 Keys and Interfaces

 The design and specification takes actual products as the standard

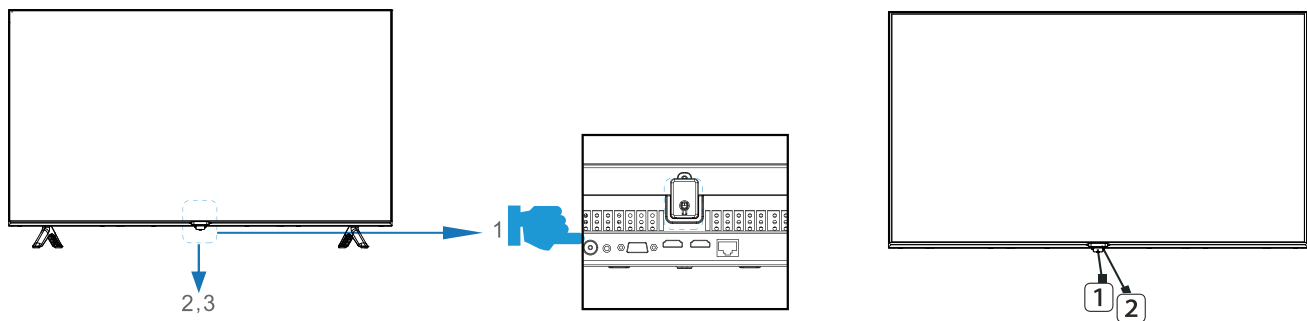

ITEM	BUTTON NAME	FUNCTION DESCRIPTION
1		Press to switch the LED on during Standby mode or vice versa.
		Press to bring up the main menu to the screen.
		Press to select the input source /Press to confirm.
		Press to scan through channels /Press to move up or down.
		Press to increase or decrease the sound level/Press to move left or right.
2	POWER INDICATOR	Indicator shows red in Standby mode and goes off when LED is switched on.
3	REMOTE SENSOR	Infrared sensor for the remote control.
4	POWERPLUG INPUT	Always unplug the AC cord first when installing/removing.

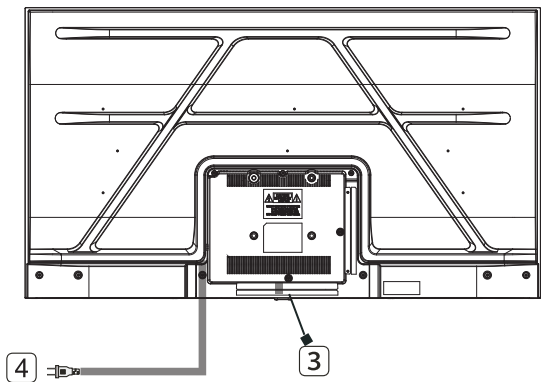 


HDMI1 (ARC)	HDMI2	HDMI3	USB2 USB1	CI EARPHONE
RJ45	COAXIAL	VIDEO	AV IN L R	LNB IN (S2)
				RF IN (C/T2)

1.4 Remote Control

(Here is only the sketch, please in kind prevail)

 *The remote controller cannot be used unless it is within the receivable range. Before you use the remotecontrol, please make sure there's no obstacle between the remote control and the receiver.

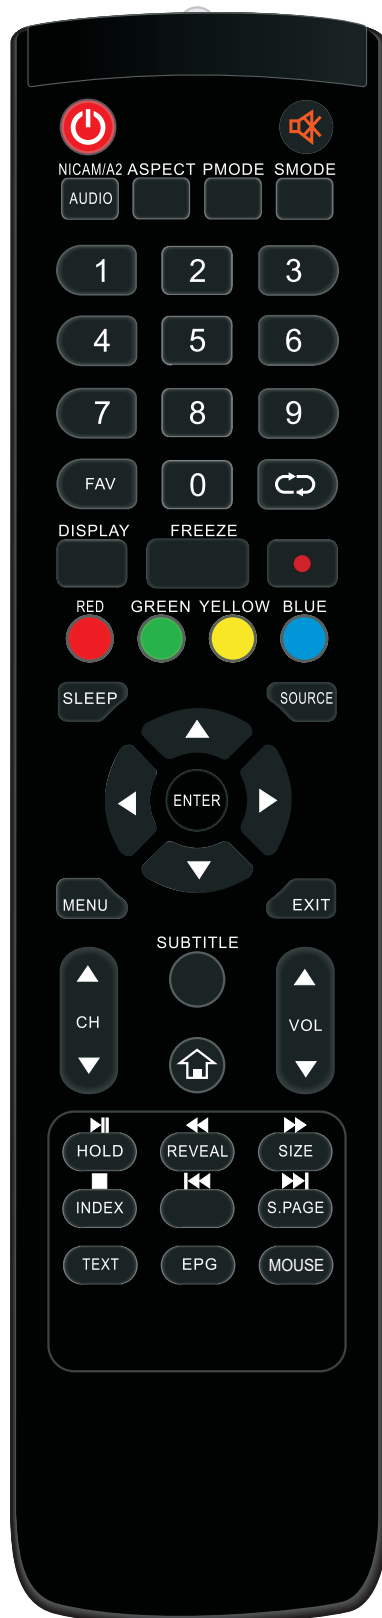

 : Press this button to switch on TV when in standby mode.

 : Press this button to mute or restore sound.

NICAM/A2: In the TV condition, press this key to select the stereo mode.

AUDIO: Press to select the DTV audio.

(Used for models with DTV function only)

ASPECT: Press to select the different picture size.

PMODE: Select picture mode.

SMODE: Select sound mode.

0-9: Select and switch to a channel using 0-9.

FAV: Set favourite channel.

 : Switch back and forth between current and previous channels.

DISPLAY: Display TV information.

FREEZE: Press this key to hold the picture.

 : Start Recording.

(The U disk will be formatted when in burning, please do not store important files in the U disk)

RED, GREEN, YELLOW, BLUE: Correspond to the different colored subjects.

SLEEP: Set the sleep timer.

SOURCE: Press to change signal source.

ENTER: Enter the selected option or execute the selected operation.

MENU: Press this button to enter the main menu for various optional adjustable setting.

EXIT: Exit the OSD (On-screen display).

CH▲/CH▼: Change the channel up and down.

VOL▲/VOL▼: Adjust the volume.

SUBTITLE: Open or close subtitle.

 : Switch to TV or SMART.

TEXT: Press to enter the Teletext mode.

(Used for European region only)

HOLD: Freeze a multi-page passage on screen in Teletext mode.

REVEAL: Press this button to reveal the hidden information in Teletext page. Press again to hide the information.

SIZE: Display top, bottom or all of page to easily read in teletext mode.

INDEX: Press this button to go to the index page.

S.PAGE: Carry out the function of SUBCODE in the text while enter the text display mode.

EPG: Enter electronic program guide. (Used for models with DTV function only)

 : Press to start playing the disc or Media, or to pause playing. (Used for models with MEDIA only)

 : Press to rewind. (Used for models with MEDIA only)

 : Press to fast forward. (Used for models with MEDIA only)

 : Skip to previous chapter. (Used for models with MEDIA only)

 
 
 
 : Stop playing the disc or Media. (Used for models with MEDIA only)

 : Skip to next chapter. (Used for models with MEDIA only)

MOUSE: Press to turn Mouse on/off.

1.5 Installation of Batteries

(Here is only the sketch, please in kind prevail)



- ① Open the back lid of the remote control.
- ② Install two 7#(AAA)1.5V batteries.
Ensure the correct polarity of the batteries.
- ③ Cover the back lid.
Please take out of the batteries from the remote control for long time of no use.

If the remote control doesn't work properly, please carry out the following checks.

- Check the TV is turned on.
- Check the polarity of the batteries are correct.
- Check the batteries are not drained.
- Check the power supply is normal or the power cord is correctly connected.
- Check there are no special fluorescent light or neon light around.

2. Basic Operation

2.1 Power ON/OFF(Optional)

- Connect the power cord to the **AC input**. Insert the power cord into the appropriate socket.
- Press the **Power switch** to switch on the TV, then press **Power** button to turn on the unit.
- Press the **Power switch** again to switch off the TV.

Note: After switch off the TV, please don't immediately re-open the power switch, should be delayed one minute more to re-open the power switch.

 
 
2.2 Setting of Standby Mode

- Press () button to turn on the unit.
- Press () button again to return the display to standby mode. The power indicator turns red.
- Be sure not to set your TV in standby mode for a long period of time.

2.3 First Time Installation



After the first installation, press the<OK>key to enter the home page.

Press ▼/▲ to select your language. Press the<OK>key to confirm and enter the next step, and press ► to directly enter the next step.

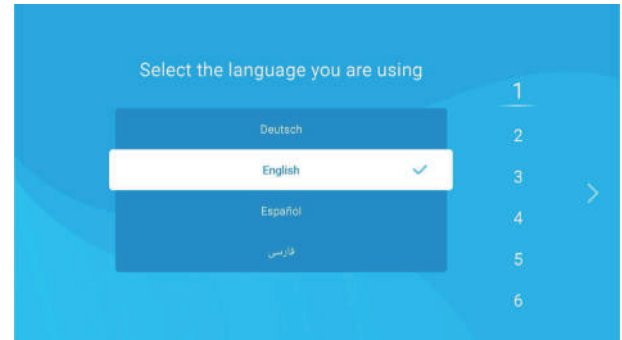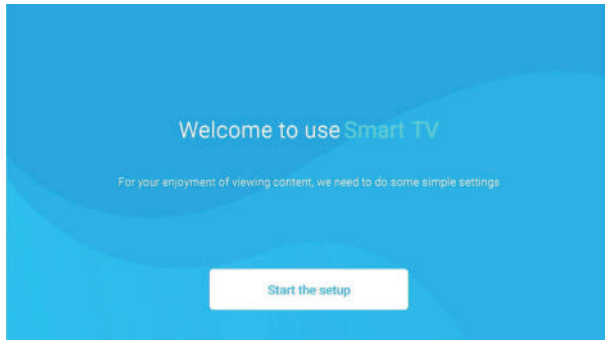

Press ▼/▲ to choose the country. Press the<OK>key to confirm, enter the next step, press ◀ to return to the previous step, and press ► to directly enter the next step.

 
 
Press ▼/▲ to select the time zone you are using. Press the<OK>key to confirm, enter the next step, press ◀ to return to the previous step, and press ► to directly enter the next step.

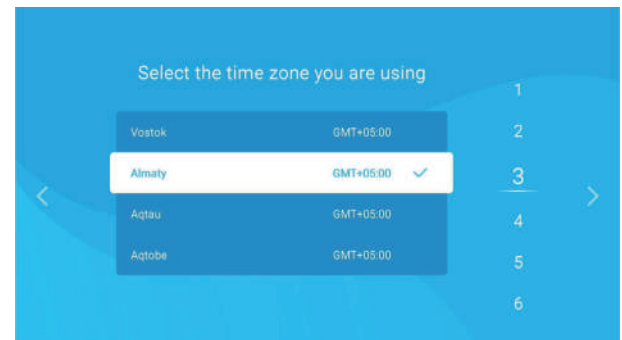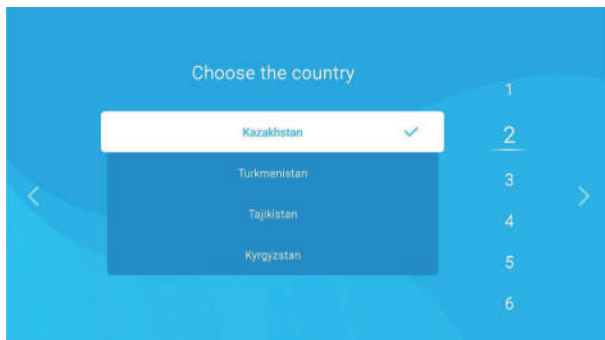

Press ▼/▲ to select the StoreMode. Press the<OK>key to confirm, enter the next step, press ◀ to return to the previous step, and press ► to directly enter the next step.



Set your TV network:

  1. Wired connection: press ◀ to go back to the previous step, and press ► to go directly to the next step.

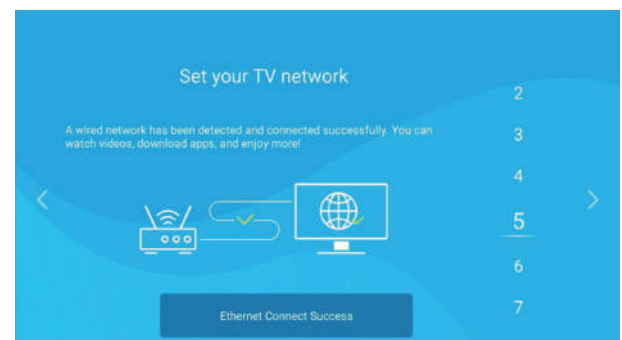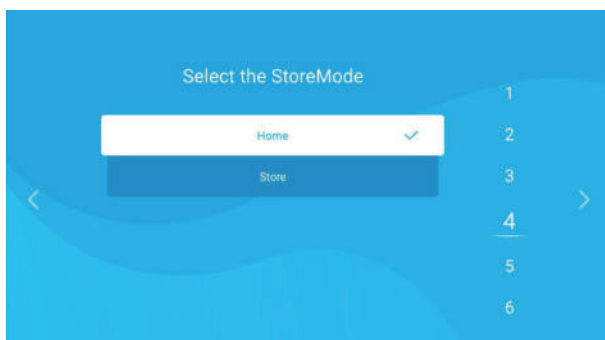



2. WIFI wireless connection: press ▼/▲ to select WIFI, press<OK>to connect, press ◀ to return to the previous step, and press ▶ to directly enter the next step.

  Scan 2D code to download mobile terminal to connect TV.Press ◀ to go back to the previous step, and press ▶ to go directly to the next step.

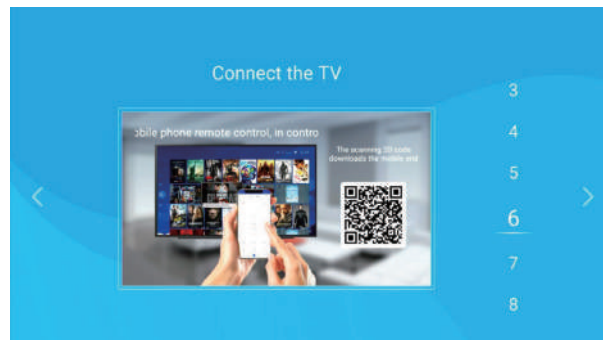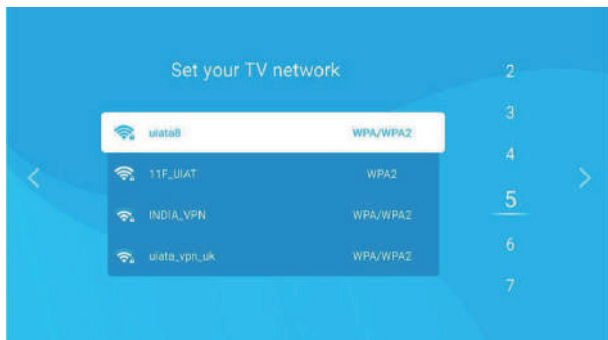

Set Password and press the<OK>key to confirm, enter the next step, press ◀ to return to the previous step, and press ▶ to directly enter the next step.

  Press ▼/▲ to select the way to watch TV programs or sources.Press<OK>or ▶ Confirm to enter the corresponding selected channel or homepage, and press ◀ to return to the previous step.

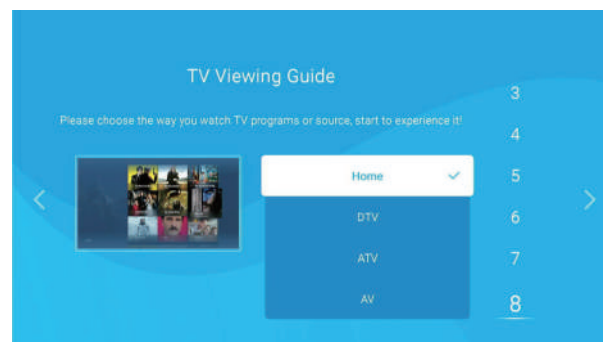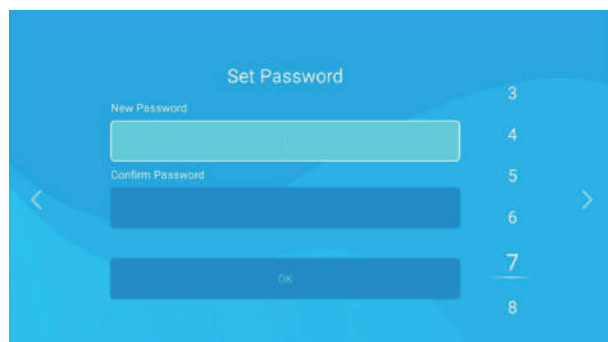


Mine Page

The following is the main menu interface.Press ▼/▲ to switch the navig

This page contains a row of favorite apps and a row of tools.

 The tools include: Fav Apps, My Apps, App Store, Assistant, Media, Scr and Settings.

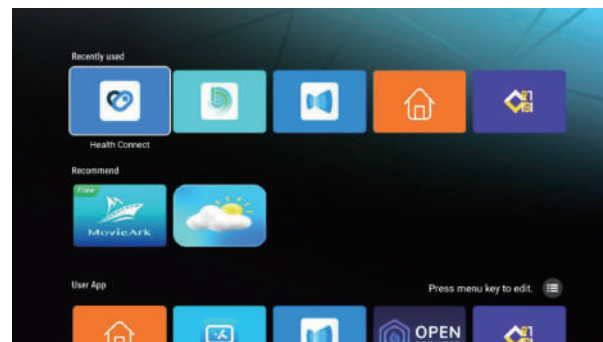

Fav Apps

You can view or add all of your favorite apps here.

My Apps

Press ▼/▲/◀/▶ to select My Apps, and press the<OK>key to enter the My Apps interface, which displays the software in categories according to Recently used, Recommend, User App and Update.

App Store

Press ▼/▲/◀/▶ to select the App Store, and press the<OK>key to enter the App Store interface, where you can search for and install the desired application software.

Search

 
 
Press ▼/▲ to select Search, and press<OK>to enter the Search interface, where you can enter the software name to search.

Recommend

Press ▼/▲ to select Recommend, and press▶ to enter the Recommend interface, where the recommended software is displayed.

Classify

Press ▼/▲ to select Classify, and press▶ to enter the Classify interface. This interface displays the software by category. The classification is intuitive. You can select the desired software by category.

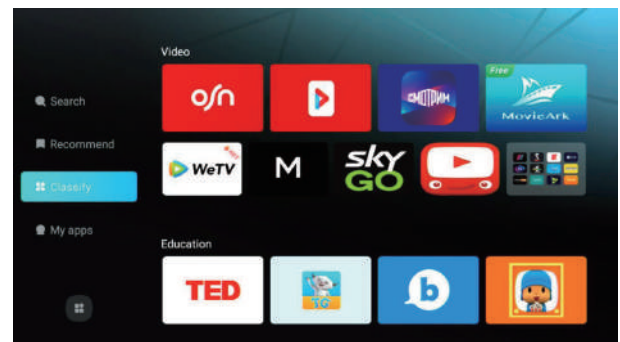
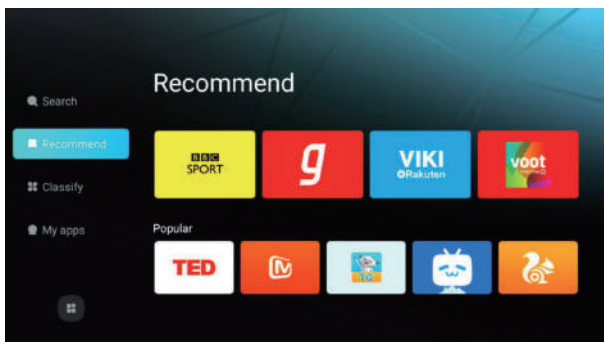


My apps

Press ▼/▲ to select My apps, and press▶ to enter My apps interface, which displays the software you have recently used.

Latest version

  Press ▼/▲ to select , press<OK>to enter the latest version interface, and press <OK>to update to the latest version.

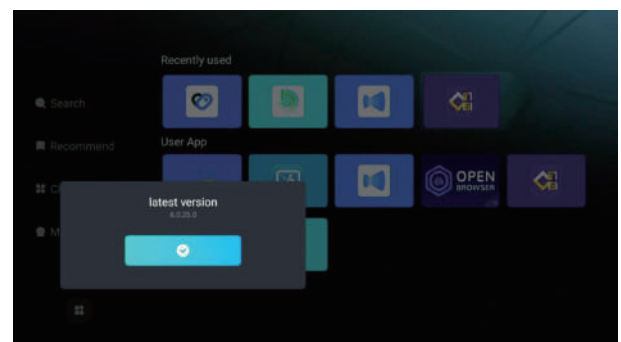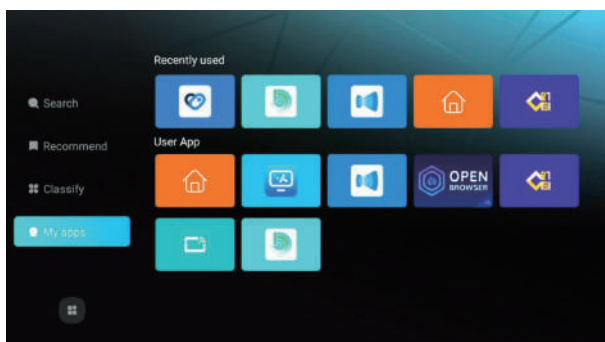


Assistant

Press ▼/▲/◀/▶ to select Assistant, and then press the<OK>key to enter the Assistant page for the next operation.





Optimize
Deep clean
Apps management

 Network test
Network speed test
Optimize regularly

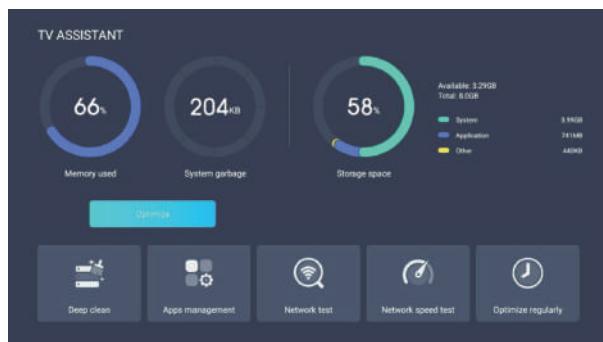

  Increase reaction speed.
Clean up the application data and user files.
App uninstall/Permission manage/
App auto start/Clean apk
Test the current network condition.
Test the current network speed.
Set the periodic optimization time.
(1 hour/2 hour/4 hour/8 hour)

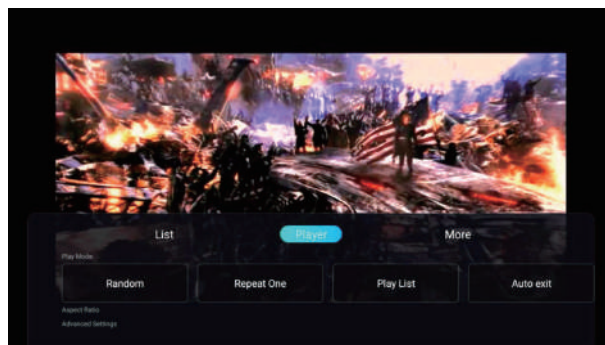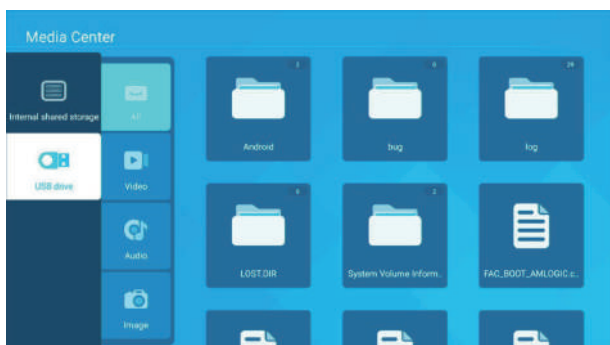

Media

After inserting the USB device, the system will pop up to prompt you whether to enter the Media page. Select OK to enter.

If there is no such page, you can press ▼/▲/◀/▶ to select Media, and then press the <OK> key to enter the Media page for the next operation.

You can also press the MEDIA button on the remote control to access this page.

After entering, the page is displayed as follows.

Video

Press ▼/▲ to select the video, and then press ▼/▲/◀/▶ to select the video you want to play.

Press the <MENU> key to display the lower menu page.

List

Press the <Menu> key to enter the lower menu page, and press ◀/▶ to select the List. This page shows all available videos.

Player

Press the <Menu> key to enter the lower menu page, and press ◀/▶ to select the Player.

1. Press ▼/▲ to select the menu.
(option: Play Mode/Aspect Ratio/Advanced Settings)
2. Press <OK>/◀/▶ to adjust or select.

Play Mode

Press ▼/▲ to select Play Mode, and then press ◀/▶ to select.
(option: Random/Repeat One/Play List/Auto exit/Repeat All)

Aspect Ratio

Press ▼/▲ to select Aspect Ratio, and then press ◀/▶ to select.
(option: Auto/4:3/16:9/Zoom1/Zoom2)

Advanced Settings

Press ▼/▲ to select Advanced Settings, and then press ◀/▶ to select.
(option: Audio Track/Subtitle Track/Region Language/External Subtitle/Toggle list display/Information)

Audio Track

Press ◀/▶ to select Audio Track, and then press <OK> to select.

Subtitle Track

Press ◀/▶ to select Subtitle Track, and then press <OK> to select.

Region Language

Press ◀/▶ to select Region Language, and then press <OK> to display all Region Languages.
(option: Default/West Euro/Center Euro/Baltic/Cyrillic/Arabic/Greek/Hebrew/Turkey/Thai/Vietnamese/Chinese)

External Subtitle

Press ◀/▶ to select External subtitle, and then press <OK> to select the external subtitle you want to add.

Toggle list display

Press ◀/▶ to select Toggle list display, and press the <OK> key to switch on/off.

Information

Press ◀/▶ to select Information, and then press <OK> to display the specific information of the current video.

2.4 Sound Settings

Press ▼/▲/▶ to select Sound Settings, and press <OK> to enter the corresponding setting page.

Audio

Press ▼/▲ to select the Audio, and then press ▼/▲/◀/▶ to select the audio you want to play.

Press the <MENU> key to display the lower menu page.

List

Press the <Menu> key to enter the lower menu page, and press ◀/▶ to select the List. This page shows all available audios.

Player

Press the <Menu> key to enter the lower menu page, and press ◀/▶ to select the Player.

1. Press ▼/▲ to select the menu.

(option: Play Mode/Advanced Settings)

2. Press <OK>/◀/▶ to adjust or select.

Play Mode

Press ▼/▲ to select Play Mode, and then press ◀/▶ to select.

(option: Random/Repeat One/Play List/Auto exit/Repeat All)

Progress Jump

Press ◀/▶ to select Progress Jump, and then press <OK> to select.

Toggle list display

Press ◀/▶ to select Toggle list display, and press the <OK> key to switch on/off.

Information

Press ◀/▶ to select Information, and then press <OK> to display the specific information of the current audio.

More

Press the <Menu> key to enter the lower menu page, and press ◀/▶ to select the More.

Press ▼/◀/▶/<OK> to select Image Settings or Sound Settings.

Image Settings

Press ▼/▲/▶ to select Image Settings, and press <OK> to enter the corresponding setting page.

Image

Press ▼/▲ to select the Image, and then press ▼/▲/◀/▶ to select the image you want to play.

Press the <MENU> key to display the lower menu page.

Aspect Ratio

Press ▼/▲ to select Aspect Ratio, and then press ◀/▶ to select.

(option: Auto/Full Screen/Zoom Out/Original/Zoom1/Zoom2)

Rotate

 
 
Press ▼/▲ to select Rotate, and then press ◀/▶ to select.

(option: Default/Rotate Right/Rotate Left)

Advanced Settings

Press ▼/▲ to select Advanced Settings, and then press ◀/▶ to select.

(option: Play Slide/Interval Time/Set as Wallpaper/Toggle list display/Information)

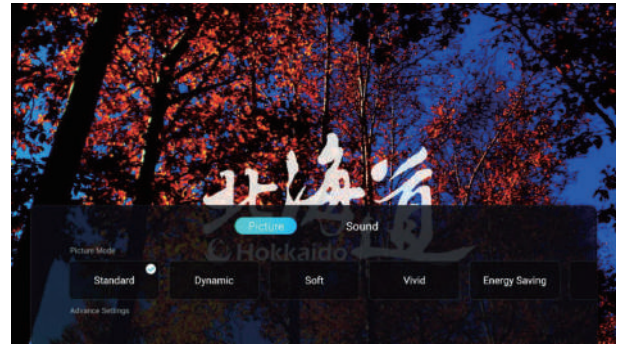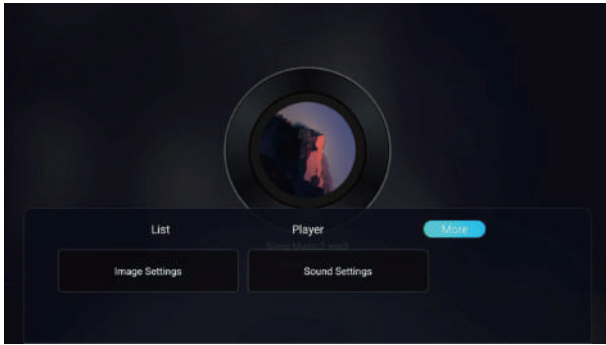

Play Slide

Press ◀/▶ to select Play Slide, and then press <OK> to display all pictures.

Interval Time

Press ◀/▶ to select Interval Time, and press <OK> to enter the corresponding setting page.

(option:3Sec./5Sec./8Sec./12Sec.)

Set as Wallpaper

Press ◀/▶ to select Set as Wallpaper, and then press <OK> to set as Wallpaper.

Toggle list display

Press ◀/▶ to select Toggle list display, and press the<OK>key to switch on/off.

 
Information

Press ◀/▶ to select Information, and then press <OK> to display the specific information of the current image.

Sound Settings

Press ▼/▲/▶ to select Sound Settings, and press <OK> to enter the corresponding setting page.

2.5 Screen Share


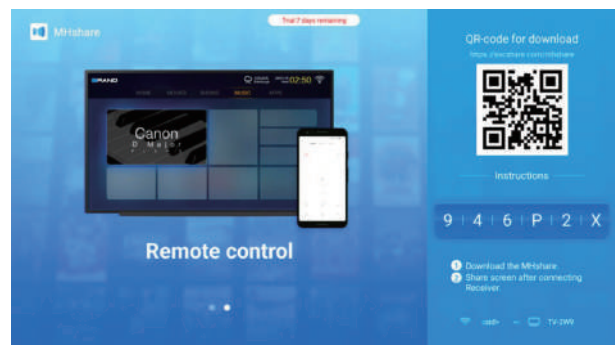


Screen Share

Press the ◀/▶ to select Screen Share, and then press the<OK>key to enter the Screen Share page for the next operation. You can operate according to the screen instructions to achieve screen sharing.

Settings

  Press ◀/▶ to select Settings, and then press the <OK> key to enter the Settings page for the next operation.

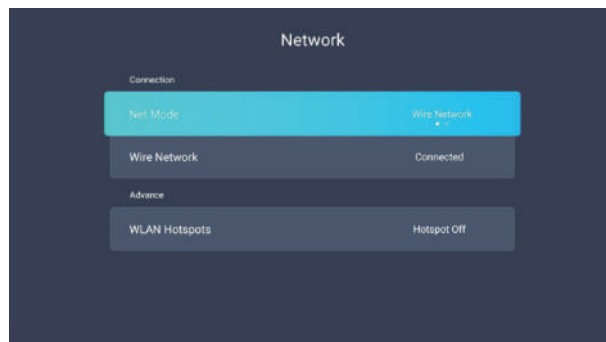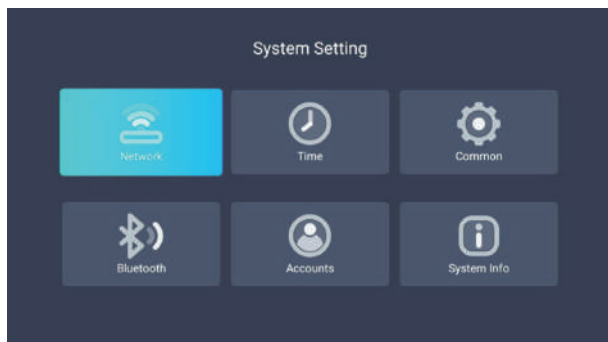

Network

On the Settings page, press ▼/▲◀/▶ to select Network, and then press <OK> to enter the Network page for the next operation.

Net Mode

Press ▼/▲ to select Net Mode, and then press ◀/▶ to select Wire Network or Wireless.

WLAN Hotspots

Set the TV as a WIFI transmitter.



Time



On the Settings page, press ▼/▲◀/▶ to select Time, and then press <OK> to enter the Time page for the next operation.

Auto Attach	Get the current time automatically after opening.
Time Zone	Set the current time zone.
Time Edit	Set time.
Date Format	Set current date.
24 Hours	Turn 24-hour format on or off.
Screen Saver Time	Set screen saver time (off/1min/2min/3min/4min/5min).

Common

    On the Settings page, press ▼/▲/◀/▶ to select Common, and then press <OK> to enter the Common page for the next operation.

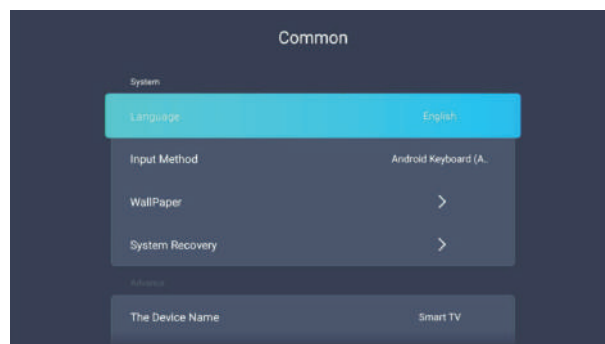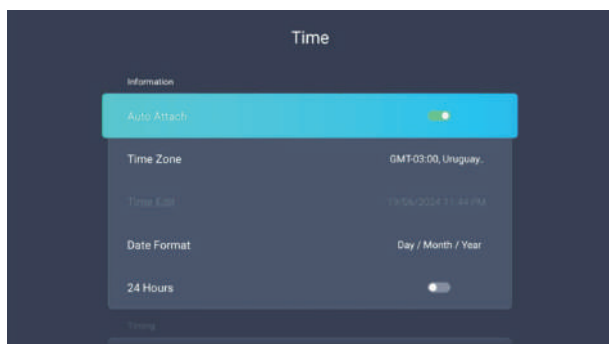

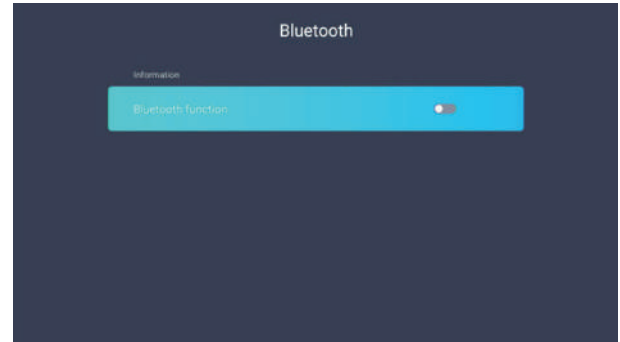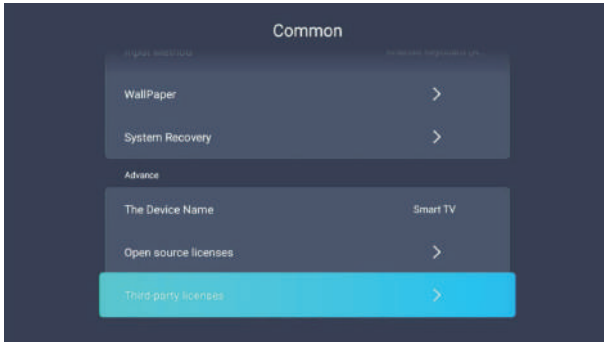


Press ▼ / ▲ to select Language/Input Method/Wallpaper/System Recovery/The Device Name/Open source licenses/Third-party licenses.

Language	Set the system language to English by default.
Input Method	Set input method.
Wallpaper	Set wallpaper.
System Recovery	Restore the system settings to the original state.
The Device Name	Set Device Name.
Open source licenses	View open source licenses.
Third-party licenses	View third party licenses.

Bluetooth

 On the Settings page, press ▼/▲◀/▶ to select Bluetooth, and then press <OK> to enter the Bluetooth page for the next operation.

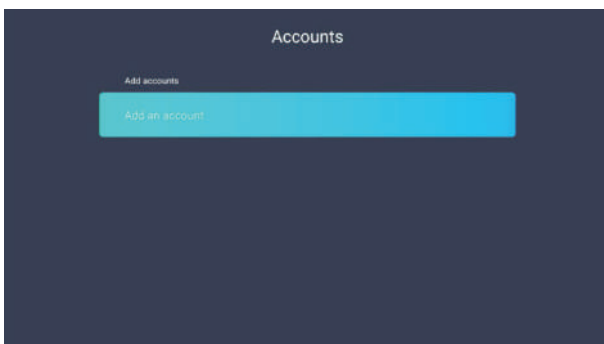

Accounts

On the Settings page, press ▼/▲◀/▶ to select Accounts, and then press <OK> to enter the Accounts page for the next operation. On this page, you can add an account or exit the current account.

System Info

On the Settings page, press ▼/▲/◀/▶ to select System Info, and then press <OK> to enter the System Info page for the next operation. You can view system related information on this page.

2.6 TV Setting

In the TV viewing interface, press the <Menu> button in the remote control to enter the TV setting menu.

Press ◀/▶ in the remote control to select. Press the <OK> key in the remote control to enter.

 
(option:Source/Picture/Sound/Channel/Common)

Source

Press the <Menu> key to enter the main menu interface, and press ◀/▶ to select the Source menu.

In this interface, you can press ▼/◀/▶/<OK> to switch the signal source.

(option: DTV/ATV/AV/HDMI 1/HDMI 2/HDMI 3)

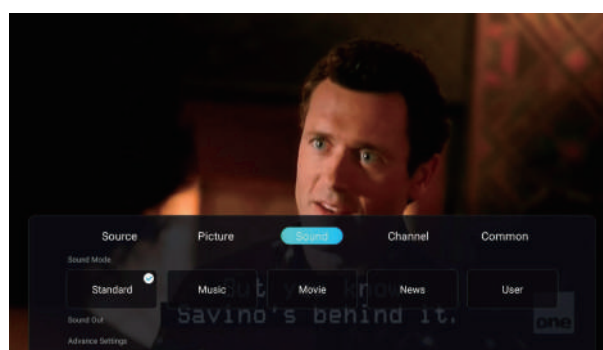

Picture

Press the <Menu> key to enter the main menu interface, and press ◀/▶ to select the Picture menu.

1.Press ▼/▲ to select the menu.

(option: Picture Mode/Aspect Ratio/Advance Settings)

2.Press <OK>/◀/▶ to adjust or select.

Picture Mode

Press ▼/▲ to select Picture Mode.Press ◀/▶ to select the image mode.

(option: Standard/Dynamic/Soft/Vivid/Energy Saving/User)

Standard

Standard picture effect.

Dynamic

Enhance the contrast, chroma and sharpness of the picture, so that the picture is in dynamic color balance.

Soft

Reduce the contrast, brightness, chroma and definition of the picture to make the picture look soft.

Vivid

Enhance the contrast, chroma and definition of the picture to make the color more bright.

Energy Saving

Reduce energy consumption.

User

Select Custom Image Settings.

Note: You can press the PMODE shortcut key in the remote control to select the sound mode.

Aspect Ratio

Press ▼/▲ to select Aspect Ratio. Press ◀/▶ to select.

(option: Auto/16:9/4:3/Zoom1/Zoom2)

Advance Settings

Press ▼/▲ to select Advance Settings. Press ◀/▶ to select.

(option: Noise Reduction/Color Temp/Backlight/DLC)

Noise Reduction

Sets options for the intensity of image noise elimination.

Press ◀/▶ to select Noise Reduction, press the <OK> key to enter the selection page, and press ◀/▶ to select.

(option: Off/Low/Middle/High)

Color Temp

Adjust the overall color of the image.

Press ◀/▶ to select Color Temp, press the <OK> key to enter the selection page, and press ◀/▶ to select.

(option: Cool/Normal/Warm)

Cool	The picture is green and blue, less red, and the overall color is light. The picture is more fresh and elegant.
Normal	The picture is not biased and the color is moderate.
Warm	The picture is red and green, less blue, and the color is more bright and soft.

Backlight

Press the ◀/▶ key to select Backlight, press the <OK> key to enter the adjustment page, and press the ◀/▶ key to adjust.

DLC

Press ◀/▶ to select DLC, press the <OK> key to enter the selection page, and press ◀/▶ to select On/Off.

Sound

Press the <Menu> key to enter the main menu interface, and press ◀/▶ to select the Sound menu.

1. Press ▼/▲ to select the menu.
(option: Sound Mode/Sound Out/Advance Settings)
2. Press <OK>/◀/▶ to adjust or select.

Sound Mode

Press ▼/▲ to select Sound Mode. Press ◀/▶ to select the sound mode.

(option: Standard/Music/Movie/News/User)

Standard	A balanced sound in any environment.
Music	The treble is strengthened and the bass is lowered.
Movie	Enhance the high and low pitch, rich in melody, and enhance the on-site effect.
News	Enhance voice.
User	Select Custom Sound Settings.

Note: You can press the SMODE shortcut key in the remote control to select the sound mode.

Sound Out

Press ▼/▲ to select Sound Out. Press ◀/▶ to select the audio output mode.
(option: Internal TV Speaker/SPDIF/HDMI ARC/Bluetooth/Headphones)

Advance Settings

Press ▼/▲ to select Advance settings. Press ◀/▶ to select.
(option: Balance/AVC/Hearing Impaired/Audio Description/Digital Audio Output/
SPDIF Delay/Surround/Audio Only)

Balance

Adjust various frequency components to compensate the defects of loudspeaker and sound field.

Press ◀/▶ to select Balance, press the <OK> key to enter, and press ◀/▶ to adjust.

AVC

Press the ◀/▶ keys to select AVC, and press the <OK> key to switch on/off.

After the "Automatic Volume Control" is turned on, once the volume is set, it can keep the volume in the speaker stable no matter what the TV sound of each channel is different.

Hearing Impaired

Press the ◀/▶ keys to select Hearing Impaired, and press the <OK> key to switch on/off.

Audio Description

Press the ◀/▶ keys to select Audio Description, and press the <OK> key to switch on/off.

Digital Audio Output

Press ◀/▶ to select Digital Audio Output, which is PCM by default.

SPDIF Delay

Press ◀/▶ to select SPDIF Delay, press the <OK> key to enter, and press ◀/▶ to adjust.

Surround

The direction of each sound source in the original signal is reproduced to make the user feel surrounded by sounds from different directions.

Press the ◀/▶ keys to select Surround, and press the <OK> key to switch on/off.

Audio Only

Press ◀/▶ to select Audio Only, and press the <OK> key to switch on/off

Channel

Press the <Menu> key to enter the main menu interface, and press ◀/▶ to select the Channel menu.

Advance Settings

(option: Antenna Type/Audio Language/Subtitle/Signal Information/Scan/Channel List/EPG/CI Card)

Antenna Type

Press ◀/▶ to select Antenna Type, and then press the <OK> key to enter.

 
Press ◀/▶ to select Air/Cable/Satellite.

Audio Language

Press ◀/▶ to select Audio Language, and then press the <OK> key to enter.

Subtitle

Press ◀/▶ to select Subtitle, and then press the <OK> key to enter.

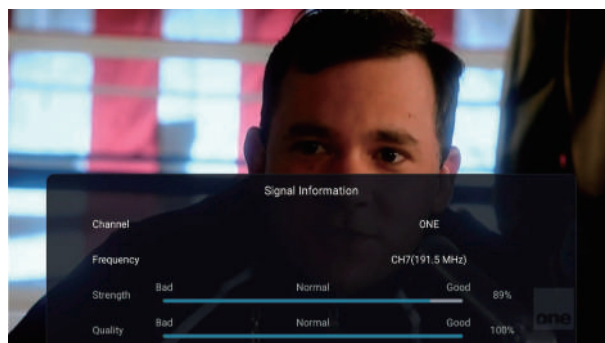

Signal Information

Press ◀/▶ to select Signal Information, and then press the <OK> key to enter.

Scan

Press ◀/▶ to select Scan, and then press the <OK> key to enter.

Press ▼/▲ to select Search Type/Auto Scan/Digital Manual Scan.

Auto Scan

Start Scan will automatically search for valid program channels. Press ▼/▲ to select LCN/Start Scan.

LCN

Press ▼/▲ to select On/Off.

Start Scan

Press <OK> to enter, and then start searching.

 
 
If you want to stop the search process, you can press the Exit or Menu button.

Digital Manual Scan

Manually search for a valid digital program channel.

Press ▼/▲ to select Digital Manual Scan, press <OK> to enter, and then start manual channel search.

If you want to stop the search process, you can press the Exit or Menu button.

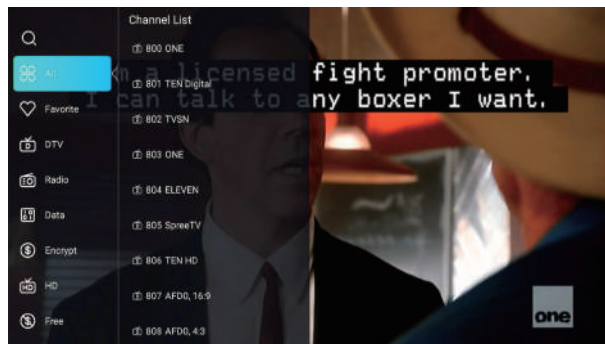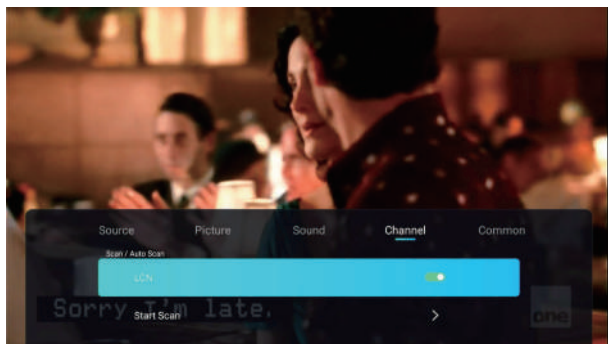

Channel number

Press ▼/▲ to select Channel number, and press ◀/▶ to select channel number.

Frequency

Press ▼/▲ to select Frequency, and press ◀/▶ to select.

3. Technical Specification

Product Model	40AOS480G	
Screen Size	40" diagonal	
Aspect Ratio	16:9	
Power Supply	AC 100-240V~,50/60Hz	
Power Consumption	65W	
TV System	PAL B/G D/K I, SECAM B/G D/K DVB-T/T2/C/S/S2(s/s2 option) (There is no DVB-C signal in some Countries or Areas.)	
Audio Output Power (Internal)	8Wx2	
Input Terminal	Antenna Input	x 2 (S2 option)
	USB Input	x 2
	HDMI Input	x 3
	VGA Input	NO
	PC AUDIO Input	NO
	Audio Input (L/R)	x 1
	Video Input	x 1
	YPbPr Input	NO
	RJ45 Input	x 1
	CI card In	x 1
	SCART In/Output	NO
	DC In (12V)	NO
	CARD SLOT	NO
Output Terminal	Earphone	x 1
	Audio Line Out(L/R)	NO
	Video Output	NO
	Optical	NO
	Coaxial out	x 1
Working Temperature	0°C~40°C	
Working Humidity	20% ~ 80% Non-condensing	

Note: the specification shown above may change without notice for quality improvement.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

4. Supported Signal Modes

A.HDMI Mode

Resolution	Horizontal Frequency (Khz)	Vertical Frequency (Hz)
480p	31.468	59.94
576p	31.25	50.00
720p	45.00	60.00
1080i	33.75	60.00
1080p(1920x1080)	67.50	60.00

-When the signal received by the Display exceeds the allowed range, a warning message will appear on the screen.

-You can confirm the input signal format onscreen.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

5. Simple Troubleshooting

If the display fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

Symptom	Solution
Power cannot be turned on.(Power indicator does not light.)	-Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational
No Input Signal message appears.	-Check that the signal line is connected properly. -Check that the power of the relevant peripherals is turned on. -Check that the Input option that has been selected matches with the input signal.
The remote control does not function properly.	-Check the batteries are not drained.(Use new batteries.) -Check that the remote control is within the operating range. -Check that the remote control is pointed to the remote control window on the display. -Check that there are no obstacles between the remote control and the remote control window.
Flashing spots or stripes appear on the screen.	-Check that there are no emission (Car, HV cable or Neon lamp) or other possible interference sources.
Image colour or quality deteriorates.	-Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc. -For more information about video settings, refer to OSD Functions in Chapter 2.
Screen position and size are incorrect.	-Check that the screen position and size is adjusted appropriately.
Image or colour is incorrect.	-Check that the signal line is connected properly. -When connecting to a PC, you can change the resolution of the PC to acquire the correct image. The discrepancy of the PC output signal may affect the display of the image.
Display warning message.	-Check that the input signal line is properly fixed. -Select the correct input signal. -For more information, refer to Supported Signal Modes in Chapter 4.



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati. Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs