

INSTRUCTIONS MANUAL WALL MOUNTED HEATER

MODEL NO.: GRW-2025R



INTRODUCTION

- Before using your new heater, please carefully read through the following instructions. PLEASE KEEP THIS BOOKLET SAFE FOR FUTURE REFERENCE.
- After removing the packaging, make sure that the appliance is in good condition.
- The packaging materials may contain plastic, nails etc., which may be hazardous and therefore should not be left within the reach of children.

IMPORTANT SAFEGUARDS

Thank you for buying our product. Please read this instruction carefully before operating the heater. Keep this operating instruction for future reference.

- The heater should be hung on the wall and make the wind outlet down or be placed on flat appliance. You must not place it precipitantly or tipsily.
- Please do not use the heater in the place where full of combustible or explosive gas. Don't cover the wind outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The heater must not be located immediately below an electrical socket. The electrical socket must be equipped with earth wire, its capacity should be 250V~10A or exceed 250V~10A. The socket and the power plug should be in good connecting condition.
- If nobody is in using or you are repairing the heater, please pull off the plug.
- Please don't touch the heater by the wet hand or other conductor.
- If motor is not working properly, please stop it immediately.
- 8. During using the heater, please do not open the door or window continually otherwise it will influence the heating effect.
- 9. If want to shut off the heater, press the on/off switch to off, then the heater will keep the fan working 30 seconds until it blowing out cool wind, then the heater will stop working, and you may pull off the plug.
- 10. Please remove the baffle before using the remote control.
- 11. If don't use remote control, please put the insulation paper back into the remote control to ensure that the battery power is enough.
- 12. The heater must be installed at least 2 m above the floor.
- 13. If the heater needs repair, please ask for special person or our company authorized maintenance department.

- 14. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 15. Children of less than 3 years should be kept away unless continuously supervised.
- 16. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- 17. CAUTION —some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

SPECIFICATIONS

Model names	Voltage	Power
GRW-2025R	220-240V~ 50Hz	2000W

INSTALLING THE DEVICE



The heater shall be installed and used according to the safe standard.



To avoid all dangers, follow the safety instructions.

- The installation must be done by the service agent or similarly qualified persons in order to avoid a hazard.

- **Important!** Make sure that there are no electric cables or other installations (for example water pipes) near the drill holes. Make sure that the appliance is securely and vertically fitted to the wall.

Get two holes on the wall 2 m above the floor and near the corner more

25 mm, be sure to make the diameter just as same as the expanding pipe. Fix two screws on the expanding pipe, keep the tips of the screws out for 10mm, and hang up the machine after the screws are fixed enough.

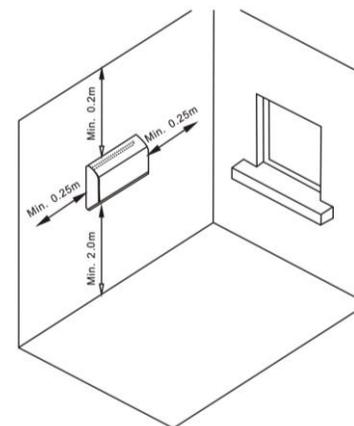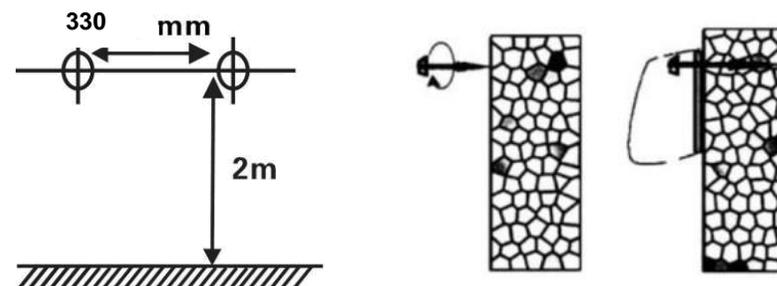

OPERATION INSTRUCTION

1. Before inserting the plug into an electrical outlet, make sure that the electrical supply in your area matches that on the rating label on the unit.
2. Carefully remove the heater from the plastic bag and the carton.
3. Place the heater on a firm level surface, setting the master button to “-” position. plug the cord set into a AC220-240V~ electrical outlet, with “BEE” sounds the “Power” light is on and the heater will show the default temperature, it will twinkle 3 seconds.

1) HEATING PERPARE

Set time

Before turn on the heater (in standby) and set the time as right time. Press remote control " button, light on control panel, LED display shows 00:00 and "1" light on.

HOUR Press "Set" button one time, LED display front "00" twinkle, press "  two buttons set the Hours from 01--00 (01=1 o'clock, 02=2 o'clock...00=24 o'clock ect.)

MINUTE Press "Set" button again, LED display behind "00" twinkle, press "  two buttons set the minutes from 00--59 (01=1 Minute, 02=2 Minute ect.)

WEEK Press "Set" button again, "1" light twinkle, press "  two buttons set the week from **1-7** (1=Monday...7=Sunday ect.)

PS: Press "Set" button, screen shows number will twinkle 5 seconds, you should operate in time, otherwise appliance will get back to standby. (Appliance will keep the right time until power off)

2) General Using OPERATION

1. Turn the heater ON by pressing remote control the ON/OFF button, the unit will blow the cold air and " light is on.
2. Pressing the "MODE" button on remote control, the unit will blow the warm air and both " and " lights are on.
3. Pressing the "MODE" button second times on remote control, the unit will blow the hot air and both " and " lights are on.
4. Pressing the "MODE" button Three times on remote control, the unit will blow the cold air and " light is on.

PS: For smart operate, customer only press the one start button near about master button, the heater will working with hot air and both " " " " lights are on.

3) 24H Timer FUNCTION

1. Open the appliance as working conditions, (fan, warm, hot are all ok). This function through by Remote control " button.

2. Press " button, set the timer up to 24 hours, keep press " button to increase the hours from 00--24 (00=close, 01=1 hour, 02=2 hours...24=24 hours ect.) and the " light is on.

PS: set as "00" means no set timer, the " light is off.

4) THERMOSTAT INSTRUCTIONS

1. Open the appliance as working conditions, (fan, warm, hot are all ok). This function only through by Remote control.
2. To adjust temperature, press the "  to set the desired temperature and the temperature set from 10°C to 49°C with the control panel " light on.
3. When the air temperature drops 2 degree below the set temperature, the heater will start heating with "I/W" (1000W).
4. When the air temperature drops 4 degree below the set temperature, the heater will start heating with "II/H" (2000W).
5. When the air temperature high 1 degree or ≤ the set temperature, the heater will blow the cold air.

5) Week Timer FUNCTION

1. Open the appliance as working conditions, (fan, warm, hot are all ok). This function only through by Remote control.
2. First press " button, then press "  two buttons select which model you want. This function have 6 models, **P1-P5** is smart model, appliance have own schedule, pls check the details as below :

Week Model	1 (Mo)	2 (Tu)	3 (We)	4 (Th)	5 (Fr)	6 (Sa)	7 (Sa)
P1	8:00-17:00	8:00-17:00	8:00-17:00	8:00-17:00	8:00-17:00	8:00-17:00	8:00-17:00
P2	18:00-07:00	18:00-07:00	18:00-07:00	18:00-07:00	18:00-07:00	18:00-07:00	18:00-07:00
P3	8:00-17:00	8:00-17:00	8:00-17:00	8:00-17:00	8:00-17:00	OFF	OFF
P4	18:00-07:00	18:00-07:00	18:00-07:00	18:00-07:00	18:00-07:00	OFF	OFF
P5	OFF	OFF	OFF	OFF	OFF	00:00-24:00	00:00-24:00

3.P6 is user-defined, press “ ” two buttons select P6 model,

WEEK Press “” button 1st time, “1” lights on, means “Monday”.

HOUR Press “” button 2nd times, LED display front “00” twinkle, press “ ” two buttons set the Hours from 01--00(01=1 o'clock,02=2 o'clock...00=24 o'clock ect.)

MINUTE Press “” button 3rd times,LED display behind “00” twinkle “ ” two buttons set the Hours from 00--59(01=1 Minute,02=2 Minute ect.)

With the “” light on,it means open time.

HOUR Press “” button 4th times, LED display front “00” twinkle, press “ ” two buttons set the Hours from 01--00(01=1 o'clock,02=2 o'clock...00=24 o'clock ect.)

MINUTE Press “” button 5th times, LED display behind “00” twinkle “ ” two buttons set the Hours from 00--59(01=1 Minute,02=2 Minute ect.)

With the “” light on, it means close time.

The above is for Monday timer set.

4.Press “” button once more, “2” lights on, means “Tuesday”.Pls noted that the operate with open time HOUR/MINUTE and close time HOUR/MINUTE are all same as before Monday.

5.From Monday-Sunday are all set finished, press “” button on remote control 7th times to set from Monday to Sunday's temperature and press “ ” two buttons, select the temperature which you need, the temperature range from 10°C to 49°C.

PS: In Week timer function, when you set today's temperature, the thermostat function will start, the rules same as 4) THERMOSTAT INSTRUCTIONS, Pls noted.

You can set different open time, closed time and temperature within whole week.

6) Window Open Function

1.Window will only be open when the appliance is working. This function only through by Remote control.

2.Press “” button, the “” light is on. The appliance is working as smart saving energy models. (In this function, the appliance is check and record environment temperature in immediately. It will stop working, when the appliance check the environment are drop $\geq 3^{\circ}\text{C}$ within 1 minute. The user should restart the appliance with “ON/OFF” button)

3..Press “” button again, the “” light is off. Window Open Function is closed.

7) Delay Function

1. This function can be use should be fit two points:
1. the appliance is in the standby state.
2. before the appliance working.

(This function only can be operated by Remote control.)

2.Press “” button light on LED display ,then press “” button one time, the “” “ON” light and “00” twinkle. Press “ ” two buttons set the Hours from 01--24(01=1 o'clock,24=24 o'clock...00=Closed ect.)

-----**This is open time**

3.Press “” button again, the “” “OFF” light and “00” twinkle. Press “ ” two buttons set the Hours from 01--24(01=1 o'clock,24=24 o'clock...00=Closed ect.)

-----**This is close time**

PS: Press “” button, screen shows number will twinkle 5 seconds, you should operate in time ,otherwise appliance will get back to standby, you

need press “” button to awaken the appliance and reset again all. (This function is one-time and must be reset if the power is cut off.)


8)Child-Lock Function

1. This function only through by Remote control. When appliance plug in, this function can be used in any models.

2. Press “

3. Press “

CONTROL PANEL VIEW:

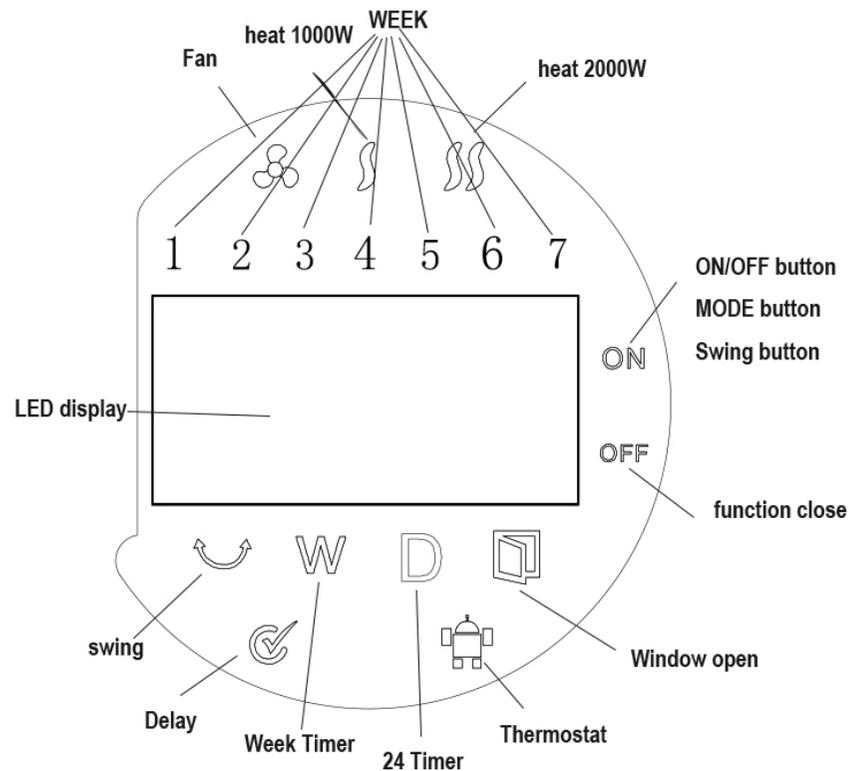

REMOTE CONTROL VIEW:

1.Remote control, please use 2XAAA batteries (no include) .

2.The remote control power button is labeled as such



1. “

OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheating. For example: due to the total or partial obstruction of the vents. In this case, unplug the appliance,

wait about 30 seconds for it to cool and remove the object which is obstructing the vents. Then switch it back on as described above. The appliance should now operate normally. If the problem persists, please contact Customer Service for assistance.

CLEANING & MAINTENANCE

- Before undertaking any cleaning or maintenance on the appliance, disconnect it from the power supply.
- For cleaning it is recommended to use a soft moist rag and neutral detergent. Do not use an abrasive cloth or devices which could affect the appearance of the appliance. Check that the hot air outlet and the ventilation inlet are free of dust and dirt.
During cleaning, be careful not to touch the heating elements.
- To open the filter on the back for cleaning, press the top of plastic net at back.
- In case of breakdown and/or poor functioning of the appliance, disconnect the appliance from the power supply and contact an authorized repairer.

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

Environment

Meaning of the crossed-out wheeled dustbin:



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

Technical Specifications – Model: W-HW2029

Item	Symbol	Value	Unit
------	--------	-------	------

Heat Output

Nominal heat output	P _{nom}	2.000	kW
Minimum heat output (indicative)	P _{min}	1.133	kW
Maximum continuous heat output	P _{max,c}	1.963	kW

Type of heat output / room temperature control (select one):

- Single-stage heat output, without room temperature control: **[no]**
- Two or more manual stages, without room temperature control: **[no]**
- Mechanical thermostat for room temperature control: **[no]**
- Electronic thermostat for room temperature control: **[no]**
- Electronic control + day timer: **[no]**

- Electronic control + week timer: **[yes]**

Power Consumption

Operating Mode	Symbol	Value	Unit
----------------	--------	-------	------

In off mode	P _o	N/A	W
In standby mode	P _{sm}	0.31	W
In idle mode	P _{idle}	0.31	W
In network standby mode	P _{nsm}	N/A	W

Other Control Functions:

- Standby mode with display of information/status: **[yes]**
- Open window detection: **[yes]**
- Working time limitation: **[yes]**
- Room temperature control with presence detection: **[no]**
- Distance control option: **[no]**
- Adaptive start control: **[no]**
- Black bulb sensor: **[no]**
- Self-learning functionality: **[no]**
- Control accuracy: **[no]**

Energy Efficiency:

- Seasonal space heating energy efficiency in active mode ($\eta_{s,on}$): **92.0%**

UPUTSTVO ZA UPOTREBU ZIDNA GREJALICA

MODEL : GRW-2025R



UVOD

- Pre upotrebe grejalice, pažljivo pročitajte sledeća uputstva. MOLIMO VAS DA OVU BROŠURU ČUVATE ZA BUDUĆU UPOTREBU.
- Nakon uklanjanja ambalaže, proverite da li je uređaj u dobrom stanju.
- Materijali za pakovanje mogu sadržavati plastiku, itd., što može biti opasno i stoga ne treba ga ostavljati na dohvata ruke dece.


VAŽNE ZAŠTITNE MERE

Hvala Vam što ste kupili naš proizvod. Molimo Vas da pažljivo pročitate ovo uputstvo pre prvog uključivanja grejalice. Sačuvajte ovo uputstvo za upotrebu za buduću upotrebu.

1. Grejalica treba da bude okačena na zid i da vazduh izlazi nadole.
 - 2. Molimo Vas da ne koristite grejalicu na mestu zapaljivog ili eksplozivnog gasa. Ne pokrivajte izlaz vazduha.
- 3. Ako je kabl za napajanje oštećen, mora ga zameniti proizvođač ili njegov servisier ili slično kvalifikovana osoba kako bi se izbegla opasnost od strujnog udara.
- 4. Grejač se ne sme nalaziti odmah ispod električne utičnice. Električna utičnica mora biti opremljena žicom za uzemljenje, njen nazivni napon treba da bude 250V ~ 10A. Utičnica i utikač treba da budu dobro povezani.
- 5. Ako se grejalica ne koristi duži vremenski period, izvucite utikač.
- 6. Molimo Vas da ne dodirujete grejalicu mokrom rukom ili drugim provodnikom.
- 7. Ako motor ne radi ispravno, odmah isključite grejalicu.
- 8. Tokom upotrebe grejalice, nemojte stalno otvarati vrata ili prozor, inače će to uticati na efekat grejanja.
- 9. Ako želite da isključite grejalicu, pritisnite prekidač za uključivanje / isključivanje na isključivanje, a zatim će ventilator radi 30 sekundi dok ne počne da duva hladan vetar, onda će grejač prestati da radi, a vi možete povući utikač.
- 10. Uklonite pregradu pre upotrebe daljinskog upravljača.
- 11. Ako ne koristite daljinski upravljač, vratite izolacioni papir u daljinski upravljač kako biste bili sigurni da je snaga baterije dovoljna.
 - 12. Grejalica mora biti postavljena najmanje 2 m iznad poda.
- 13. Za bilo koju vrstu popravke, molimo Vas da zatražite kvalifikovanu osobu ili odeljenje za održavanje ovlašćenog naše kompanije.
- 14. Ovaj uređaj mogu koristiti deca uzrasta od 8 godina i više i osobe sa smanjenim fizičkim, senzornim ili mentalnim sposobnostima ili nedostatkom iskustva i znanja ako su dobili nadzor ili instrukcije u


vezi sa korišćenjem uređaja na bezbedan način i razumeju moguće opasnosti. Deca ne smeju da se igraju sa uređajem. Čišćenje i održavanje uređaja ne smeju vršiti deca bez nadzora.

- 15. Decu mlađu od 3 godine treba držati podalje od uređaja.
- 16. Deca uzrasta od 3 godine i mlađa od 8 godina ne smeju da uključe, regulišu i čiste uređaj ili obavljaju održavanje korisnika.
- 17. OPREZ - neki delovi ovog uređaja mogu postati veoma vrući i izazvati opekotine. Posebnu pažnju treba posvetiti tamo gde su prisutna deca i ugrožene osobe.

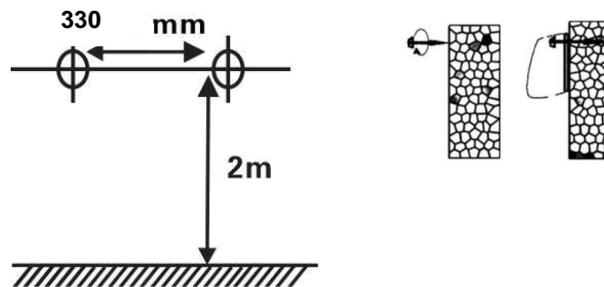

SPECIFIKACIJE

Model	Napon	Potrošnja
GRW-2025R	220-240V 50Hz	2000W

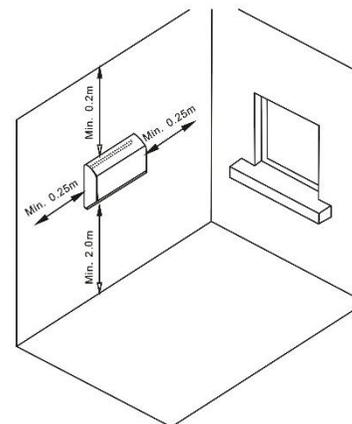

INSTALIRANJE UREĐAJA



Grejalica se instalira i koristi u skladu sa sigurnosnim standardom.

Da biste izbegli sve opasnosti, sledite bezbednosna uputstva.

- Instalaciju mora obaviti serviser ili slično kvalifikovane osobe kako bi se izbegla opasnost.

-Važno! Uverite se da u blizini rupa na koje šrafite grejalicu nema električnih kablova ili drugih instalacija (na primer vodovodnih cevi).

Uverite se da je uređaj sigurno i vertikalno postavljen na zid.

Napravite dve rupe na zidu 2 m iznad poda i a razmakom više 25 mm, budite sigurni da je prečnik rupa isti kao i prečnik držača. Pričvrstite dva šrafa na držač , ostavite vrhove šrafova da vire za 10 mm i o kačite uređaj nakon što su šrafovi dovoljno fiksirani.

UPUTSTVO ZA RAD

1. Pre nego što ubacite utikač u električnu utičnicu, uverite se da je napajanje električnom energijom u Vašem području odgovara onom na nalepnici uređaja.
2. Pažljivo izvadite grejalicu iz plastične kese i kartona.
3. Postavite grejač na čvrstu ravnu površinu, postavite glavni taster na "-" poziciju. Uključite kabl u AC220-240V ~ električnu utičnicu. Zvučni signal će se čuti "Power" svetlo će biti uključeno i grejalica će pokazati podrazumevanu temperaturu, ona će treperiti 3 sekunde.

SU3	8:00-17:00	8:00-17:00	8:00-17:00	8:00-17:00	8:00-17:00	ISKLJU Č ENO	ISKLJU Č ENO
P4	18:00-07:00	18:00-07:00	18:00-07:00	18:00-07:00	18:00-07:00	ISKLJU Č ENO	ISKLJU Č ENO
P5	ISKLJU Č ENO	00:00-24:00	00:00-24:00				

3.P6 je korisnički definisan, pritisnite   " izaberite P6 model.

NEDELJA Pritisnite  " 1. put, "1" svetli, znači "ponedeljak".

SAT Pritisnite  " 2. puta, LED displej "00" treperi, pritisnite   " podesite Sati od 01 - 00 (01 = 1 sat, 02 = 2 sata ... 00 = 24 sati itd.)

MINUT Pritisnite  " 3. puta, LED displej iza "00" treperi "   " podesite minute od 00--59 (01 = 1 minuta, 02 = 2 minuta itd.)

Sa "ON" svetlom uključenim, to znači da je podešeno vreme za uključivanje.

SAT Pritisnite  " 4. puta, LED displej prednji "00" treperi, pritisnite   " podesite Sati od 01 - 00 (01 = 1 sat, 02 = 2 sata ... 00 = 24 sati itd.)

MINUTA Pritisnite  " 5. put, LED displej iza "00" treperi "   " podesite Sati od 00--59 (01 = 1 minuta, 02 = 2 minuta itd.)

Sa upaljenim svetlom "OFF", to znači da je podešeno vreme isključivanja.

Gore navedeno je za ponedeljak tajmer set.

4.Pritisnite  " još jednom, "2" svetli, znači "utorak". Molimo vas da imate u vidu da podešavanja za vreme uključivanja (SAT/MINUT) i isključivanja (SAT/MINUT) ostaju ista kao što su bila za ponedeljak.

5.Od ponedeljka do nedelje su svi postavljeni završeni, pritisnite  " na daljinskom upravljaču 7. put da podesite od ponedeljka do nedelje temperaturu i pritisnite   ", izaberite temperaturu koja Vam je potrebna, temperaturni opseg od 10 ° C do 49 ° C.

PS: U funkciji nedeljnog tajmera, kada podesite današnju temperaturu, termostat će početi da radi u skladu sa pravilima navedenim u odeljku 4) UPUTSTVO ZA TERMOSTAT. Molimo Vas da to imate u vidu.

Možete podesiti različito vreme uključivanja , vreme isključivanja i temperaturu tokom cele nedelje.

6) Funkcija otvaranja prozora

1.Prozor je moguće otvoriti samo kada uređaj radi. Ova funkcija se podešava samo preko daljinskog upravljača.

2.Pritisnite   " svetlo je uključeno. Aparat radi kao pametni modeli za uštedu energije. (U ovoj funkciji, uređaj je proverava i snima temperaturu okoline . Prestaće da radi, kada temperatura okoline padne ≥ 3 °C u roku od 1 minuta. Korisnik treba da ponovo pokrene uređaj pomoću tastera "ON / OFF")

3. Ponovo pritisnite  otvaranja ", lampica "  " je isključena. Funkcija prozora je zatvorena.

7) Funkcija uključi/isključi

1)Ova funkcija može da se koristi i treba da odgovara za dve situacije:

1. kada je uređaj u stanju pripravnosti (standby),
2. Kada uređaj treba isključiti

(Ovom funkcijom se može upravljati samo daljinskim upravljačem.)

2.Pritisnite  javlja se svetlo na LED ekranu, a zatim pritisnite  jednom,  "ON" svetlo i "00" treperi. Pritisnite   " podesite časove od 01 - 24 (01 = 1 sat, 24 = 24 sata ... 00=Zatvoreno itd.) -----**Ovo je vreme uključivanja.**

3.Pritisnite  " ponovo,  "OFF" svetlo i "00" treperi. Pritisnite   " podesite časove od 01 - 24 (01 = 1 sat, 24 = 24 sata ... 00=Zatvoreno itd.)


-----**Ovo je vreme isključivanja.**

PS: Pritisnite "Delay", na ekranu će se pojaviti broj koji će treperiti 5 sekundi, ako ne pritisnete ni jedan taster, nakon 5 sekundi, uređaj se vraća u stanje pripravnosti, potrebno je da pritisnete "Lock" da biste uključili uređaj i ponovo resetovali sve.
(Ova funkcija je jednokratna i mora se resetovati ako se isključi napajanje.)

8) Funkcija zaključavanja deteta

1. Ova funkcija se podešava samo preko daljinskog upravljača. Kada se uređaj priključi, ova funkcija se može koristiti u bilo kom modelu.
2. Pritisnite "Lock" jednom, sva svetla i LED displej su zatvoreni, samo "Snaga" svetlo uključeno. U ovom stanju, ili kontrolna tabla ili daljinski upravljač ne može da upravlja uređajem za bilo koju funkciju.
3. Pritisnite "Lock" ponovo, sva svetla su uključena i oba kontrolna tabla i daljinski upravljač su opet u funkciji.

PRIKAZ KONTROLNE TABLE:

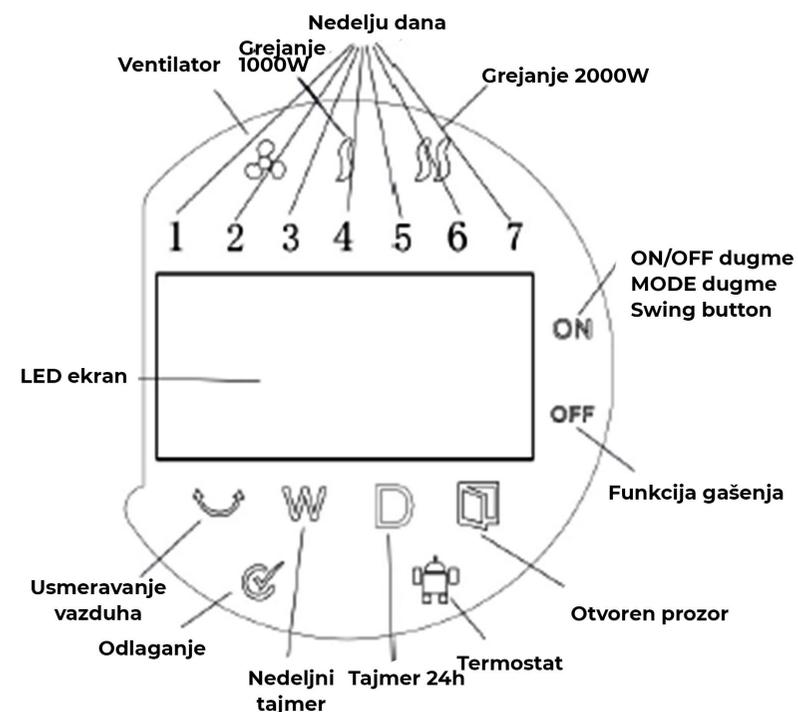

PRIKAZ DALJINSKOG UPRAVLJAČA:

1. Daljinski upravljač, koristite 2xAAA baterije.

2. Tasteri na daljinskom upravljaču su:



1. "⏻" Glavni taster za napajanje Uključivanje/Isključivanje
2. "24H" Podešavanje tajmera od 1 do 24 časa
3. „MODE” – Hladno, Toplo, Vruće – 3 režima za izbor
4. „Swing” – Pomeri klapnu gore-dole
5. „LOCK”² Funkcija zaključavanja (Child-Lock)
6. „AUTO” – Funkcija otvaranja prozora
7. „Tem.” – Prikazuje sobnu temperaturu
8. „Delay” –Podešavanje vremena uključivanja i isključivanja grejalice.
9. „W.Timer” – Podešavanje tajmera za celu nedelju
10. „+” – Povećaj
11. „-” – Smanji

ZAŠTITA OD PREGREVANJA

Ova grejalica je zaštićena zaštitom od pregrevanja koja automatski isključuje uređaj u slučaju pregrevanja. Npr: zbog potpune ili delimične opstrukcije otvora. U tom slučaju, isključite uređaj, sačekajte oko 30 sekundi da se ohladi i uklonite predmet koji ometa otvore. Zatim ga ponovo uključite kao što je gore opisano. Uređaj bi sada trebalo da radi normalno. Ako se problem nastavi, obratite se korisničkoj službi za pomoć.

ČIŠĆENJE & ODRŽAVANJE

- Pre nego što preduzmete bilo kakvo čišćenje ili održavanje uređaja, isključite ga iz napajanja.
- Za čišćenje se preporučuje upotreba meke vlažne krpe i neutralnog deterdženta. Nemojte koristiti abrazivnu krpu ili hemikalije koje mogu uticati na izgled uređaja. Proverite da li su izlaz toplog vazduha i ulaz za ventilaciju bez prašine i prljavštine. Tokom čišćenja pazite da ne dodirujete grejne elemente.
- Da biste otvorili filter na zadnjoj strani za čišćenje, pritisnite vrh plastične mreže pozadi.
- U slučaju kvara i / ili lošeg funkcionisanja uređaja, isključite uređaj iz napajanja i obratite se ovlašćenom serviseru.

NAPOMENA: Kao rezultat stalnih poboljšanja, dizajn i specifikacije proizvoda mogu se neznatno razlikovati od uređaja prikazanog na pakovanju.

Briga o okolini

Značenje precrtane kante za smeće:



Ne odlažite električne uređaje kao nesortirani komunalni otpad,

koristite objekte za odvojeno prikupljanje. Obratite se lokalnom

komunalnom preduzeću za informacije o dostupnim sistemima prikupljanja.

Ako se električni uređaji odlažu na deponije, opasne materije

mogu procuriti u podzemne vode i ući u lanac ishrane, šteteći Vašem

zdravlju i blagostanju.

