



## UPUTSTVO ZA UPOTREBU

# LED TELEVIZORI

Model: 43WHA470E

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne

podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR

## Informacije o proizvodu

Delegirana uredba EU komisije 2019/2013

Informacije		Vrednost	Jedinica
1. Ime ili zaštitni znak isporučioaca:		FOX	
Naziv i adresa isporučioaca.:		Vimport doo, Batajnički drum 9 deo 10a, Beograd	
2. Identifikaciona oznaka modela:		I HY PQT I €O	
3. Klasa energetske efikasnosti za Standardni dinamički opseg (SDR)		F	
4. Snaga u uključenom stanju za Standardni dinamički opseg (SDR)		41.0	W
5. Klasa energetske efikasnosti za Veliki dinamički opseg (HDR)			
6. Snaga u uključenom stanju za Visok dinamički opseg (HDR)			W
7. Snaga u isključenom stanju		0.0	W
8. Snaga u stanju pripravnosti		0.5	W
9. Snaga u umrežanom stanju pripravnosti		2.0	W
10. Kategorija elektronskog ekrana		Televizor	
11. Odnos veličina		16 : 9	
12. Rezolucija ekrana (u pikselima)		1920 x 1080	piksela
13. Dijagonala ekrana		43	inča
14. Dijagonala ekrana		108	cm
15. Vidljiva površina ekrana		46.8	dm <sup>2</sup>
16. Korišćena tehnologija panela		LCD sa LED	
17. Dostupna Automatska regulacija sjajnosti (ABC)		Ne	
18. Dostupan senzor za prepoznavanje glasa		Ne	
19. Dostupan senzor prisutnosti u prostoriji		Ne	
20. Frekvencija osvežavanja slike		60	Hz
21. Minimalna garantovana raspoloživost ažuriranja softvera i integrisanog softvera uređaja od datuma stavljanja na tržište (do):		3	(u godinama)
22. Minimalna garantovana raspoloživost rezervnih delova (do):		3	(u godinama)
23. Minimalno trajanje opšte garancije koju daje isporučilac (do):		3	(u godinama)
24. Tip napajanja:		Unutrašnje	
25. Spoljašnje napajanje (ako je priloženo uz proizvod, nije standardizovano)	Standardno ime		
	Ulazni napon		V
	Izlazni napon		V
26. Spoljašnje standardizovano napajanje (ako nije priloženo uz proizvod, drugo odgovarajuće napajanje)	Standardno ime		
	Potrebni izlazni napon		V
	Potrebna minimalna jačina struje		A
	Potrebna frekvencija struje		Hz

## VAŽNA BEZBEDONOSNA UPUTSTVA

### UPOZORENJE

KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEMOJTE KORISTITI PRODUŽNI KABL, DUPLI UTIKAČ ILI DRUGE DODATKE NA UTIČNICI OSIM ONIH KOJI BI MOGLI DA SPREČE IZAZIVANJE STRUJNOG UDARA. KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREĐAJ VLAZI ILI KIŠI.

 <p>Ovaj simbol munje u jednakostraničnom trouglu upozorava korisnike na prisustvo opasnog i ne izolovanog napona unutar kućišta proizvoda koji može biti dovoljan da stvori rizik STRUJNOG UDARA</p>	<p><b>CAUTION</b></p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Upozorenje: Da biste smanjili rizik od strujnog udara nemojte skidati poklopac (ili zadnju stranu). Unutra nema delova koje korisnik može sam da zameni. Za obavljanje servisa zatražite pomoć kvalifikovanog osoblja.</p>	 <p>Znak uzvika unutar jednakostraničnog trougla u ovom uputstvu upozorava korisnika na prisustvo važnih instrukcija za rad i održavanje (servisiranje) uređaja.</p>
--	---	---

Ovaj aparat ne treba izlagati vodi, a predmete ispunjene tečnošću poput vaza ne treba da budu postavljeni na i oko uređaja.

### OPREZ

Postoji opasnost od eksplozije ako se baterija nepropisno zameni.

Zamenite postojeću sa samo odgovarajućom vrstom baterije.

Nemojte izlagati bateriju direktnoj sunčevoj svetlosti ili bilo kojem drugom izvoru toplote.

Obezbedite pravilno odlaganje istrošenih baterija.

Ostavite lako dostupnim mesto gde je utikač ili nastavak za prekid napajanja.

Da biste smanjili rizik od strujnog udara, ne obavljajte bilo kakvo servisiranje osim onih koje se pominju u ovom uputstvu.

### VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnom mestu, može postojati potencijalna opasnost od pada.

Mnoge povrede, posebno dečije, mogu se izbeći primenom jednostavnih mera opreza kao što su:

Korišćenje elemenata ili stalaka koje je preporučio proizvođač televizora.

Korišćenje samo onog nameštaja koji može sigurno izdržati uređaj.

Obezbeđivanje uređaja tako da ne prelazi ivicu nameštaja.

Nemojte postavljati TV na visok nameštaj (na primer, ormare ili police) bez prethodnog pričvršćivanja kako nameštaja tako i uređaja na odgovarajuću površinu.

Ne pokrivajte televizor krpom i ne stavljajte drugi materijal između televizora i nameštaja na kom on stoji.



#### Sigurna instalacija

Koristite pojas za fiksiranje televizora kako bi sprečili uređaj od pada unapred.



1. **Pročitajte uputstva**- Sve napomene o sigurnosti i načinu rada treba pročitati pre uključivanja aparata.
2. **Sačuvajte uputstva** – Uputstva za sigurnost i uputstvo za upotrebu treba da se sačuvaju za buduće potrebe.
3. **Imajte u vidu Upozorenja** – Treba se pridržavati svih upozorenja na aparatu i svih uputstava za upotrebu.
4. **Pratite uputstva**- Treba pratiti sva uputstva.

 


5. **Voda i vlažnost** – Aparat ne treba koristiti u blizini vode.
6. **Nosač i postolje** – Aparat treba koristiti samo sa nosačem ili postoljem koje preporučuje proizvođač
7. **Montaža na zid ili plafon** – Aparat treba da se montira na zid ili plafon samo po preporuci proizvođača.
8. **Ventilacija** – Aparat treba da bude dobro postavljen, tako da lokacija ili pozicija aparata ne ometaju njegovo provetravanje.
9. **Toplota** – Ovaj aparat treba postaviti dalje od izvora toplote kao što su radijatori i peći.
10. **Napajanje** - Aparat treba povezati samo na napajanje kao što je opisano u uputstvima za upotrebu ili onako kako je naznačeno na uređaju.
11. **Uzemljenje ili polarizacija** – Treba preduzeti mere predostrožnosti.
12. **Zaštita kabla za napajanje** – Naponski kabl treba da bude usmeren tako da je malo verovatno da se može gaziti, priklještitu stvarima na njemu i njegovom kraju.
13. **Čišćenje** – Aparat bi trebalo čistiti samo po preporuci proizvođača.
14. Napajanje spoljne antene treba da se nalazi daleko od dalekovoda.
15. **Uzemljenje spoljne antene** – Ako je spoljna antena povezana na prijemnik, antenski sistem mora biti uzemljen kako bi se obezbedila zaštita od naponskog i izvornog statičkog elektriciteta.
16. **Kada ga dugo ne koristite** – napajanje uređaja trebalo bi da bude isključeno iz utičnice kada se ne koristi duži vremenski period.
17. **Upad predmeta i tečnosti** – Treba paziti da predmeti ne upadnu, a tečnost ne prospe u kućište kroz otvore.
18. **Kada je potreban servis** – Aparat treba da servisira kvalifikovano servisno osoblje kada su:
  - Kabal za struju ili utikač oštećeni.
  - Kada predmeti upadnu ili kada se tečnost prolje po uređaju
  - Kada je aparat izložen kiši
  - Kada aparat ne radi normalno ili pokazuje značajnu promenu u radu.
19. Ventilacioni otvori ne bi trebalo da budu pokriveni predmetima, kao što su novine, tkanine, zavese itd.
20. Izvore otvorenog plamena, kao što su upaljene sveće, ne bi trebalo da stoje na aparatu
21. Aparat će biti povezan sa mrežnom utičnicom sa zaštitnim uzemljenjem. Utičnica ili nastavak za prekid napajanja trebaju da budu lako dostupni.



#### UPOZORENJE

Visok napon se koristi u napajanju ovog uređaja. Ne uklanjajte zadnji poklopac. Obratite se kvalifikovanoj osobi za obavljanje servisa.

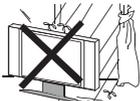


#### UPOZORENJE

Da biste sprečili požar ili strujni udar, nemojte izlagati uređaj kiši ili vlazi.



#### UPOZORENJE

Nemojte ispuštati i gurati predmete u kućište TV-a ili u otvore. Nikada nemojte prosipati tečnost na TV prijemnik.

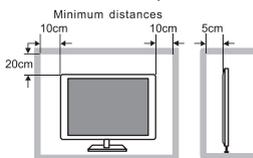

#### OPREZ

Ako televizor treba da se ugradi u zatvoreni odeljak ili na sličan način, morate se pridržavati dela uputstva o minimalnim udaljenostima. Toplota može smanjiti životni vek televizora, a takođe može biti povećan rizik od požara.



#### OPREZ

Nikada nemojte da stanete ili se oslonite ili gurnete uređaj ili stalak na kom se uređaj nalazi. Treba obratiti posebnu pažnju na decu.




#### OPREZ

Ne stavljajte glavnu jedinicu na nestabilno postolje, policu ili sto. Usled pada može doći do ozbiljne povrede lica ili štete na televizoru.



#### OPREZ

Kada se proizvod ne koristi duži vremenski period, preporučljivo je da isključite mrežni kabl iz utičnice .

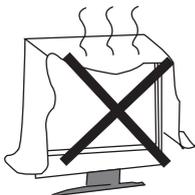

#### OPREZ

Izbegavajte izlaganje glavne jedinice direktnom suncu i drugim izvorima toplote. Ne postavljajte televizor na druge proizvode koji emituju toplotu. Na primer: Video uređaj, audio pojačala. Ne blokiraj otvore za ventilaciju u zadnjem poklopcu. Ventilacija je od suštinskog značaja za sprečavanje električnih kvarova. Ne stavljajte kabl za napajanje ispod glavne jedinice.




#### OPREZ



Panel (ekran) koji se koristi u ovom proizvodu napravljen je od stakla. Može se slomiti padom uređaja ili nasilnim udarcem. Pojedinci treba oprezno da rade sa razbijenim staklom ekrana.





- Postavite TV na stabilnu, ravnu površinu, ostavljajući najmanje 10 cm oko njega i 30 cm između vrha uređaja i zida ili ormarića. Da biste sprečili da se televizor prevrne kada ga gurnete, postavite ga blizu zida. Umesto da držite gornju stranu televizora kada ga okrećete, trebalo bi da držite donju stranu.

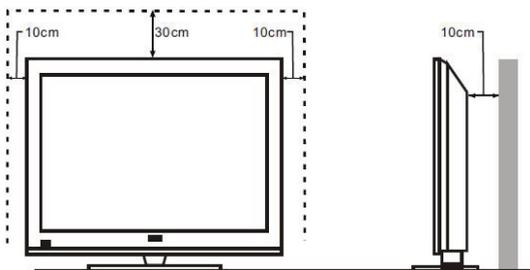

Umesto da držite gornju stranu televizora kada ga krećete, trebalo bi da držite donju stranu.

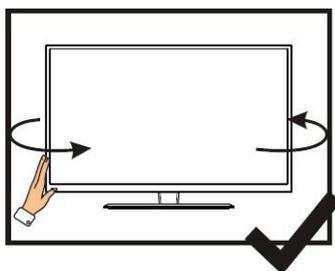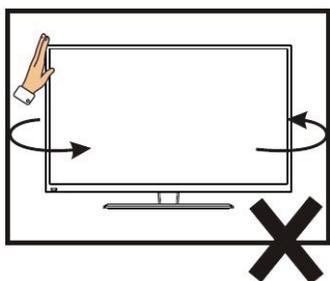

- Izbegavajte rukovanje televizorom samo jednom rukom kada ga podižete; umesto toga, koristite dve ruke.

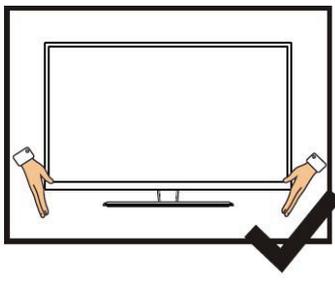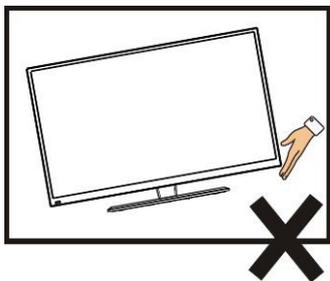

## SADRŽAJ

1.	Povezivanje i priprema TV-a .....	2
1.1	Pribor.....	2
1.2	Postavljanje postolja .....	2
1.3	Tasteri i interfejsi .....	3
1.4	Daljinski upravljač .....	4
1.5	Postavljanje baterija .....	5
2.	Osnovno rukovanje .....	5
2.1	Uključivanje/Isključivanje (opciono).....	5
2.2	Podešavanje režima pripravnosti .....	5
3.	Pokretač .....	6
4.	Izvor signala .....	7
5.	TV meni .....	7
6.	Tehnička specifikacija.....	11
7.	Podržani režimi signala .....	12
8.	Jednostavno rešavanje problema.....	13

# FOX LED TV

---


## 1 Priklučivanje i priprema TV-a

### 1.1 Dodatna oprema

- ✧ Uputstvo za korišćenje
- ✧ Daljinski upravljač
- ✧ Baterija (UM-4/R03P/AAA)
- ✧ Komplet za montiranje na zid (unapred montiran) (opciono)

### 1.2 Instalacija postolja

(Molimo pogledajte stvarni uređaj za detalje o fizičkoj strukturi.)




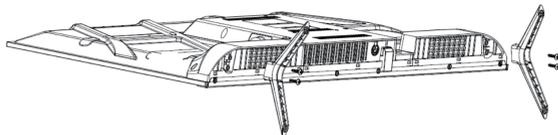


- 1) Postavite TV na mekanu tkaninu ili meke jastuke na sto tako da prednja ploča bude okrenuta nadole.
- 2) Postavite nogice u donje ležište televizora.
- 3) Zašrafite nogice sa šrafovim na mestu, a zatim ih zategnite.


# FOX LED TV

## 1.3 TASTERI i interfejsi

Standard dizajna i specifikacije su stvarni proizvodi.

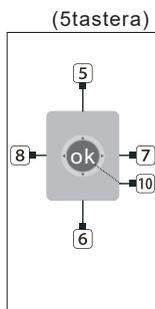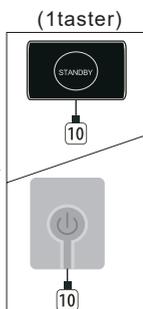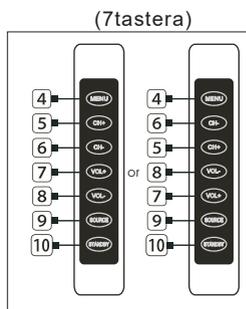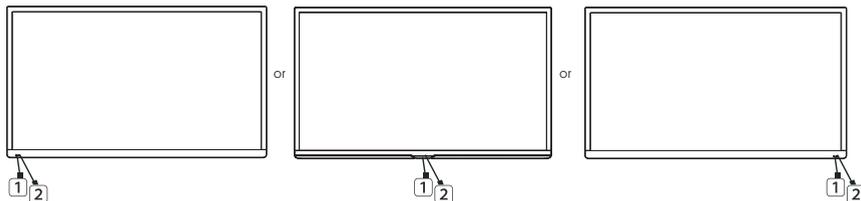


1. PROZOR DALJINSKOG SENZORA
2. INDIKATOR SNAGE
3. GOVORNIK
4. MENU TASTER
5. PROGRAM + TASTER
6. PROGRAM + TASTER
7. VOLUME + TASTER
8. VOLUME + TASTER
9. SOURCE TASTER
10. TASTER PRIPRAVNOSTI
11. ULAZ ZA NAPAJANJE

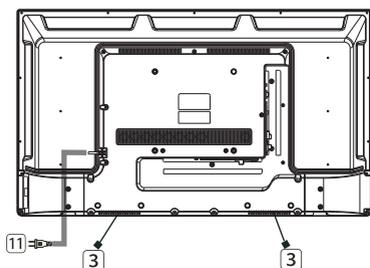

RF45	RF IN (S2) 13V/18V=500mA	RF IN (T2)	MINI AV IN	COAXIAL	USB2 USB1 5V=500mA	HDMI1 (ARC)	HDMI2	HDMI3	CI EARPHONE
------	--------------------------------	---------------	---------------	---------	--------------------------	----------------	-------	-------	----------------

# FOX LED TV

## 1.4 Daljinski u pravljač

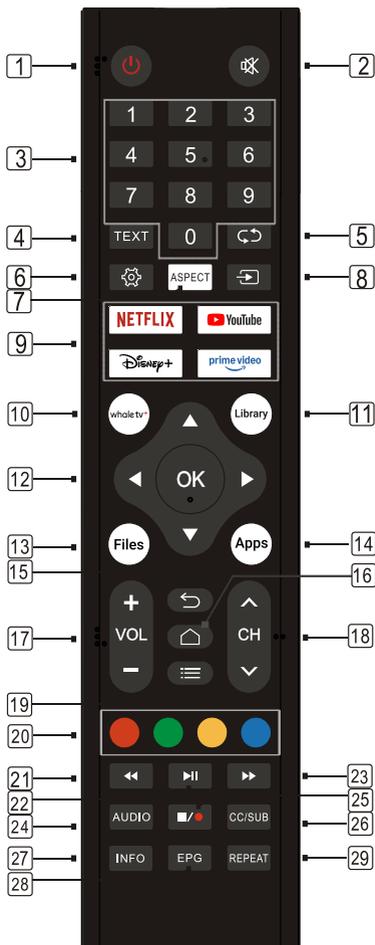

1. STANDBY: STANJE PRIPRAVNOSTI (⏻): Uključivanje i isključivanje režima pripravnosti.
2. Mute: Isključi zvuk.
3. 0-9 : Pritiskom na tastere biraju se brojevi.
4. TEXT: Ulaz ili izlaz iz teleteksta.
5. RECALL: Povratak na prethodni kanal.
6. Settings: Ulazak u meni sa podešavanjima.
7. ASPECT: Promena odnosa slike.
8. SOURCE  : Izbor ulaznog signala.
- 9.10.11.13.14. Contentarea: Osam sa aplikacijama.
12. Strelice/OK: Pomeri gore, dole, levo, desno / Potvrdi.
15. Exit: Izadi iz trenutnog interfejsa ili menija.
16. Home: Ulazak na početnu stranicu.
17. Volume: Pojačavanje/smanjivanje zvuka.
18. Channel: Promena kanala.
19. MENU: Ulazak ili izlazak iz menija.
20. 4 Boje: Prilagođeno posebnim funkcijama
21. ◀◀: Premotavanje unazad.
22. ▶▶ Pritisni jednom za pauzu, ponovo za nastavak.
23. ▶▶ Premotavanje unapred.
24. AUDIO: Izbor audio režima TV-a.
25. ■: Zaustavi reprodukciju i vrati se na listu datoteka. RECORD: Snimanje DTV režima na USB disk.
26. CC: Pritisnite ovaj taster za podešavanje CC režima. SUBTITLE: U režimu USB reprodukcije filmova, uključiti ili isključiti funkciju titlova. (U USB i TV režim u)
27. INFO: Prikazuje informacije o trenutnom kanalu kao što su vreme i naziv kanala.
28. EPG: Ulazak ili izlazak iz EPG. (Elektronski programski vodič)
29. REPEAT: Omogućava ponavljanje pesama (jedna, nasumično, mešanje).

# FOX LED TV

---

## 1.5 Instalacija baterija

(Molim vas da pročitate, ovo je samo skica.)



- 1 Zadnji poklopac daljinskog upravljača treba da bude otvoren.
- 2 Stavite dve 7# (AAA) 1.5V baterije u sistem.  
Uverite se da su baterije pravilno polarizovane.
- 3 Pokrijte zadnji poklopac.

Izvadite baterije iz daljinskog upravljača ako ga neko vreme nije koristio.

Izvršite sledeće provere ako daljinski upravljač ne funkcioniše ispravno.

- Proverite da li je TV u programu.
- Proverite da li je polaritet baterija odgovarajući.
- Proverite da li baterije nisu iscrpljene.
- Uverite se da je napajanje u ispravnom stanju ili da je kabl za napajanje pravilno povezan.
- Uverite se da u blizini nema neobičnih neonskih ili fluorescentnih svetla.

## 2 Osnovna operacija

### 2.1 Uključivanje/isključivanje (opciono)

- Povežite kabl za napajanje sa **AC ulazni** . Utaknite kabl za napajanje u odgovarajuću utičnicu. -
- Pritisnite **Prekidač** da uključite TV, zatim pritisnite **Napajanje** taster za uključivanje uređaja. -
- Pritisnite **Prekidač** ponovo da isključite TV.

Beleška: Nemojte odmah ponovo da otvarate prekidač za napajanje nakon što isključite TV; umesto toga, sačekajte jedan minut pre nego što ponovo otvorite prekidač za napajanje.

### 2.2 Podešavanje režima pripravnosti

- Pritisnite (  ) taster da biste uključili uređaj.
- Pritisnite (  ) taster ponovo da vratite ekran u režim pripravnosti. Indikator napajanja svetli crveno.
- Uverite se da vaš TV nije ostavljen u režimu pripravnosti duži vremenski period.

### 2.3 Izbor režima unosa

Ovaj set sadrži više modova izvora signala; pritisnite dugme **Source** više puta da biste izabrali izvor signala.


# FOX LED TV

---

## 3. Početni ekran

Početna stranica

Četiri osnovne aplikacije u našem sistemu su Menadžer aplikacija, Galerija aplikacija, Menadžer fajlova i Podešavanja. One omogućavaju najčešće funkcije upravljanja TV sistemom u pokretaču, kao što su upravljanje datotekama, vremenska prognoza, prikaz vremena, podešavanja ekrana itd. Naša početna stranica sistema prikazuje popularne aplikacije i resurse koji odgovaraju različitim korisničkim preferencijama.

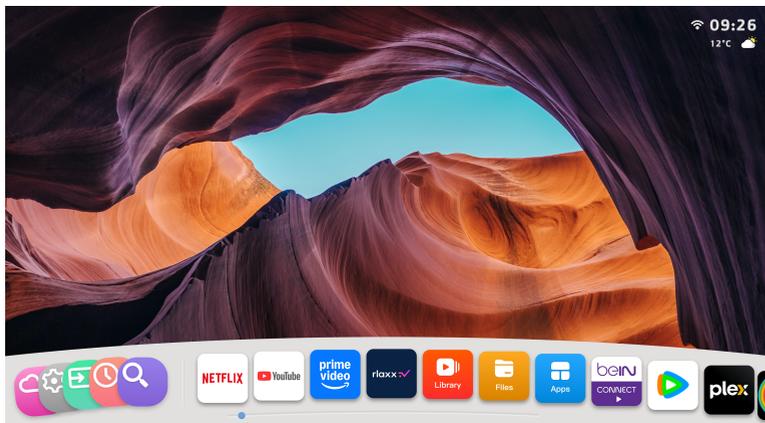

Biblioteka

Ovde možete da otkrijete najnovije popularne video resurse s interneta, a takođe ih možete da sačuvate i lajkujete prema ličnim preferencijama.

Galerija aplikacija

Omogućava preuzimanje i upravljanje različitim vrstama aplikacija.

Datoteke

Menadžer fajlova se koristi za pretragu svih datoteka u lokalnom skladištu i na USB-u.



Napomena: redosled aplikacija i ulaznih izvora zavisi od detaljnog podešavanja, gornja slika je samo za referencu.

# FOX LED TV

---

Pored toga, možete da izvršite operacije nad datotekama pomoću tastera menija. Operacije nad datotekama uključuju brisanje, kopiranje, lepljenje, preimenovanje.

## Vreme

Omogućava vremensku prognozu za različite gradove.

## Pretraga

Možete da unesete naziv aplikacije za pretragu aplikacija.

## Nedavno

Prikazuje nedavnu istoriju pregledanja.

## Podešavanja

U podešavanjima se mogu konfigurisati neki često korišćeni sistemski parametri.

### Podešavanja uređaja

#### Jezik

Pomoću strelica izaberite željeni jezik i kliknite na „OK” da biste promenili jezik sistema.

#### Datum i vreme

Korisnici mogu da podese vreme i sistem vremena prema svojim potrebama.

#### O uređaju

Prikazuje informacije o uređaju, uključujući informacije o uređaju i pravne informacije...

#### Vraćanje na fabrička podešavanja

Kliknite na „Resetuj TV” na stranici da biste ušli na stranicu za vraćanje fabričkih podešavanja. Korisnik može da izvrši vraćanje fabričkih podešavanja prema uputstvu.

## Mreža

Mrežna podešavanja uključuju Wi-Fi, dodavanje nove mreže, žičanu vezu, podešavanja proxy-ja, brisanje internet memorije.


Ovde se takođe mogu naći podešavanja za WiFi i Bluetooth.

## 4. Ulazni Izvor signala

U TV interfejsu, ako želite da gledate dtv kanale, možete da pritisnete taster za izvor da biste pokrenuli aplikaciju za promenu izvora i izabrali dtv režim rada.


# FOX LED TV

## Slika

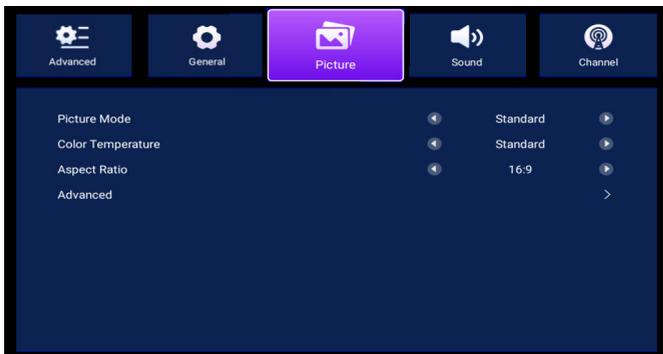

Režimi	Podešavanja	Opis	
Režim slike	Standardno -> Živopisno -> Mekano -> Korisnički	Podešavanje režima prikaza slike	
Temperatura boje	Standardno -> Toplo -> Hladno	Podešavanje temperature boje	
Odnos stranica	16:9 -> 4:3 -> Zum 1 -> Zum 2 -> Puni ekran -> Automatski	Podešavanje proporcionalnog režima	
Napredno	NR	ISKLJUČI -> Nisko -> Srednje -> Visoko	Podešavanje smanjenja šuma
	DLC	UKLJUČI -> ISKLJUČI	Kontrola dinamičkog osvetljenja
	HDR	UKLJUČI -> ISKLJUČI	Kontrola prekidača za hdr ekrana
	HDMI režim (Dostupno samo u HDMI izvoru.)		Pritisnite taster [ENTER/▶] da biste ušli u podmeni i podesili efekat slike HDMI izvora.


## Zvuk

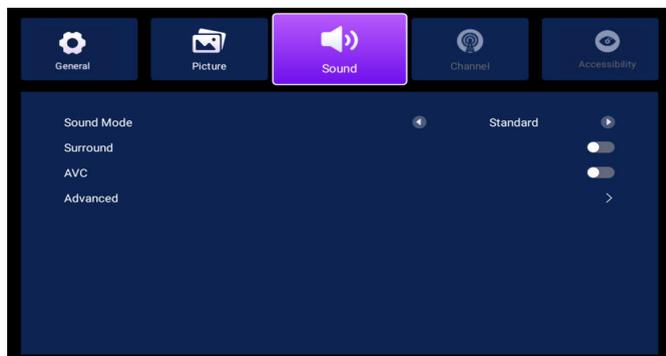

Režim	Podešavanje	Opis	
Režim zvuka	Standard->Film->Muzika->Igra->Vesti->Korisnički	Podešavanje režima zvuka	
Surround	ISKLJUČENO->UKLJUČENO	Kontrola surround prekidača	
AVC	ISKLJUČENO->UKLJUČENO	Kontrola automatskog podešavanja jačine zvuka	
Napredno	Balans	-50 - 50	Kontrola zvučnog balansa
	Digitalni izlaz	PCM->Auto	Kontrola digitalnog izlaza


# FOX LED TV

## Kanal

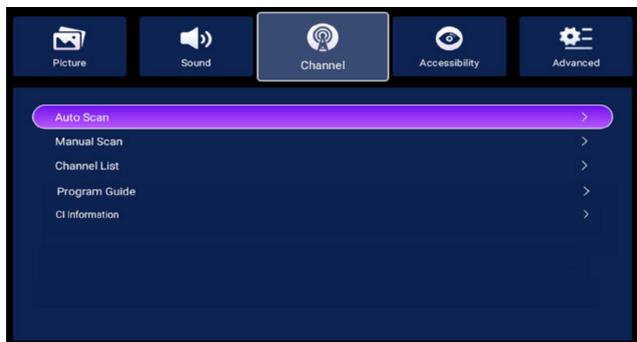

Režim	Podešavanje
Automatsko skeniranje	Ulaz u interfejs automatskog podešavanja i početak skeniranja i uključivanje skeniranja
Ručno skeniranje	Ulaz u interfejs ručnog podešavanja
Lista kanala	Ulaz u interfejs liste kanala
Vodič za program	Ulaz u interfejs vodiča za program
CI informacije	Ulaz u interfejs CI informacija


## Pristupačnost i pomoć

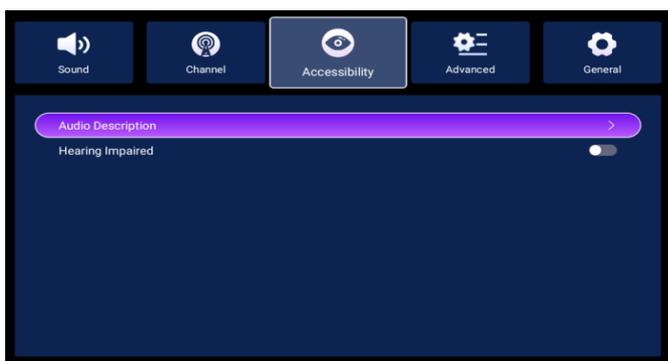

Režim	Podešavanja	Opis
Audio opis	Audio opis ISKLJUČIVANJE->UKLJUČIVANJE	Kontrola audio opisa
	Jačina zvuka 0-100	Kontrola jačine zvuka
Oštećen sluh	ISKLJUČIVANJE->UKLJUČIVANJE	Kontrola za korisnike s oštećenim sluhom

# FOX LED TV


## Napredno

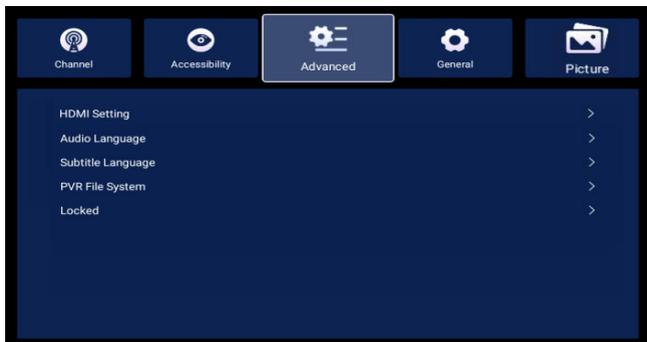

Režim	Opis
HDMI podešavanje	Interfejs za podešavanje HDMI CEC i ARC
Jezik zvuka	Interfejs za Podešavanje Jezika Zvuka (Dostupno samo u DTV izvoru)
Jezik titla	Interfejs za podešavanje jezika titla (Dostupno samo u DTV izvoru)
PVR fajl sistem	Interfejs za podešavanje sistema za snimanje programa (Dostupno samo u DTV izvoru)
Zaključano	Podešavanje zaključavanja sistema, promena lozinke, zaključavanje kanala, podešavanje roditeljske kontrole.

Zaključano, pritisnite taster [ENTER/ ] i unesite početnu lozinku 1234 za ulazak u zaključano podešavanje.

## Opšte

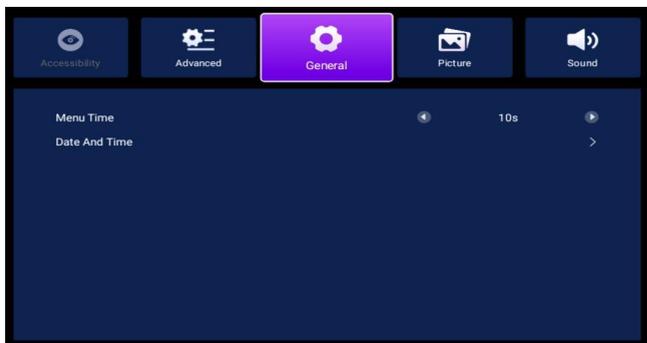

Režim	Podešavanje	Opis
Vreme prikaza menija	Isključivanje->5s->10s->20s->30s->60s	Podešavanje vremena prikaza menija
Datum i vreme	Interfejs za podešavanje datuma, vremena i vremenske zone sistema	

# FOX LED TV

## 6. Tehnička specifikacija

Model proizvoda	43WHA470E	
Veličina ekrana	43" dijagonala	
Proporcija širine i visine	16:9	
Napajanje	AC 100-240V~,50/60Hz	
Potrošnja struje	75W	
TV sistem	PAL B/G D/K I,SECAM B/G D/K DVB-T/T2/C/S/S2(s/s2 option) (There is no DVB-C signal in some Countries or Areas.)	
Audio izlazna snaga (interna)	8Wx2	
Ulazni terminal	Antenski ulaz	x 2 (S2 option)
	USB ulazni	x 2
	HDMI ulazni	X 3
	VGA ulazni	NE
	PC AUDIO ulazni	NE
	Audio ulazni ( L/R)	x 1 (MINI)
	Video ulazni	x 1 (MINI)
	YPbPr ulazni	NE
	RJ45 ulazni	x 1
	Ulazni CI kartice	x 1
	SCART ulazni/izlazni	NE
Izlazni terminal	DC ulazni (12V)	NE
	Slušalica	x 1
	Audio linijski izlazni (L/R)	NE
	Video izlazni	NE
	Optički	NE
Koaksijalni izlazni	x 1	
Radna temperatura	0°C~40°C	
Radna vlažnost	20% ~ 80% Bez kondenzacije	

*Beleška: Gore navedene karakteristike su podložne promeni bez upozorenja u cilju poboljšanja kvaliteta.*

# FOX LED TV

---

## 7. Podržani režim signala

<u>Rezolucija</u>	<u>Horizontalna frekvencija (Khz)</u>	<u>Vertikalna frekvencija (Hz)</u>
480p	31.468	59.94
576p	31.25	50.00
720P	45.00	60.00
1080i	33.75	60.00
1080P(1920x1080)	67. 50	60.00

- *Poruka upozorenja će se pojaviti na ekranu ako je signal koji ekran prima izvan dozvoljenog opsega.*

-Na ekranu možete proveriti format ulaznog signala.



Izrazi HDMI, HDMI High-Definition Multimedia Interface, HDMI prepoznatljiv vizuelni identitet HDMI logotipi su žigovi ili registrovani žigovi kompanije HDMI Licensing Administrator, Inc.

# FOX LED TV

---

## 5 Jednostavno otklanjanje poteškoća

Ako ekran pokvari ili se njegove performanse drastično promene, proverite ekran u skladu sa smernicama u nastavku. Ne zaboravite da pregledate periferne uređaje kako biste identifikovali koren problema.

<b>Problem</b>	<b>Rešenje</b>
Napajanje se ne može aktivirati. (Indikator napajanja ne svetli.)	-Potvrdite da su oba kraja kabla za napajanje pravilno umetnuta u utičnicu i da li je zidna utičnica funkcionalna.
Prikazuje se poruka Nema ulaznog signala.	- Proverite da li je signalna linija ispravno povezana. -Potvrdite da su relevantni periferni uređaji uključeni. -Uverite se da izabrani izbor ulaza odgovara ulaznom signalu.
Daljinski upravljač ne radi ispravno.	-Proverite da baterije nisu istrošene. (Koristite novu bateriju.) -Potvrdite da daljinski upravljač radi u svom dometu. - Uverite se da je daljinski upravljač usmeren ka prozoru daljinskog upravljača ekrana. - Uverite se da nema prepreka između daljinskog upravljača i njegovog prozora.
Na ekranu se nalaze trepćuće tačke ili pruge.	- Uverite se da nema emisija (auto, VN žice ili neonske sijalice) ili drugih potencijalnih izvora smetnji.
Boja ili kvalitet slike se pogoršavaju.	- Proverite da li su sva video podešavanja, kao što su osvetljenost, kontrast i boja, pravilno podešena. -Za dodatne informacije o video postavkama, pogledajte OSD funkcije poglavlja 2.
Položaj i veličina ekrana su netačni.	-Potvrdite da su pozicija i veličina ekrana na odgovarajući način.
Slika ili boja su netačne.	- Proverite da li je signalna linija ispravno povezana. -Kada ste povezani sa računarnom, možete da promenite rezoluciju računara da biste dobili odgovarajuću sliku. Disparitet u izlaznom signalu računara može uticati na prikaz slike.
Prikažite poruku upozorenja.	- Proverite da li je ulazna linija signala na odgovarajući način obezbeđena. -Izaberite odgovarajući ulazni signal. -Pogledajte Podržani režimi signala u poglavlju 4 za dodatne informacije.



# USER MANUAL

**LED Television** Model: 43WHA470E

Thank you for purchasing this device.

FOX LED televisions are known for their great performance, as for modern, functional and elegant design. Besides that, we constantly improve our customer support, we have highly efficient and wide network of services, that make our proud customers feel safe.

You made a right choice.

Now it's time for instructions, they are not complicated, but you have to follow them.

EN

## IMPORTANT SAFETY INSTRUCTIONS

### WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<h3>CAUTION</h3> <p><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

### CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

### IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



#### Safe installation

Use the belt fixing the television to facilitate restraining the television from toping forward.



1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.

 


5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects did not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
  - The power-supply cord or the plug has been damaged.
  - Objects have fallen on or liquid has been spilled into the appliance.
  - The appliance has been exposed to rain.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.  
 No naked flame sources, such as lighted candles, should be placed on the apparatus.  
 The apparatus shall be connected to mains socket outlet with a protective earthing connection.  
 The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.



**Warning**

High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.

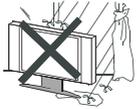


**Warning**

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



**Warning**

Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

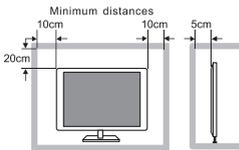

**Caution**

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

Heat built up can reduce the service life of your television, and can also be dangerous.



**Caution**

Never stand on, lean on, push suddenly the product or its stand.

You should pay special attention to children.



**Caution**


Do not place the main unit on an unstable cart stand, shelf or table.

Serious injury to an individual, and damage to the television, may result should it fall.



**Caution**

When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

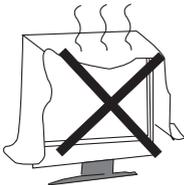

**Caution**

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.




**Caution**

The panel used in this product is made of glass. It can break when the product is dropped or applied with force.



Individuals should execute caution when dealing with broken glass should the panel break.





- Place the TV on a firm and flat surface, leaving a space of at least 10cm around the set and 30cm from the top of the set to the wall or cabinet. Ensure the TV is positioned close to the wall to avoid it falling when pushed.

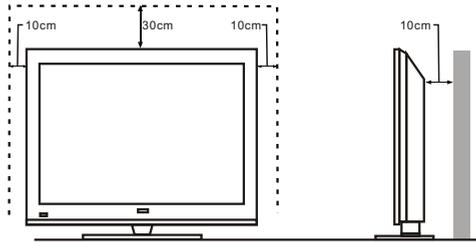

- When you turning the TV set, do not hold the top side of the TV set, you should hold the bottom side.

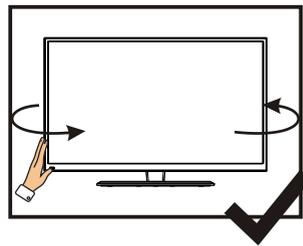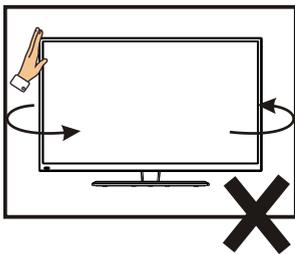

- When you lifting the TV set, do not use one hand to handle it, you should lift the TV set by two hands.

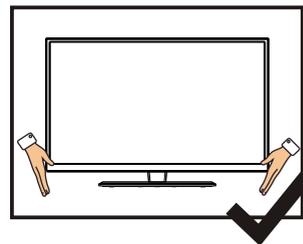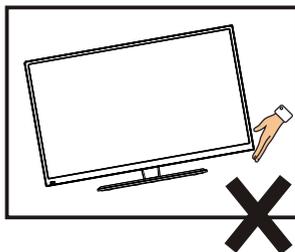

---

# CONTENTS

1. Connection and Preparation of TV.....	2
1.1 Accessories .....	2
1.2 Installation of Stand.....	2
1.3 Keys and Interfaces.....	3
1.4 Remote Control.....	4
1.5 Installation of Batteries.....	5
2. Basic Operation.....	5
2.1 Power ON/Off(optional).....	5
2.2 Setting of Standby Mode .....	5
3. Launcher .....	6
4. Input source .....	7
5. TV Menu .....	7
6. Technical Specification .....	11
7. Supported Signal Modes.....	12
8. Simple Troubleshooting .....	13

---


# 1.Connection and Preparation of TV

## 1.1 Accessories

- \* User Manual
- \* Remote Control
- \* Battery(UM-4/R03P/AAA)
- \* Wall Mount Kit (Pre-assembled)(Optional)

## 1.2 Installation of Stand





(For the physical structure, please refer to the real object)

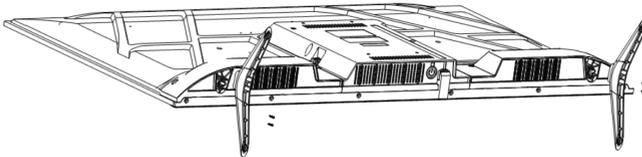


- ① Place the TV with the front panel facing downwards on the soft cloth or soft pads on a desk.
- ② Insert the stand into the bottom socket of the TV.
- ③ Insert the screws into the sockets and tighten them.

### 1.3 Keys and Interfaces

The design and specification takes actual products as the standard

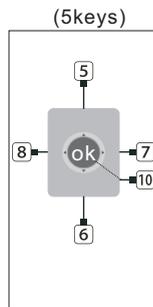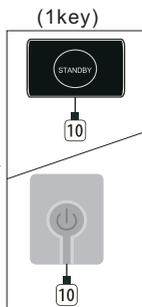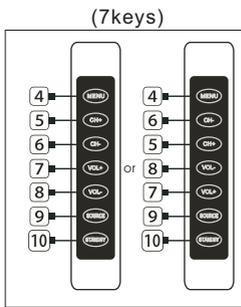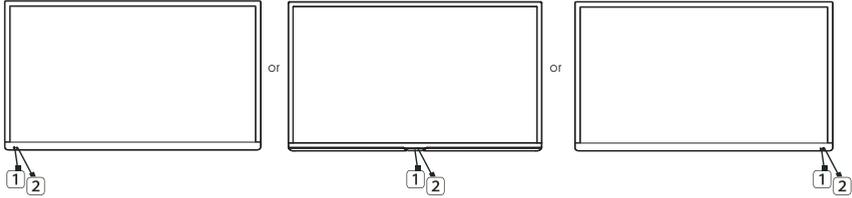


- 1. REMOTE SENSOR WINDOW
- 2. POWER INDICATOR
- 3. SPEAKER
- 4. MENU KEY
- 5. PROGRAM “+” KEY
- 6. PROGRAM “-” KEY
- 7. VOLUME “+” KEY
- 8. VOLUME “-” KEY
- 9. SOURCE KEY
- 10. STANDBYKEY
- 11. POWERPLUG INPUT

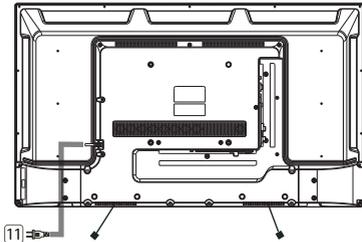

RJ45	RF IN (S2) 13V/18V=500mA	RF IN (T2)	MINI AV IN	COAXIAL	USB2 USB1 5V=500mA	HDMI1 (ARC)	HDMI2	HDMI3	CI EARPHONE
------	-----------------------------	------------	------------	---------	--------------------------	-------------	-------	-------	----------------

# 1.4 Remote Control

(Here is only the sketch, please in kind prevail)

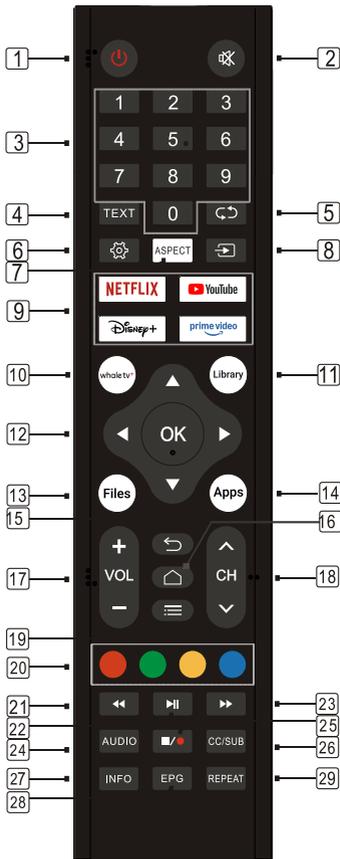


1. STANDBY(⏻) : Standby turn on and off.
2. Mute: Mute sound.
3. 0~9 : Continue to press the keys to select.
4. TEXT: Enter or exit teletext.
5. RECALL: Return to previous channel.
6. Settings: Enter the settings menu.
7. ASPECT: Change pictures proportion.
8. SOURCE: Choose input source.
9. 10. 11. 13. 14. Content area: Eight buttons for CPS APPS.
12. Direction/OK: Move up, down, left, right/Confirm.
15. Exit: Exit current interface or menu.
16. Home: Enter home page.
17. Volume: Volume up/down.
18. Channel: Change channel.
19. MENU: Enter or exit menu.
20. 4 Color: Customized in different page.
21. ⏮: Fast Backward.
22. ⏸ Press one time to pause, press again to playback.
23. ⏭ Fast Forward.
24. AUDIO: Select TV audio mode.
25. ■: Stop the playback and return to file list.
26. RECORD: DTV mode record data USB disk.
26. CC: Press this button to adjust CC mode.  
SUBTITLE: In the USB playback movies, open or closed subtitle Function. (In USB and TV mode)
27. INFO: Displays the present channel information such as the current time and channel name.
28. EPG: Enter or exit EPG. (Electronic Program Guide)
29. REPEAT: Allows you to repeat single random, shuffle and folder.

---

## 1.5 Installation of Batteries

 (Here is only the sketch, please in kind prevail)

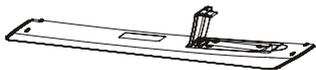

- ① Open the back lid of the remote control.
- ② Install two 7#(AAA)1.5V batteries.  
Ensure the correct polarity of the batteries.



- ③ Cover the back lid.  
Please take out of the batteries from the remote control for long time of no use.



If the remote control doesn't work properly, please carry out the following checks.

- Check the TV is turned on.
- Check the polarity of the batteries are correct.
- Check the batteries are not drained.
- Check the power supply is normal or the power cord is correctly connected.
- Check there are no special fluorescent light or neon light around.

## 2. Basic Operation

### 2.1 Power ON/OFF(Optional)

- Connect the power cord to the **AC input**. Insert the power cord into the appropriate socket.
- Press the **Power switch** to switch on the TV, then press **Power** button to turn on the unit.
- Press the **Power switch** again to switch off the TV.

Note: After switch off the TV, please don't immediately re-open the power switch ,should be delayed one minute more to re-open the power switch.

### 2.2 Setting of Standby Mode

- Press (  ) button to turn on the unit.
- Press (  ) button again to return the display to standby mode. The power indicator turns red.
- Be sure not to set your TV in standby mode for a long period of time.

### 2.3 Selection of Input Mode

This set has different signal source modes, you may continue to press the **Source** button to select a signal source.

---

### 3. Launcher

#### Home

The basic four application in our system is App Manager, App Calllery, File Manager ,Settings. They are providing the most common function of manager the TV system in launcher,such as file management, weather forecast, time display, display settings, etc. And our system home page shows some popular apps and resources to suit the different preferences of customers.



#### Library

Here, you can discover the latest popular video resources on the internet, and you can also bookmark and like them according to everyone's preferences.

#### App Gallery

Provide download and management of different types of apps.

#### Files

The file Manager is used to search all files in local store and USB.



Note:Apps link and input source are subject to detail order,above photo just for your reference.

---

Besides, you can perform file operations by menu key, the file operation include delete, copy, paste, rename.

Weather

Provide weather forecasts for various cities.

Search

You can enter an app name to search for apps.

Recently

Provide recent browsing history.

**Settings**

In the settings, some commonly used system parameters can be configured.

Device Preferences

**Language**

**Select the desired language up and down, and click "OK" to switch the system language.**

Date and Time

Users can set the time and time system according to their needs.

About

Displays device information, including device information and legal information...

Restore Factory

Click "Reset TV" on the page to enter the factory setting recovery page. The user can restore the factory operation according to the prompt.

Network


Network settings include Wi-Fi, add new network, wired connection, proxy settings, clear Internet memory.

The configuration of WiFi and Bluetooth can also be found here.

## 4. Input Source


In TV interface, if you want to change channel, you can press the source key to launch tv source change application to select different channels.

## Picture

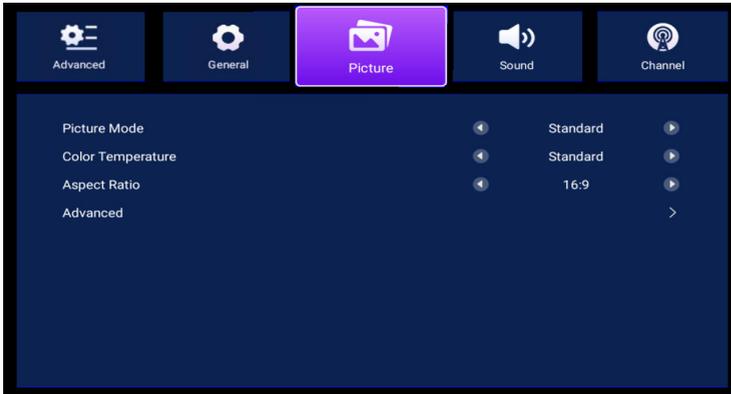


Project	Support mode	Description
Picture Mode	Standard->Vivid->Softness->User	Picture display mode adjustment
Color Temperature	Standard -> Warm ->Cool	Color temperature adjustment
Aspect Ratio	16:9->4:3->Zoom1->Zoom2->Full->Auto	Proportional mode adjustment
Advanced	NR   OFF->Low->Middle->High	Noise reduction adjustment
	DLC   ON->OFF	Dynamic Luma switch controller
	HDR   ON->OFF	High data rate switch controller
	HDMI Mode (Available only in HDMI source.)	

## Sound

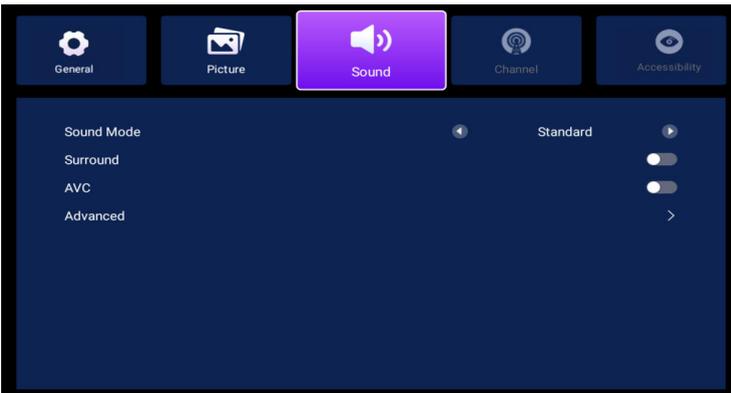


Project	Support mode	Description	
Sound Mode	Standard->Movie->Music->Game->News->User	Sound mode adjustment	
Surround	OFF->ON	Surround switch controller	
AVC	OFF->ON	auto volume switch controller	
Advanced	Balance	-50 - 50	Sound balance controller
	Digital Output	PCM->Auto	Digital Output controller

## Channel

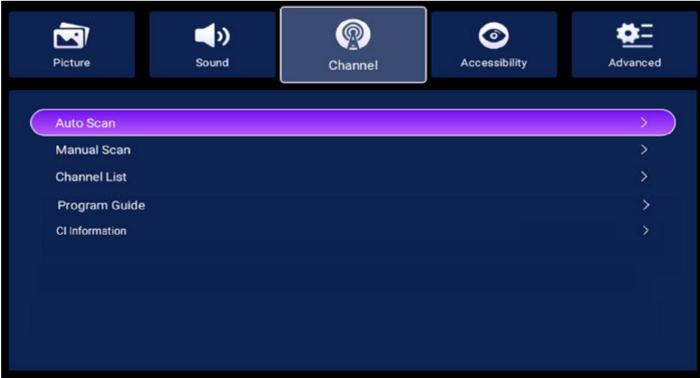


Project	Description
Auto Scan	Enter the auto tuning scan interface and start scan
Manual Scan	Enter the manual tuning scan interface
Channel List	Enter the channel list interface
Program Guide	Enter the program guide interface
CI Information	Enter the CI information interface

## Accessibility

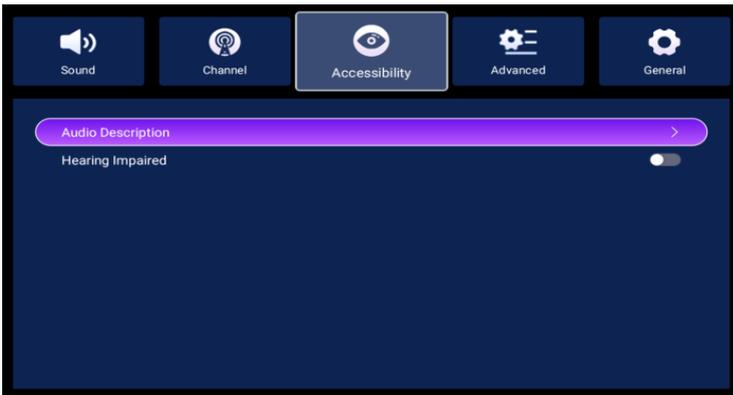

Project	Support mode		Description
Audio Description	Audio Description	OFF->ON	Audio Description controller
	Volume	0-100	Volume controller
Hearing Impaired	OFF->ON		Hearing Impaired controller


## Advanced

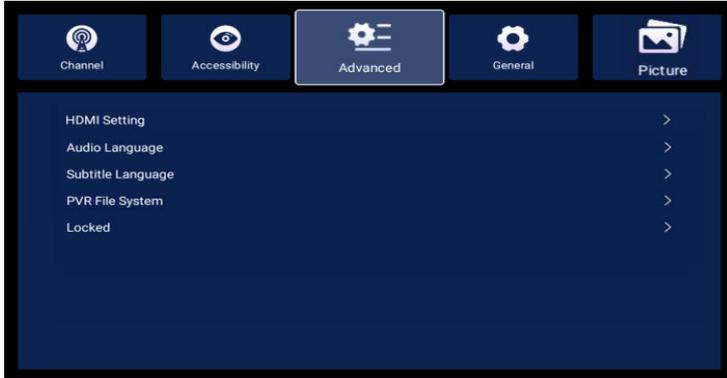

Project	Support mode
HDMI Setting	HDMI CEC and ARC setting interface
Audio Language	Audio language setting interface(Available only in DTVsource)
Subtitle Language	Subtitle language setting interface(Available only in DTVsource)
PVR File System	Record program file system setting interface (Available only in DTVsource)
Locked	System Lock,Change Password,Channel lock,Parental controls setting interface .

Locked, press [ENTER/ ►]button and Enter initial password 1234 to enter Locked.

## General

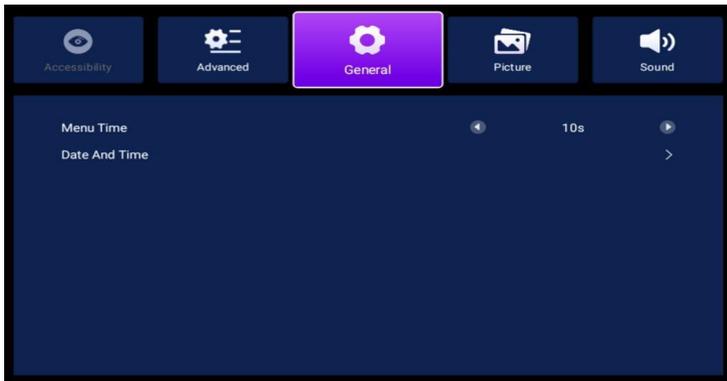

Project	Support mode	Description
Menu Time	Off->5s->10s->20s->30s->60s	Setting menu display time
Date And Time	System Date And Time、 TimeZone setting interface	

## 6. Technical Specification

Product Model	43WHA470E	
Screen Size	43" diagonal	
Aspect Ratio	16:9	
Power Supply	AC 100-240V~,50/60Hz	
Power Consumption	75W	
TV System	PAL B/G D/K I,SECAM B/G D/K DVB-T/T2/C/S/S2(s/s2 option) (There is no DVB-C signal in some Countries or Areas.)	
Audio Output Power (Internal)	8Wx2	
Input Terminal	Antenna Input	x 2 (S2 option)
	USB Input	x 2
	HDMI Input	x 3
	VGA Input	NO
	PC AUDIO Input	NO
	Audio Input (L/R)	x 1 (MINI)
	Video Input	x 1 (MINI)
	YPbPr Input	NO
	RJ45 Input	x 1
	CI card In	x 1
	SCART In/Output	NO
	DC In (12V)	NO
CARD SLOT	NO	
Output Terminal	Earphone	x 1
	Audio Line Out(L/R)	NO
	Video Output	NO
	Optical	NO
	Coaxial out	x 1
Working Temperature	0°C~40°C	
Working Humidity	20% ~ 80% Non-condensing	

*Note:the specification shown above may change without notice for quality improvement.*

---

# 7. Supported Signal Modes

## A.HDMI Mode

Resolution	Horizontal Frequency (Khz)	Vertical Frequency (Hz)
480p	31.468	59.94
576p	31.25	50.00
720p	45.00	60.00
1080i	33.75	60.00
1080p(1920x1080)	67.50	60.00

*-When the signal received by the Display exceeds the allowed range, a warning message will appear on the screen.*

*-You can confirm the input signal format onscreen.*



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

---

## 8. Simple Troubleshooting

If the display fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

Symptom	Solution
Power cannot be turned on.(Power indicator does not light.)	-Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational
No Input Signal message appears.	-Check that the signal line is connected properly. -Check that the power of the relevant peripherals is turned on. -Check that the Input option that has been selected matches with the input signal.
The remote control does not function properly.	-Check the batteries are not drained.(Use new batteries.) -Check that the remote control is within the operating range. -Check that the remote control is pointed to the remote control window on the display. -Check that there are no obstacles between the remote control and the remote control window.
Flashing spots or stripes appear on the screen.	-Check that there are no emission (Car, HV cable or Neon lamp) or other possible interference sources.
Image colour or quality deteriorates.	-Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc. -For more information about video settings, refer to OSD Functions in Chapter 2.
Screen position and size are incorrect.	-Check that the screen position and size is adjusted appropriately.
Image or colour is incorrect.	-Check that the signal line is connected properly. -When connecting to a PC, you can change the resolution of the PC to acquire the correct image. The discrepancy of the PC output signal may affect the display of the image.
Display warning message.	-Check that the input signal line is properly fixed. -Select the correct input signal. -For more information, refer to Supported Signal Modes in Chapter 4.



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati. Za više informacija o FOX uređajima posetite našu internet stranicu:

**[www.foxelectronics.rs](http://www.foxelectronics.rs)**