



UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model: 32WHA450C

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne

podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR

Informacije o proizvodu (lista sa podacima)			
Informacije		Vrednost	Jedinica
1. Ime ili zaštitni znak isporučioća		VIMPORT DOO BEOGRAD	
Adresa isporučioća		Batajnički drum 9 deo 10a, Beograd(Zemun)	
2. Identifikaciona oznaka modela		32WHA450C	
3. Klasa energetske efikasnosti za SDR mod		E	
4. Snaga u uključenom stanju za standardni dinamički raspon (SDR)		26.0	W
5.Klasa energetske efikasnosti (HDR)		F	
6. Snaga u uključenom stanju za mod velikog dinamičkog raspona (HDR), ako je primenljivo		28.0	W
7. Snaga u isključenom stanju, ako je primenljivo		0.3	W
8. Snaga u stanju pripravnosti, ako je primenljivo		0.5	W
9. Snaga u umrežanom stanju pripravnosti, ako je primenljivo		2.0	W
10. Kategorija elektronskog ekrana		Televizor	
11. Odnos veličina		16 : 9	
12. Rezolucija ekrana (u pikselima)		1366 x 768	piksela
13. Dijagonala ekrana		32.0	inča
14. Dijagonala ekrana		80.0	cm
15. Vidljivo područje ekrana		27.3	dm²
16. Tehnologija panela koja se koristi		LCD sa LED	
17. Automatska regulacija sjajnosti (ABC) koja je dostupna		Ne	
18. Senzor za prepoznavanje glasa koji je dostupan		Ne	
19. Senzor prisutnosti u prostoriji koji je dostupan		Ne	
20. Učestalost osvežavanja slike (zadata postavka)		60	Hz
21. Minimalna garantovana raspoloživost ažuriranja softvera i integrisanog softvera uređaja, ako je propisana, od datuma završetka stavljanja na tržište do		3	godina
22. Minimalna garantovana raspoloživost rezervnih delova, ako je propisana, od datuma završetka stavljanja na tržišt do		3	godina
23. Minimalno trajanje opšte garancije koju daje isporučilac		3	godina
24. Vrsta napajanja:		Unutrašnje	
25.Spoljašnje napajanje (priloženo uz proizvod, nije standardizovano)			
i.			
ii.	Ulazni napon		V
iii.	Izlazni napon		V
26.Spoljašnje standardizovano napajanje (ako nije priloženo uz proizvod, drugo odgovarajuće napajanje)			
i.	Podržani standadni naziv ili popis		
ii.	Potreban izlazni napon		V
iii.	Potrebna jačina struje (minimalna)		A
iv.	Potrebna frekvencija struje		Hz

Tehničke karakteristike : **napajanje 100-240 Vac 50/60Hz**
snaga potrošnje : 60 W

Sadržaj

Informacije o bezbednosti	1
Važne bezbednosne mere opreza	1
Tv taster i priključci na televizoru.....	2
Šema povezivanja spoljašnjih uređaja	2
Instalacija i povezivanje televizora.....	3
Uputstvo za montažu postolja televizora	3
Početna stranica (Meni na ekranu).....	4
USB	6
TV Podešavanja	7
Pomoć (Help).....	10
Tehničke specifikacije	11
Daljinski upravljač	12
Ekološki uslovi i ostala obaveštenja	13

Informacije o bezbednosti



Znak uzvika unutar jednakostraničnog trougla ukazuje korisniku na postojanje važnih uputstava za upotrebu u dokumentaciji koja prati uređaj.

OPREZ

RIZIK OD ELEKTRIČNOG UDARA
NE OTVARAJTE



UPOZORENJE

Simbol munje sa strelicom unutar jednakostraničnog trougla služi za upozoravanje korisnika na prisustvo neizolovanog opasnog napona unutar kućišta uređaja, koji može biti dovoljno jak da izazove električni udar.

Uređaj koristi visoke napone tokom rada.

Da biste smanjili rizik od električnog udara, **ne skidajte poklopac kućišta.**

Servisiranje poverite isključivo kvalifikovanom serviseru.

Ukoliko je potrebno izvršiti izmene ili veća podešavanja na televizoru, postoji rizik od električnog udara ili povreda. Ne pokušavajte da otvarate ili popravljate uređaj sami. Za održavanje pozovite ovlašćeni servis.

Važne mere bezbednosti

Važne mere bezbednosti

- 1) Pročitajte ova uputstva.
- 2) Sačuvajte ova uputstva.
- 3) Obratite pažnju na sva upozorenja.
- 4) Pratite sva uputstva.
- 5) Ne koristite ovaj uređaj u blizini vode.
- 6) Čistite isključivo suvom krpom.
- 7) Ne blokirajte otvore za ventilaciju. Instalirajte u skladu sa uputstvima proizvođača.
- 8) Ne postavljajte uređaj u blizini izvora toplote kao što su radijatori, grejna tela, šporeti ili drugi uređaji (uključujući pojačala) koji proizvode toplotu.
- 9) Ne uklanjajte bezbednosnu funkciju polarizovanog ili uzemljenog utikača. Ako utikač ne odgovara Vašoj utičnici, obratite se električaru radi zamene zastarele utičnice.
- 10) Zaštitite kabl za napajanje od gaženja ili pritezanja, posebno kod utikača, utičnice i mesta na kojem izlazi iz uređaja.
- 11) Koristite samo dodatke/pribor koje je naveo proizvođač.
- 12) Koristite isključivo sa kolicima, stalkom, postoljem, nosačem ili stolom koje je naveo proizvođač ili koji su isporučeni uz uređaj. Ako se koristi kolica, budite oprezni pri pomeranju kombinacije kolica i uređaja da biste izbegli prevrtanje i povredu.



- 13) Isključite uređaj iz utičnice tokom oluja sa grmljavinom ili kada se ne koristi duže vreme.

Upozorenje:

- 14) Da biste smanjili rizik od požara ili električnog udara, ne izlažite ovaj uređaj kiši niti vlazi.
- 15) Mrežni utikač služi kao sredstvo za isključivanje uređaja i mora biti lako dostupan u svakom trenutku.
- 16) Utičnica mora biti postavljena blizu uređaja i lako dostupna.
- 17) Ovaj uređaj ne sme biti smešten u ugradni prostor (npr. Regal) osim ako nije obezbeđena odgovarajuća ventilacija ili ako se striktno ne poštuju uputstva proizvođača.
- 18) Uređaj ne sme biti izložen kapanju ili prskanju tečnosti i na njega se ne smeju postavljati predmeti ispunjeni tečnošću, poput vaza.
- 19) Ne postavljajte nikakve izvore opasnosti na uređaj (npr. predmete ispunjene tečnošću, upaljene sveće).
- 20) Montiranje na zid ili plafon – Uređaj treba montirati na zid ili plafon isključivo u skladu sa preporukama proizvođača.



- 21) Nikada ne postavljajte televizor, daljinski upravljač ili baterije blizu otvorenog plamena ili drugih izvora toplote, uključujući i direktnu sunčevu svetlost. Da biste sprečili širenje požara, uvek držite sveće i druge plamenove dalje od televizora, daljinskog upravljača i baterija.
- 22) USB priključak treba da radi sa opterećenjem od 0,5 A tokom normalnog rada.
- 23) Baterija ne sme biti izložena prevelikoj toploti kao što su sunčeva svetlost, vatra ili slično.
- 24)  Ovo označava električni uređaj klase II ili je dvostruko izolovana. Dizajnirana je tako da ne zahteva uzemljenje radi bezbednosti.
- 25) Maksimalna dozvoljena radna temperatura okoline je 45 stepeni Celzijusa. Maksimalna dozvoljena nadmorska visina za upotrebu je 2000 metara..

TV taster i priključci na uređaju

Taster na TV-u

Napomena: Sledeća šema prikazuje samo funkcionalni raspored, a stvarni položaj i raspored dugmadi mogu se razlikovati u zavisnosti od modela.

Pritisnite ovaj taster u režimu čekanja (standby) da uključite ili isključite TV.



Prvo uključite utikač za napajanje na naizmeničnu struju (AC), zatim pritisnite taster za uključivanje na sredini TV-a ili na daljinskom upravljaču da biste uključili TV.

Priključci na uređaju:

 
Napomena: Sledeći prikaz predstavlja različite priključke, ali stvarni položaj, raspored i broj konektora mogu se razlikovati u zavisnosti od modela.

 AV IN	AV ulaz Ulaz za eksterni AV signal	 USB	USB ulaz Povežite USB uređaj ovde da biste reprodukovali njegove multimedijalne fajlove ili snimali programe pomoću PVR funkcije.
 HDMI	HDMI ulaz Ulaz za digitalni signal sa HDMI video konektora.	 OPTICAL	OPTICAL izlaz Povežite SPDIF prijemnik.
 ANT 75Ω	ANT 75 Povežite ulaz za antenu/kablovsku televiziju (75 Ω / VHF / UHF)	 RJ 45	RJ45 Povežite se na internet.
 EARPHONE	IZLAZ ZA SLUŠALICE Kada su slušalice priključene, zvučnici se isključuju.	 CI	CI OTVOR Ulaz za čitač kartica CI (Common Interface) zahteva CAM (modul za uslovni pristup) koji se koristi za plaćene TV usluge.




*Ne dodirujte i ne približavajte se HDMI i USB priključcima, i sprečite elektrostatičko pražnjenje koje može ometati ove priključke tokom rada USB režima, jer to može prouzrokovati da TV prestane da radi ili da dođe do nepravilnog rada.

Šema povezivanja spoljašnjih uređaja

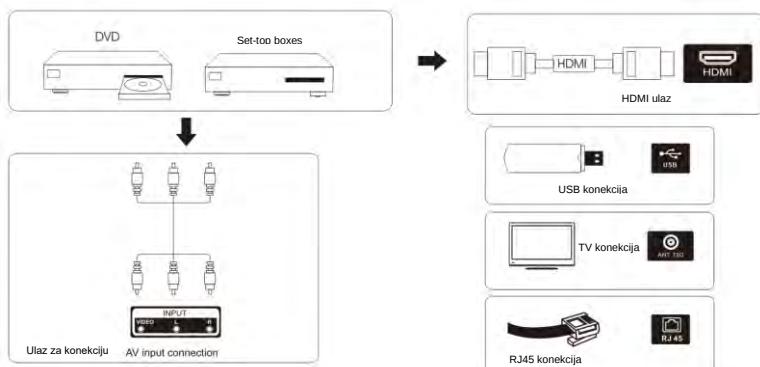

Instalacija i povezivanje TV uređaja

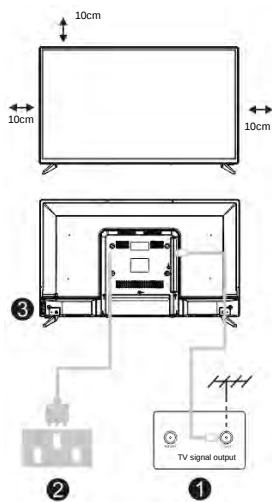 

Podešavanje TV-a

Postavite TV na čvrstu podlogu koja može da izdrži masu televizora.

Da biste izbegli opasnost, nemojte postavljati TV blizu vode ili izvora toplote (kao što su svetiljke, sveće, grejni uređaji) i ne blokirajte ventilacione otvore na zadnjoj strani TV-a.

Povezivanje antene i napajanja

1. Povežite antenu sa antenskim priključkom na zadnjoj strani TV-a.
2. Uključite kabl za napajanje TV-a (AC 100-240V, 50/60Hz).

Uključivanje TV-a

 
3. Povežite napajanje, TV će ući u režim čekanja (crveno svetlo). Pritisnite taster za uključivanje na TV-u ili na daljinskom upravljaču da biste uključili televizor.

Uputstvo za montažu postolja TV-a

1. Otvorite kartonsku ambalažu i izvadite TV, pomoćni pribor i postolje (kod nekih modela postolje nije uključeno).

2. Da biste izbegli oštećenje TV-a, pokrijte ga mekanim materijalom, stavite na sto licem prema dole na meki materijal i zavrnite postolje za televizor na predviđenom mestu.

3. Montaža je završena.

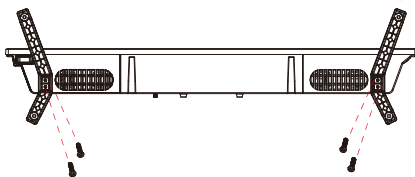

Preporuka:

Radi lakše montaže postolja i izbegavanja rizika od ogrebotina i oštećenja, preporučujemo upotrebu odvijača tipa PH2.

PH00

PH0

PH1

PH2



Početna stranica

Prikaz glavnog menija.

Pritisnuti ◀/▶ & <OK> za prelazak na sledeću stranicu menija.



Vremenska prognoza

Pritisnite ◀/▶ da biste izabrali “”, pritisnuti ▲ da biste označili, a zatim pritisnite taster <OK> da biste prešli na oblast gde možete pogledati vremensku prognozu.

Podešavanje

Pritisnite ◀/▶ da biste izabrali “”, pritisnite ▲ za izbor, a zatim pritisnite dugme <OK> da uđete u dodatna podešavanja., oristite ▼/▲/◀/▶ za navigaciju i pritisnite <OK> da potvrdite izbor.



 
Izvor

Pritisnite ◀/▶ da biste izabrali “”, Pritisnite ▲ i ◀/▶ za izbor, a zatim pritisnite <OK> da potvrdite izvor.




Nedavno gledano

Pritisnite ◀/▶ da biste izabrali “”, zatim pritisnite dugme ▲ da uđete u podmeni, i pritisnite ◀/▶ i <OK> da nastavite na sledeći korak.

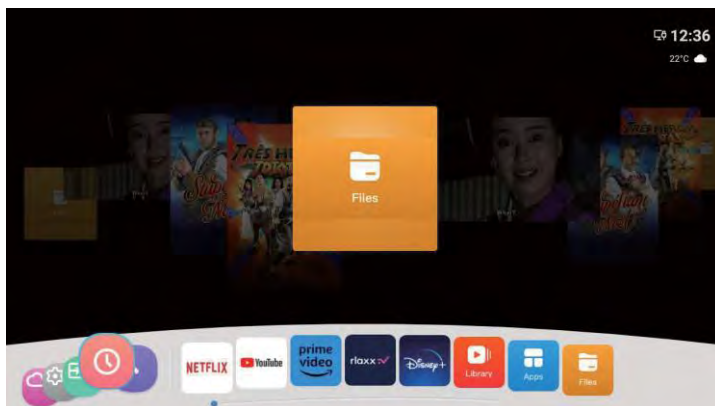

USB

 1. Nakon priključivanja USB uređaja, sistem će prikazati poruku da li želite da uđete na stranicu za multimediju; izaberite „potvrdi“ da biste ušli.
2. Pritisnite ▼/▲/◀/▶ da izaberete fajl, zatim pritisnite taster <OK> da uđete na stranicu fajla za sledeći korak. Sledeća stranica izgleda ovako:

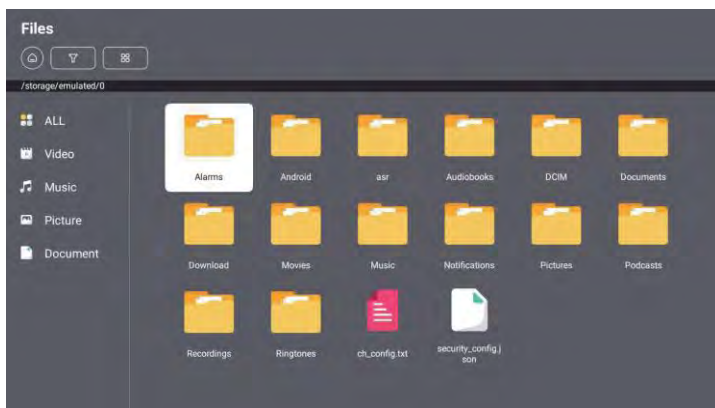

Video

Pritisnite ▼/▲ da izaberete kategoriju video zapisa, zatim pritisnite ▼/▲/◀/▶ da odaberete video koji želite da pustite, i pritisnite <OK> za reprodukciju. U režimu reprodukcije, pritisnite taster <OK> da prikazete meni plejer-a. Pritisnite ◀/▶ za izbor.

Muzika

Pritisnite ▼/▲ da izaberete kategoriju muzike, zatim pritisnite ▼/▲/◀/▶ da odaberete pesmu koju želite da pustite, i pritisnite <OK> za reprodukciju. U režimu reprodukcije, pritisnite taster <OK> da prikazete meni plejera. Pritisnite ◀/▶ za izbor.

Slika

Pritisnite ▼/▲ da izaberete kategoriju Slike, zatim pritisnite ▼/▲/◀/▶ da odaberete sliku koju želite da prikazete, i pritisnite <OK> za prikaz. U režimu prikaza, pritisnite taster <OK> da otvorite meni plejera. Pritisnite ◀/▶ za izbor.

TV Podešavanja

U interfejsu za gledanje TV-a, pritisnite taster <MENU> na daljinskom upravljaču da uđete u meni podešavanja TV-a.

Pritisnite tastere ◀/▶ na daljinskom da izaberete opciju.

Pritisnite dugme <OK> na daljinskom da uđete u odabranu opciju.

 
(Opcije: Izvor / Slika / Zvuk / Kanal / Opšte)

Izvor

Pritisnite taster <MENU> da uđete u glavni meni, zatim pritisnite tastere ◀/▶ da izaberete meni Izvor.

U ovom meniju možete pritisnuti ◀/▶/<OK> za izbor izvora signala.

(Opcije: DTV / ATV / AV / HDMI 1 / HDMI 2 / HDMI 3 ...)

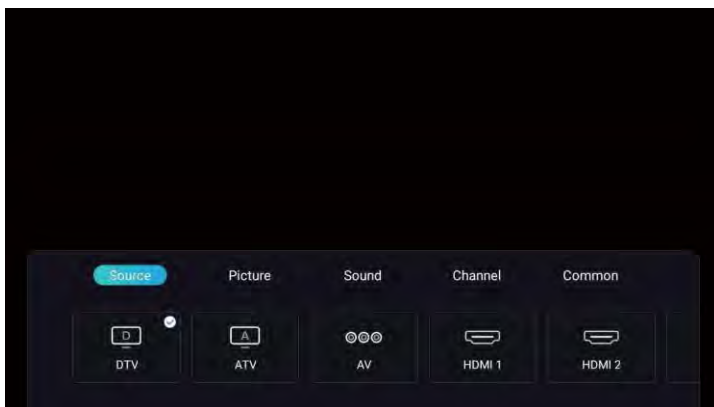

Slika

1. Pritisnite taster <MENU> da uđete u glavni meni, zatim pritisnite tastere ◀/▶ da izaberete meni Slika.

Pritisnite ▼/▲ da izaberete opciju u meniju.

(Opcije: Režim slike / Odnos slike / Napredna podešavanja) 2. Pritisnite <OK>/◀/▶ da podesite ili izaberete opciju na stranici izbora, zatim pritisnite ◀/▶ za izbor. (Opcije: Isključeno / Nisko / Srednje / Visoko)

Temperatura boje

Podesite ukupnu boju slike.

Pritisnite tastere ◀/▶ da izaberete Temperatura boje, pritisnite taster <OK> da uđete na stranicu izbora, i pritisnite ◀/▶ da izaberete opciju. (Opcije: Hladno / Normalno / Toplo)

Hladno: Slika je sa više zelene i plave, manje crvene boje, ukupna boja je svetlija. Slika deluje sveže i elegantno.

Normalno: Slika nije iskrivljena, boje su umerene.

Toplo: Slika je sa više crvene i zelene, manje plave boje, boje su svetlije i mekše.

Pozadinsko osvetljenje

 
Pritisnite tastere ◀/▶ da izaberete Pozadinsko osvetljenje, pritisnite taster <OK> da uđete na stranicu podešavanja, i pritisnite ◀/▶ da podesite jačinu.

DLC

Pritisnite tastere ◀/▶ da izaberete DLC, pritisnite dugme <OK> da uđete na stranicu izbora, i pritisnite ◀/▶ da odaberete opciju.

Zvuk


Pritisnite taster <MENU> da uđete u glavni meni, zatim pritisnite tastere ◀/▶ da izaberete meni Zvuk.

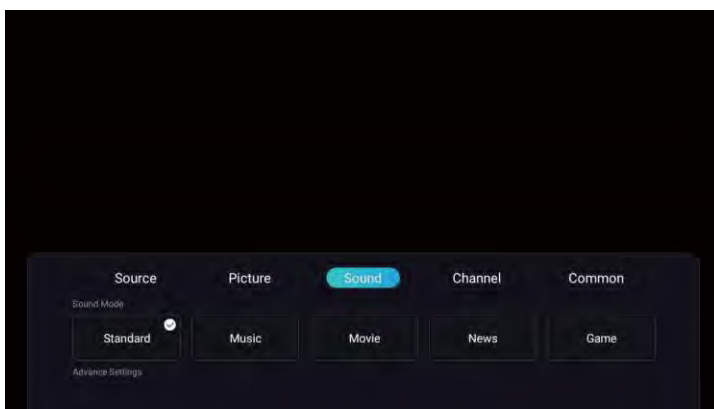

Pritisnite ▼/▲ da izaberete opciju u meniju.
(Opcije: Režim zvuka / Napredna podešavanja)

Program

 Pritisnite taster <MENU> da uđete u glavni meni, zatim pritisnite tastere ◀/▶ da izaberete meni program.

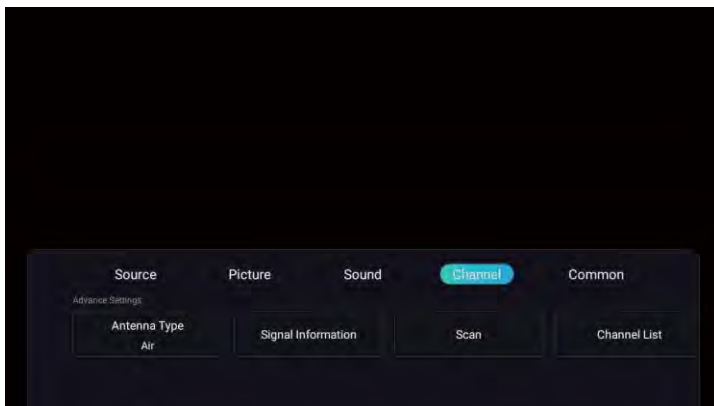

Tip antene

 
Pritisnite tastere ◀/▶ da izaberete tip antene, zatim pritisnite taster <OK> da uđete u podmeni.

Informacije o signal

Pritisnite tastere ◀/▶ da izaberete Informacije o signalu, zatim pritisnite taster <OK> da uđete u podmeni.

Pretraga


Pritisnite tastere ◀/▶ da izaberete pretragu stanica, zatim pritisnite dugme <OK> da uđete u podmeni. Pritisnite ▼/▲ da izaberete Start pretragu, što će automatski tražiti važeće programske kanale. Pritisnite taster <OK> da započnete pretragu. Ako želite da prekinete proces pretrage, možete pritisnuti taster za izlaz ili meni.

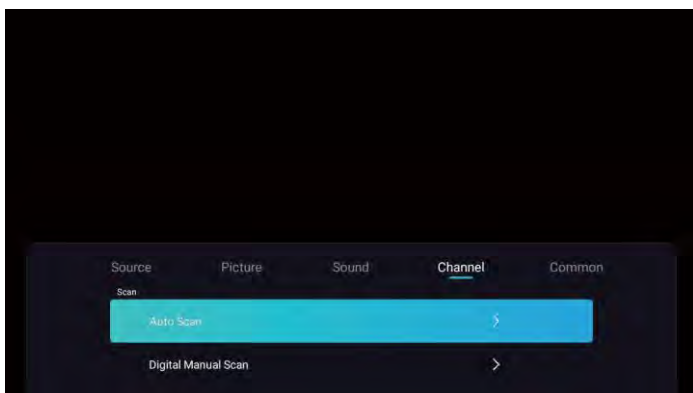

Resetovanje menija

Vraća podešavanja na fabričke vrednosti.

 Pritisnite ◀/▶ da izaberete Resetovanje menija, zatim pritisnite dugme <OK> da potvrdite da li želite da resetujete.

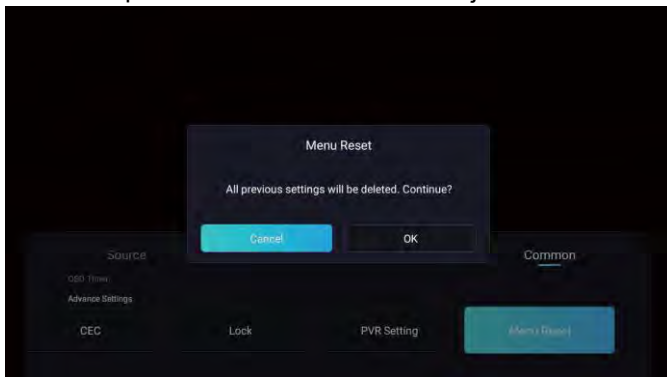

Pomoć

Nema napajanja	• Proverite da li je naponski (AC kabl) televizora uključen. Ako i dalje nema napajanja, isključite kabl iz utičnice, sačekajte 60 sekundi, zatim ponovo priključite kabl i uključite uređaj.
Signal nije ispravno primljen	• Na vašem TV-u mogu se pojaviti dvostruke ili fantomske slike ako su u blizini visoke zgrade ili planine. Možete podesiti sliku ručnim podešavanjem: konsultujte uputstvo za precizno podešavanje ili prilagodite pravac spoljne antene. • Ako koristite unutrašnju antenu, prijem signala može biti otežan u određenim uslovima. Podesite pravac antene za optimalan prijem. Ako se prijem ne poboljša, možda ćete morati preći na spoljnu antenu.
Nema slike	• Proverite da li je antena na zadnjoj strani TV-a pravilno povezana. • Pogledajte druge kanale da biste videli da li se problem i dalje pojavljuje.
Slika se prikazuje, ali nema zvuka	• Pokušajte da povećate jačinu zvuka. • Proverite da li je zvuk na TV-u isključen (mute).
Zvuk postoji, ali nema slike ili je slika izobličena	• Pokušajte da podesite kontrast i osvetljenje.
Šumovi (statika) utiču na kvalitet slike i zvuka	• Proverite da li je antena na zadnjoj strani televizora pravilno povezana.
Prekinute linije na ekranu	• Električni uređaji kao što su fen za kosu, usisivač i slično mogu ometati vaš TV. Isključite te uređaje.
Daljinski upravljač ne funkcioniše	• Uverite se da je plastična folija koja je došla sa daljinskim upravljačem uklonjena. Pokušajte da koristite daljinski sa kraće udaljenosti od TV-a. Proverite da li su baterije pravilno postavljene ili pokušajte sa novim baterijama. • TV će preći u režim pripravnosti (Standby) ako ne primi nikakav signal nekoliko minuta.
Nema slike (PC režim)	• Molimo proverite da li je kabl pravilno povezan na HDMI priključak, ili da li je kabl na nekim mestima savijen.
Ekran je previše svetao ili taman (PC režim)	• Podesite osvetljenje ili kontrast u glavnom meniju.
Računar ne reaguje	• Proverite da li je rezolucija ekrana na računaru podešena na rezoluciju koja je kompatibilna sa TV-om.
Pojavljuju se linije kada je uređaj povezan na RCA priključak	• Uverite se da koristite kabl dobrog kvaliteta.
Problemi i dalje postoje	• Isključite naponski kabl i sačekajte 30 sekundi, zatim ga ponovo priključite u utičnicu. Ako problemi i dalje postoje, nemojte pokušavati da sami popravljate TV. Ljubazno se obratite servisnoj službi.

Ne ostavljajte TV da prikazuje statičnu sliku, bilo da je u pitanju pauziran video, meni ekran ili slično, tokom dužeg vremenskog perioda – to može oštetiti ekran i dovesti do trajnog zadržavanja slike (tzv. “burn-in efekat”).

Tehničke specifikacije

Veličina ekrana	Potrošnja energije	Osnovni dodaci
22"/24"	36W	Uputstvo za upotrebu x1 Daljinski upravljač x1 naponski kabl x1 AAA baterije x2 (opciono)
32"	56W/60W	
40"	75W/90W	
43"	75W/90W/100W/120W	
50"	100W/120W/140W/250W/300W	
55"	110W/140W/170W/220W/250W/260W	
65"	160W/200W/320W/335W/400W	
75"	180W/220W/240W/440W	
77"	570W	
85"	300W	
100"	500W	



Radni vek: 60 000 sati



„Proizvedeno pod licencom kompanije Dolby Laboratories. Dolby, Dolby Audio i simbol sa dvostrukim D su zaštićeni žigovi kompanije Dolby Laboratories Licensing Corporation.“



„Nazivi HDMI i HDMI High-Definition Multimedia Interface, kao i HDMI logo, su žigovi ili registrovani žigovi kompanije HDMI Licensing LLC u Sjedinjenim Američkim Državama i drugim zemljama.“

UPOZORENJE

Nikada ne postavljajte televizor na nestabilnu površinu. Televizor može pasti i izazvati ozbiljne povrede ili smrt. Mnoge povrede, posebno kod dece, mogu se izbjeći jednostavnim merama predostrožnosti kao što su:

Korišćenje ormarića ili postolja koje preporučuje proizvođač televizora.

Korišćenje samo nameštaja koji može bezbedno da podrži televizor.

Proveravanje da televizor ne prelazi ivicu nameštaja na kojem stoji.

Ne postavljati televizor na visoki nameštaj (npr. plakare ili police) bez učvršćivanja i nameštaja i televizora za stabilnu potporu.

Ne postavljati televizor na tkanine ili druge materijale koji se mogu naći između televizora i nameštaja.

Edukovati decu o opasnostima penjanja na nameštaj kako bi dohvatili televizor ili njegove kontrole.

Ako se vaš postojeći televizor zadržava i premješta, treba primeniti iste mere predostrožnosti kao gore navedene.

Napomena: ne postavljajte pod uglom kako biste izbegli rizik od pada.

Daljinski upravljač



1. Prebacuje TV između uključenog i režima pripravnosti (standby).
2. Indikatorsko svetlo.
3. Isključi ili uključi zvuk na TV-u.
4. 0-9: Brojevi "0-9" služe za direktan unos broja kanala.
5. APPS: Otvara stranicu sa aplikacijama.
6. TXT: Pritisnite da uđete u Teletext dok gledate program.
7. whale tv+: Otvara rlxxtv.
8. V+/-: Pritisnite za povećanje / smanjenje jačine zvuka
9. P+/-: Pritisnite za pretraživanje kanala.
10. AUDIO: Prikazuje listu audio jezika i omogućava izbor audio jezika ili formata zvuka, ako je dostupno (važi samo ako TV program podržava ovu funkciju).
11. Ulazi: Prikazuje/Izabira opcije izvora signala.
12. INFO: Prikazuje informacije o trenutnom kanalu, kao što su trenutno vreme i naziv kanala.
13. Navigacioni tasteri: Kursor GORE/LEVO/DESNO/DOLJE.
14. BACK: Pritisnite da se vratite nazad kroz menije.
15. FILES: Otvara aplikaciju za upravljanje fajlovima..
16. HOME: Prikazuje početni ekran.
17. SLEEP: Podešava vreme automatskog isključivanja.
18. SUBT = SUBT
19. NETFLIX:
20. Povezuje se sa NETFLIX-om za gledanje online serija i filmova (potrebna internet konekcija).
21. Library: Otvara aplikaciju Whale Time.
22. YouTube:
23. Povezuje se sa YouTube-om (potrebna internet konekcija).
24. **Disney+ :** (potrebna internet konekcija)
25. Povezuje se sa Disney+ (potrebna internet konekcija).
26. Prime video :
27. Povezuje se sa Prime video (potrebna internet konekcija).
28. • PVR: snima uživo TV program.
29. Podešavanja: Na POČETNOJ stranici ovaj taster ima funkciju "Kontrolne table". Dok gledate uživo TV, ovaj taster ima funkciju "Meni".
30. :Prikazuje OSD (On Screen Display) meni.
31. EPG: EPG meni .

*Dostupnost aplikacija može varirati u različitim zemljama.

Ugradnja baterija:

Skinite poklopac odeljka za baterije na poledini daljinskog upravljača tako što ćete pomeriti poklopac nadole, a zatim ga ukloniti. Stavite dve AAA baterije u odeljak tako da polovi (+ i -) budu usklađeni kao što je naznačeno. Nemojte mešati stare i nove baterije ili različite vrste baterija. Ponovo postavite poklopac odeljka za baterije. Pomerite poklopac dok ne začujete klik.

PAŽNJA:

Baterije ugrađene u uređaj ne smeju biti izložene prekomernoj toploti, kao što su sunčeva svetlost, vatra i slično.

EKOLOŠKI USLOVI I OSTALA OBAVEŠTENJA

“Sprovođenje Direktive 2012/19/EU o otpadu od električne i elektronske opreme (RAEE)”



Ova oznaka ukazuje da se ovaj proizvod ne sme odlagati zajedno sa drugim kućnim otpadom, već treba biti odložen odvojeno od drugih vrsta otpada. Stoga, korisnik treba da odnese proizvod sa svim bitnim komponentama u centre za reciklažu električnog i elektronskog otpada, ili da ga vrati prodavcu prilikom kupovine novog proizvoda istog ili ekvivalentnog tipa, u odnosu 1 prema 1, odnosno 1 prema 0 za proizvode kod kojih je veća strana manja od 25 cm. Ispravno odlaganje starog uređaja pomoći će u sprečavanju potencijalne štete po životnu sredinu i ljudsko zdravlje, kao i u podršci reciklaži materijala. Nezakonito odlaganje proizvoda može dovesti do administrativnih sankcija za korisnike, u skladu sa Zakonskim dekretom br. 49 od 14. marta 2014. godine.



Ispravno odlaganje baterija u ovom proizvodu
(Primjenjivo u zemljama sa sistemima odvojenog prikupljanja)

Ova oznaka na bateriji, uputstvu ili pakovanju ukazuje da se baterije u ovom proizvodu ne smeju odlagati zajedno sa ostalim kućnim otpadom nakon isteka njihovog radnog veka. Simboli hemijskih elemenata Hg, Cd ili Pb označavaju da baterija sadrži živu, kadmijum ili olovo iznad referentnih nivoa propisanih Direktivom EU 2006/66. Ukoliko se baterije ne odlažu pravilno, ove supstance mogu štetiti ljudskom zdravlju i životnoj sredini.

Da biste zaštitili prirodne resurse i podstakli ponovnu upotrebu materijala, molimo vas da odvojite baterije od drugih vrsta otpada i da ih reciklirate putem lokalnog, besplatnog sistema za prikupljanje baterija.

CAUTION:



Da biste sprečili moguće oštećenje sluha, nemojte dugo slušati na visokim nivoima jačine zvuka.

Ekološki uslovi

Radna temperatura: 5°C - 35°C (41°F - 95°F)

Radna vlažnost: 20% - 75%, bez kondenzacije

Temperatura skladištenja: -15°C - 45°C (5°F - 113°F)

Vlažnost skladištenja: 10% - 90%, bez kondenzacije



1. Izaberite dobro mesto za televizor, u čistom prostoru, dalje od izvora toplote (sunce, radijatori, kamini), biljaka (polen, prašina, voda) i tla (rizik od udaraca, prašine).



2. Ne pokrivajte otvore na vrhu, stranama ili dnu uređaja tkaninama, papirom ili drugim materijalima..



3. Isključite televizor nakon korišćenja (osim ako proizvođač ne savetuje drugačije, što je obično slučaj sa OLED televizorima) i iskopčajte ga iz struje ako se neće koristiti duže vreme (kod OLED televizora, prvo ga ostavite u standby režimu pre isključivanja iz struje).



4. Čuvajte daljinski upravljač pažljivo, ne izlažite ga tečnostima i redovno proveravajte stanje baterija da biste sprečili koroziju kontakata.



5. Čistite ekran mekanom, suvom krpom nakon isključivanja i iskopčavanja naponskog kablova iz utičnice, izbegavajte korišćenje sprejeva za staklo i drugih kućnih sredstava za čišćenje.



USER MANUAL

LED Television Model: 32WHA450C

Thank you for purchasing this device.

FOX LED televisions are known for their great performance, as for modern, functional and elegant design. Besides that, we constantly improve our customer support, we have highly efficient and wide network of services, that make our proud customers feel safe.

You made a right choice.

Now it's time for instructions, they are not complicated, but you have to follow them.

EN

Content

- Safety Information1
- Important Safety Precautions.....1
- TV Buttons And Terminal Interface2
- External device connection diagram2
- TV Install And Connect3
- TV Stand Installation Instructions3
- HOME PAGE4
- USB.....6
- Settings7
- HELP10
- Specifications11
- Remote control.....12
- EKO13

Safety Information



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating information in the literature accompanying the appliance.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



Warning
The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

High voltages are used in the operation of this product. To reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personnel.

If the TV any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centres needed overhaul.

Important Safety Precautions

- 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions.
- 5) Do not use this apparatus near water. 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments /accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.

Caution:

- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) The socket-out shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.



- 21) Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 22) The USB terminal should be loaded with 0.5 A under normal operation. These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.
- 23) The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- 24)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 25) The maximum using environment temperature is 45 degrees. The Maximum using altitude is 2000 meters.

TV Buttons And Terminal Interface

TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.



Press this button in standby mode to turn on / off the TV.

First, turn on the AC power switch, then press the power button in the center of the TV or the remote control to turn on the TV.

Terminal Interface


Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

 AV IN	AV input External AV Signal Input	 USB	USB input Connect a USB device here to play its media files or to record programs via the PVR function.
 HDMI	HDMI input Digital signal input from HDMI video connector.	 OPTICAL	OPTICAL output Connect the SPDIF receiver.
 ANT 75Ω	ANT 75 Connect the antenna/cable tv input (75/VHF/UHF)	 RJ 45	RJ45 Connect the Internet.
 EARPHONE	EARPHONE output When earphones are plugged in, speakers are disabled.	 CI	CI SLOT The card reader input CI(common interface) this requires CAM (conditional access module) used for pay TV.




*Do not touch or be close to the HDMI, USB terminals, and prevent electrostatic discharge to disturb these terminals while in USB operation mode, or it will cause the TV to stop working or abnormal status.

 External device connection diagram

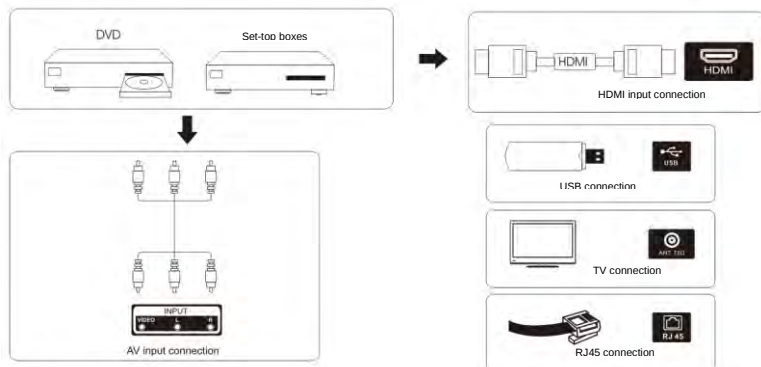

TV Install And Connect

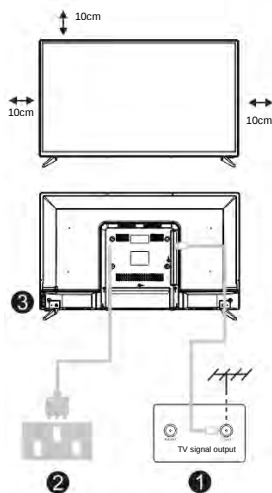 

Set your TV

To put your TV on a firm place which can bear the weight of the TV.

To avoid danger, please don't position the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.

2. To plug the power cord of TV (AC 100-240V-50/60HZ).

Turn on TV

3. Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV

TV Stand Installation Instructions

1. Open the carton and remove the TV and scattered accessories and base (some models without base).

2. In order to avoid damaging the TV, please cover it with soft mattress, put it on the table, face down on the soft material and screw the neck of the base to the TV.

 
3. Screw the base and connected to the TV.

4. The installation is complete.

Note:


Picture for reference purposes only.

Please prevail in kind

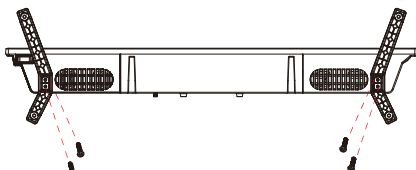

Suggestion:

 To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

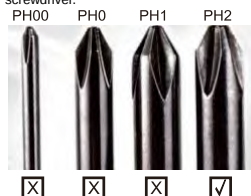

Home page

The following is the main menu interface.

Press ◀/▶ & <OK> to switch the navigation page.



Weather



Press ◀/▶ to select “”, press ▲ to select and press the <OK> button to switch to the area where you can view the weather.

Setting



Press ◀/▶ to select “”, press ▲ to select and press the <OK> button to enter more settings, press ▼/▲/◀/▶ to select and press the < OK > button to confirm.



Source



 
Press ◀/▶ to select “”, press ▲&◀/▶ to select and press the <OK> button to select the source.



Playback




Press ◀/▶ to select “”, then press ▲ button to enter the Submenu and press ◀/▶ & <OK> button to proceed to the next step.

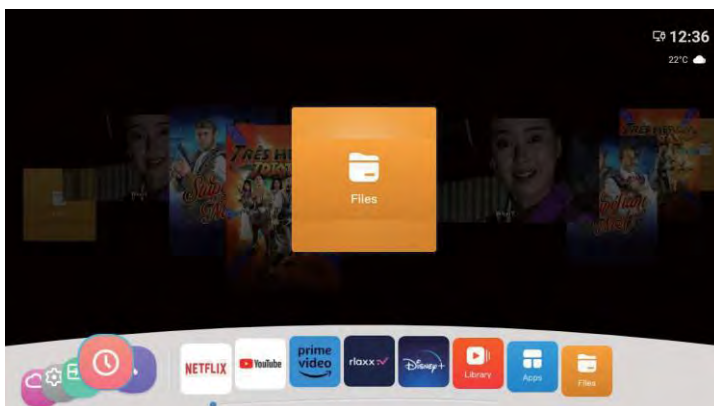

Media

 1. After inserting the USB device, the system will pop up whether to enter the multimedia page, select "confirm" to enter.
2. Press ▼/▲/◀/▶ to select the file, then press <OK> button to enter the file page for the next step. The following page is as follows:

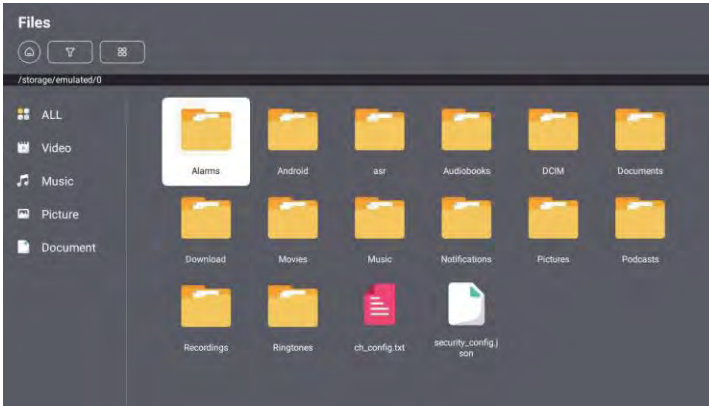

Video

Press ▼/▲ to select the video category, then press ▼/▲/◀/▶ to select the video you want to play, and press <OK> to play.
In the play interface, press the <OK> button to display the player menu.
Press ◀/▶ to select.

Music

Press ▼/▲ to select the Music category, then press ▼/▲/◀/▶ to select the Music you want to play, and press <OK> to play.
In the play interface, press the <OK> button to display the player menu. Press ◀/▶ to select.

Picture

Press ▼/▲ to select Picture, then press ▼/▲/◀/▶ to select the picture you want to play, and press <OK> to play.
In the play interface, press the <OK> button to display the player menu.
Press ◀/▶ to select.

TV Setting

In the TV viewing interface, press the<MENU>button in the remote control to enter the TV setting menu.

Press the ◀/▶ key in the remote control to select.

Press the<OK>key in the remote control to enter.

 
(option:Source/ Picture/ Sound/ Channel/ Common)

Source

Press the<MENU>key to enter the main menu interface, and press the ◀/▶ key to select the Source menu.

In this interface, you can press ◀/▶/<OK>to switch the signal source.

(option: DTV/ ATV/ AV/ HDMI 1/ HDMI 2/ HDMI 3...)

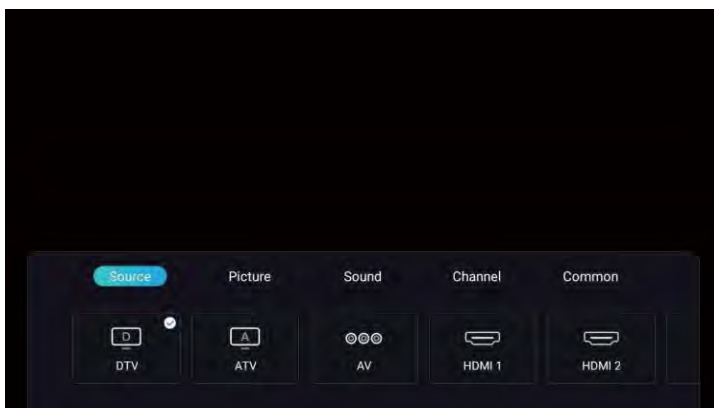

Picture

Press the<MENU>key to enter the main menu interface, and press the ◀/▶ key to select the Picture menu.

1. Press ▼/▲ to select the menu.

(option: Picture Mode/Aspect Ratio/Advance Settings)

2. Press<OK>/◀/▶ to adjust or select.selection page, and press the ◀/▶ key to select. (option: Off/ Low/ Middle/ High)

Color Temp

Adjust the overall color of the image.

Press the ◀/▶ key to select Color Temp, press the<OK>key to enter the selection page, and press the ◀/▶ key to select.

(option: Cool/ Normal/ Warm)

Cool:The picture is green and blue, less red, and the overall color is light. The picture is more fresh and elegant.

Normal:The picture is not biased and the color is moderate.

Warm:The picture is red and green, less blue, and the color is more bright and soft.

TV Setting

Backlight

 
Press the ◀/▶ key to select Backlight, press the <OK>key to enter the adjustment page, and press the ◀/▶ key to adjust.

DLC

Press the ◀/▶ keys to select DLC, press the <OK>key to enter the selection page, and press the ◀/▶ keys to select.

Sound


Press the <MENU>key to enter the main menu interface, and press the ◀/▶ key to select the Sound menu.

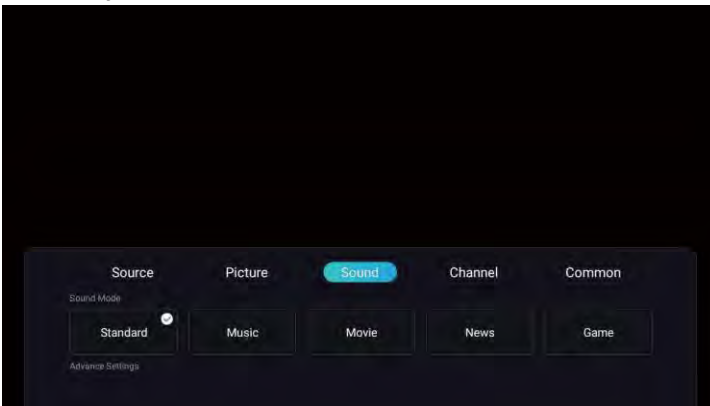

Press ▼/▲ to select the menu. (option:Sound mode/ Advance Settings)

Channel

 Press the <MENU>key to enter the main menu interface, and press the ◀/▶ key to select the Channel menu.

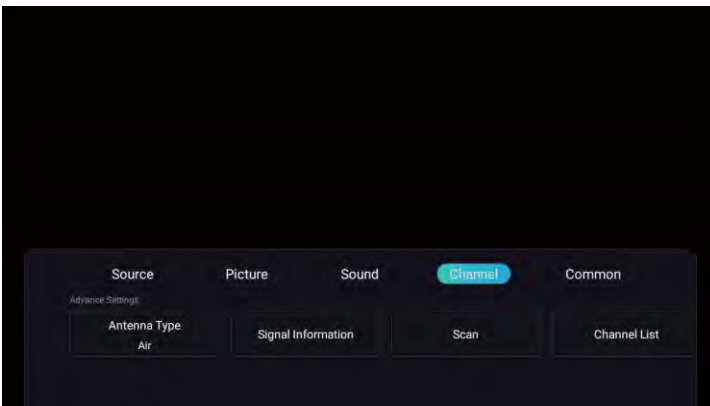

TV Setting

Antenna Type

 
Press the ◀ / ▶ button to select Antenna Type, press <OK> button to enter the submenu.

Signal Information

Press the ◀ / ▶ button to select Signal Information, press <OK> button to enter the submenu.

Scan


Press ◀ / ▶ button to select the search station, then press <OK> button to enter the submenu. Press ▼ / ▲ to select Start scan, which will automatically search the valid program channel. Press the <OK> button to start the search. If you want to stop the search process, you can press the exit or menu button.

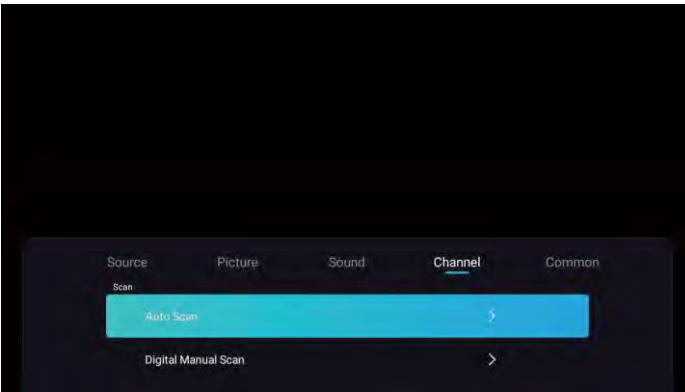

Menu Reset

Restore default settings.

 Press ◀ / ▶ to select Menu Reset, and press the <OK> key to select whether to reset.

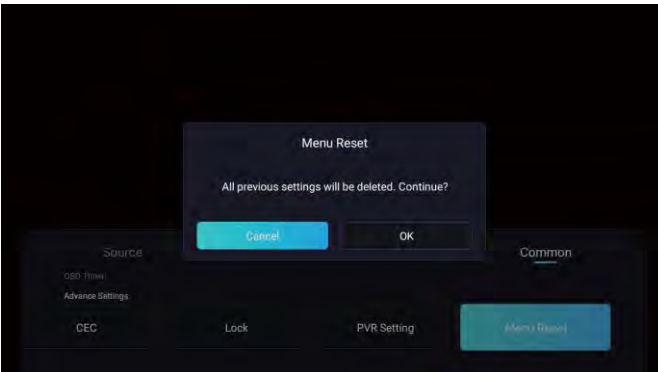

Help

No power	Check if the AC cord of 1V is plugged in or not. If there's still no power, please disconnect the plug, and reconnect to the socket after 60 seconds. Turn the power back on.
Signal not received properly	- Double or phantom images may appear on your 1V if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult instruction of vernier regulation, or adjust the direction of the external antenna. - If you use an indoor antenna, signal reception may be more difficult under certain circumstances. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.
No picture	- Check if the antenna at the back of the 1V is connected properly. - View other channels to see if the problem still occurs.
Video appears with no audio	- Try increasing the volume. - Check if the TV's sound is on mute or not.
Audio is present, but video does not appear or is discolored	Try adjusting the contrast and brightness.
Static noise affects video and audio quality	Check if the antenna at the back of the 1V is connected properly.
Broken lines on screen	Electrical appliances such as hair dryers or vacuums etc. may be interfering with your 1V set. Switch these appliances off.
Remote doesn't work	- Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the 1V. Check if the placement of the batteries is correct, or try using new batteries with the remote control. - The 1V will go into Standby mode if it receives no response in a few minutes.
No video (PC mode)	Please check if the cable is connected to the HDMI port correctly, or if the cable is bent in some places.
Screen is too bright or dark (PC Mode)	Adjust the brightness or contrast in the main menu.
No response from the PC	Check if the PC's display resolution is set to a compatible resolution for the 1V.
Lines appearing when a device is connected to the RCA port	Make sure you are using a cable in good quality.
Problems are unresolved	Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the 1V by yourself. Kindly contact the service center.

Do not leave your 1V displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.

Specifications

Screen Size	Power Consumption	Main Accessories
22"/24"	36W	User's manual x1 Remote controller x1 Power cord x1 AAA Batteries x2 (Optional)
32"	56W/60W	
40"	75W/90W	
43"	75W/90W/100W/120W	
50"	100W/120W/140W/250W/300W	
55"	110W/140W/170W/220W/250W/260W	
65"	160W/200W/320W/335W/400W	
75"	180W/220W/240W/440W	
77"	570W	
85"	300W	
100"	500W	



LIFE TIME : 60,000 Hrs



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

1. Using cabinets or stands recommended by the manufacturer of the television set.
2. Only using furniture that can safely support the television set.
3. Ensuring the television set is not overhanging the edge of the supporting furniture.
4. Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
5. Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
6. Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Note: don't hang at an angle to avoid the risk of falling off.

Remote control



1. Switches the TV between on and standby mode.
2. Indicator light.
3. Mute or restore your TV sound.
4. 0-9: Figures "0-9" are used to directly input channel number.
5. Apps : Open the Apps page.
6. TXT: Press to enter Teletext when play the program.
7. whale tv+: Open rlaaxTV.
8. V+/-: Press to increase / decrease the sound level.
9. P+/-: Press to scan through channels.
10. Audio: Displays the Audio Language list and select an audio language or audio format if available (only applicable when the TV programme has this feature).
11. Inputs: Display/Select signal source options.
12. INFO: Displays the present channel information such as the current time and channel name.
13. Navigation buttons: Cursor UP/LEFT/RIGHT/DOWN.
14. Back: Press to move back through menus.
15. Files: Open the file manager application .
16. HOME : Displays the home screen.
17. SLEEP: Set the sleep time.
18. SUBT : SUBT
19. NETFLIX:
Connects to NETFLIX for viewing online! Vs hows and films (internet connection required).
20. Library: Open whale time APP.
21. YouTube:
Connects to YouTube (internet connection required).
22. **Disney+ :**
Connects to Disney+ (internet connection required).
23. Prime video :
Connects to Prime video (internet connection required).
24. • PVR: Record LiveTV programme.
25. Setting: In the HOME page, this button is "Dashboard" function. On the Live TV, this button is "Menu" function.
26.  : Displays the OSD (On Screen Display) menu.
27. EPG: E P G m e n u .

*Availability of applications may vary in different countries.

Battery Installation:

Remove the battery compartment lid on the rear of the remote control by sliding the lid down, then off. Put two AAA batteries inside the battery compartment with their + and - ends aligned as indicated. Do not mix old and new batteries or different types of batteries. Refix the battery compartment lid. Slide the lid until you hear it click into place.

CAUTION:

Batteries installed in the unit should not be exposed to excessive heat such as sunshine, fire and the like.

"Execution of Directive 2012/19/UE about electrical and electronic equipment waste (RAEE)"



This marking indicates that this product should not be disposed with other household wastes, but it should be disposed separately from other wastes. Therefore, the user should bring the product with all essential components to recycling centers for electrical and electronic wastes, or return to retailer before to buy a new product as equivalent type, in the ratio of 1 to 1, or 1 to 0 for products that have larger side lesser of 25cm. Correct disposal of your old appliance will help to prevent potential damage to the environment and to human health and support materials recycling. The unlawful disposal of the product should involve for users' administrative sanctions based on Legislative Decree no. 49 dated 14th March, 2014.



Correct disposal of the batteries in this product
(Applicable in countries with separate collection systems)

This marking on battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

CAUTION:



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Environmental Considerations

Operating Temperature: 5°C -35°C(41° F-95° F)

Operating Humidity: 20% -75%, non-condensing

Storage Temperature:-15°C -45°C(5° F-113° F)

Storage Humidity: 10% -90%, non-condensing



1. Choose a good location for the television, in a clean place, away from sources of heat (sun, radiators, fireplaces), plants (pollen, dust, water) and the ground (risk of knocks, dust).



2. Do not place cloth, paper or other materials over the openings on the top, sides or bottom of the appliance.



3. Switch off the television after use (unless the manufacturer's operating instructions advise against it, as is usually the case for OLED televisions) and unplug it if it is not going to be used for (if it is an OLED television, leave it on standby before unplugging it).



 
4. Store the remote control carefully, do not expose it to liquids and check the condition of the remote control batteries regularly to prevent corrosion of the contacts.



5. Clean the screen with a soft, dry cloth after switching off and unplugging the television, and avoid glass sprays and other household cleaning agents.



Prilikom proizvodnje korišćena licenca kompanije Dolby Laboratories. Dolby, Dolby Audio i simbol dvostruko-D su zaštitni znaci kompanije Dolby Laboratories.



W035-2



HONGKONG EXPRESS LOGISTICS
 (CHINA) LTD. (HKL) No. 18, Langwan Road,
 Juyuan Administrative Village, Minxing Town,
 Zhongshan, Guangdong, China
 UNOBNK SA BRUSSELS/BRUXELLES COO,
 BATAVION CH DRIJS 5 COO 10K
 11000 BROOKLYN/QUEEN'S L. 10004



И 035 25

Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs