



HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model:43DTV240D

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR

Informacije o proizvodu (lista sa podacima)		
Informacije	Vrednost	Jedinica
1. Ime ili zaštitni znak isporučioća	VIMPORT DOO BEOGRAD	
Adresa isporučioća	Batajnički drum 9 deo 10a, Beograd(Zemun)	
2. Identifikaciona oznaka modela	FOX LED TV 43DTV240D	
3. Klasa energetske efikasnosti za SDR mod	F	
4. Snaga u uključenom stanju za standardni dinamički raspon (SDR)	45.0	W
5. Klasa energetske efikasnosti (HDR)		
6. Snaga u uključenom stanju za mod velikog dinamičkog raspona (HDR), ako je primenjivo		W
7. Snaga u isključenom stanju, ako je primenjivo		W
8. Snaga u stanju pripravnosti, ako je primenjivo	0.3	W
9. Snaga u umrežanom stanju pripravnosti, ako je primenjivo		W
10. Kategorija elektronskog ekrana	Televizor	
11. Odnos veličina	16 : 9	
12. Rezolucija ekrana (u pikselima)	1920 x 1080	piksela
13. Dijagonala ekrana	43.0	inča
14. Dijagonala ekrana	109.0	cm
15. Vidljivo područje ekrana	49.8	dm ²
16. Tehnologija panela koja se koristi	LCD sa LED	
17. Automatska regulacija sjajnosti (ABC) koja je dostupna	Ne	
18. Senzor za prepoznavanje glasa koji je dostupan	Ne	
19. Senzor prisutnosti u prostoriji koji je dostupan	Ne	
20. Učestalost osvežavanja slike (zadata postavka)	60	Hz
21. Minimalna garantovana raspoloživost ažuriranja softvera i integrisanog softvera uređaja, ako je propisana, od datuma završetka stavljanja na tržište do	3	godina
22. Minimalna garantovana raspoloživost rezervnih delova, ako je propisana, od datuma završetka stavljanja na tržište do	3	godina
23. Minimalno trajanje opšte garancije koju daje isporučilac	3	godina
24. Vrsta napajanja:	Unutrašnje	
25. Spoljašnje napajanje (priloženo uz proizvod, nije standardizovano)		
i.		
ii.	Ulazni napon	V
iii.	Izlazni napon	V
26. Spoljašnje standardizovano napajanje (ako nije priloženo uz proizvod, drugo odgovarajuće napajanje)		
i.	Podržani standardni naziv ili popis	
ii.	Potreban izlazni napon	V
iii.	Potrebna jačina struje (minimalna)	A
iv.	Potrebna frekvencija struje	Hz

Tehničke karakteristike : napajanje 100-240 Vac 50/60Hz
snaga potrošnje : 75 W



Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.



UPOZORENJE:
KAKO BI SMANJILI RIZIK OD STRUJNOG UDARA NE UKLANJAJTE POKLOPAC (ILI ZADNJI DEO). UNUTAR UREĐAJA NEMA DELOVA KOJE SAMI MOŽETE ZAMENITI. OBRATITE SE KVALIFIKOVANIM SERVISERIMA.



Simbol munje u jednakostraničnom trouglu upozorava korisnika na neizolovane opasne delove pod naponom unutar uređaja, koji može biti dovoljne jačine da predstavlja rizik od električnog udara.



Znak uzvika u jednakostraničnom trouglu obaveštava korisnika na postojanje važnih operacionih instrukcija kao i instrukcija za održavanje u literaturi koja prati proizvod.

INFORMACIJE O PROPISIMA:

Ova oprema stvara, koristi i zrači radio frekventne talase i ako nije instalirana i korišćena u skladu sa uputstvom, može izazvati štetne smetnje u radio komunikaciji. Ipak, ne postoji garancija da se smetnje neće pojaviti prilikom određenih instalacija. Ako ova oprema ipak izazove štetne smetnje pri radio ili TV prijemu signala, što se može utvrditi tako što se oprema isključi pa ponovo uključi, korisnik se savetuje da ukloni smetnje pomoću jedne ili više ponuđenih mera:

- Premestite prijemnu antenu.
 - Povećajte razdaljinu između opreme i prijemnika.
 - Opremu i prijemnik uključite u različite strujne utičnice.
 - Posavetujte se sa prodavcem ili sa iskusnim radio/TV serviserom.
- Sve izmene ili modifikacije koje nisu izričito odobrene od strane koja je ovlašćena da izda saglasnost, mogu da ponište garanciju izdatu od strane proizvođača uređaja.

OPREZ:

 
NE pokušavajte da modifikujete ovaj proizvod u bilo kom smislu bez pismenog odobrenja prodavca. Neovlašćena modifikacija proizvoda može da poništi garanciju izdatu od strane proizvođača uređaja.

Nije preporučljivo da određena statična slika bude stalno prikazana na ekranu duže vreme ili da prikazujete ekstremno svetle slike.


Ilustracije u ovom uputstvu su obezbeđene samo kao preporuke i mogu se razlikovati od stvarnog izgleda proizvoda. Dizajn i specifikacije proizvoda mogu se promeniti bez prethodnog upozorenja.

VAŽNE MERE OPREZA:

1. Pročitajte ovo uputstvo.
2. Sačuvajte ovo uputstvo.
3. Pročitajte sva upozorenja.
4. Pratite sve instrukcije.

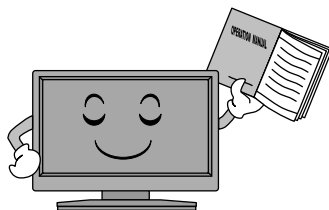

 
7. Ne blokirajte bilo koji ventilacioni otvor. Montirajte TV u skladu sa uputstvom proizvođača.

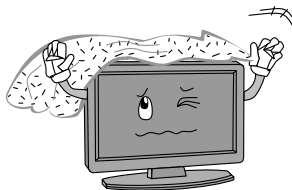


5. Ne koristiti proizvod u blizini vode.



 8. Ne postavljati u blizini izvora toplote kao što su radijatori, peći ili drugi objekti (uključujući i pojačavače) koji emituju toplotu.

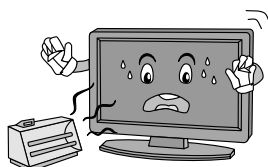

 
6. Brisati samo sa suvom krpom.

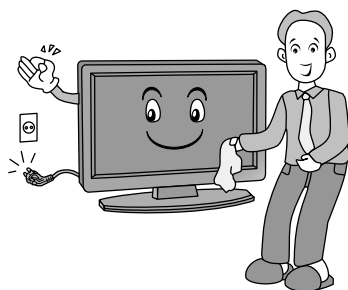

9. Utikač aparata priključite u odgovarajuću utičnicu, odnosno voditi računa da li je utikač sa polarizovanim viljuškama ili sa uzemljenjem pa shodno tome odabrati i utičnicu.

Mere opreza:

 10. Čuvajte mrežni kabl od gaženja ili od priklještenja naročito kod utikača, razvodne kutije i izlaza iz aparata.

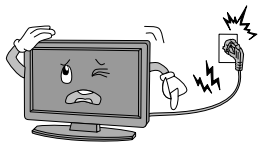


11. Koristite samo one dodatke navedene od strane proizvođača.


12. Aparat koristiti samo sa kolicima, stalkom, tronožcem, podupiračem ili stolom naznačenim od strane proizvođača ili sa onim dobijenim uz aparat. Kada koristite kolica obratite pažnju kada ih pomerate da bi izbegli ozledu ako dođe do prevrtanja.



 13. Isključite iz struje ovaj aparat za vreme oluja sa munjama ili ako ga duže vreme ne koristite.

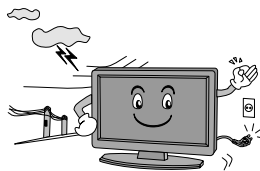

 14. Prepustite servisiranje kvalifikovanim osobama. Servis je potreban kad je aparat oštećen u bilo kom smislu, kao na primer oštećenje utikača ili naponskog kabla, ako je po njemu prosuta tečnost ili je neki predmet upao u njega, ako je bio izložen kiši ili vlazi, ako ne radi normalno ili ako je ispušten.

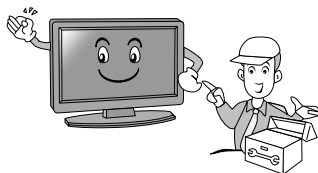

PRILIKOM ODLAGANJA (BACANJA):

- Ne bacajte ovaj proizvod sa ostalim kućnim smećem.
- Odlaganje (bacanje) ovog proizvoda mora da se uradi u skladu sa regulativama zemlje u kojoj živite.

OBRATITI PAŽNJU:

- Ako je aparat hladan na dodir, može doći do malog treperenja prilikom paljenja. Ovo je normalno, nema ničeg nepravilnog u radu vašeg TV-a.
- Nekoliko minuta mogu biti vidljive tačkaste nepravilnosti na ekranu, pojavljujući se kao sićušne crvene, zelene ili plave tačke. Ova pojava nema štetan uticaj na performanse vašeg TV-a.
- Izbegavajte dodirivanje ili držanje prsta duže vreme na ekranu. Ako to uradite može doći do privremene iskrivljenosti vašeg ekrana.

 
Upotreba daljinskog upravljača:

Kada koristite daljinski upravljač usmerite ga ka senzoru na TV-u. Ako postoji predmet između daljinskog i senzora, aparat možda neće reagovati.

- Uperite daljinski upravljač ka senzoru na TV-u.
- Kada koristite TV u veoma osetljivoj prostoriji infra crveni senzor možda neće raditi kako treba.
- Preporučena daljina za nesmetan rad daljinskog upravljača je oko 7 metara.

Postavljanje baterija u daljinski upravljač:

1. Otvorite poklopac na zadnjem delu daljinskog upravljača.
2. Postavite dve baterije veličine AAA. Budite sigurni da ste ih postavili pravilno tako da + i - baterije odgovaraju dijagramu unutar upravljača.
3. Vratite poklopac.

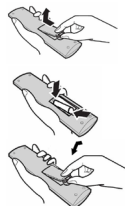

Zamena baterija:

Potrebno je da postavite baterije u daljinski upravljač tako što ćete pratiti sledeće instrukcije. Kada baterije oslabe operativna razdaljina daljinskog upravljača će drastično opasti i moraćete ih zameniti.

Preporuka kako koristiti baterije:

Korišćenjem pogrešnih vrsta baterija može dovesti do hemijskog curenja ili eksplozije. Molimo vas obratite pažnju na sledeće:

- Budite sigurni da ste polove + i - baterija postavili kako je prikazano na dijagramu u odeljku za baterije daljinskog upravljača.
- Različite vrste baterije imaju drugačije karakteristike. Ne mešajte različite vrste baterija.
- Ne mešajte nove i stare baterije. Ako to uradite smanjujete životni vek baterije i može doći do curenja iste.
- Promenite baterije istog trenutka kada prestanu da rade.
- Hemikalije koje cure iz baterije mogu izazvati iritaciju kože. Ako hemikalije počnu da cure iz baterije odmah ih obrišite sa suvom krpom.
- Baterije mogu da imaju kraći životni vek zbog stanja prilikom skladištenja. Izvadite baterije kad znate da nećete koristiti daljinski upravljač duže vreme.
- Baterije ne izlažite prekomernoj toploti kao što su sunčeva svetlost, vatra ili slično.

Oprez:

- Može doći do eksplozije ako baterije nisu zamenjene pravilno.
- Zamenite baterije sa istom ili sličnom vrstom baterija.

Povezivanje kablova:

Molimo Vas da pročitate pažljivo važne stavke u delu "Održavanje i bezbednost" pre povezivanja i korišćenja proizvoda.

1. Izvadite TV iz pakovanja i stavite ga na ravnu podlogu.

Obratiti pažnju:

- Kada uključujete ili isključujete te TV, kompjuter ili drugi uređaj budite sigurni da je naizmenična struja već isključena. Kada isključujete naponski ili signalni kabl, držite ga za utikač (izolovani deo), a ne za telo kablova.

2. RF izlazni terminal može se povezati sa RF ulazom TV-a.

3. AV terminal DVD-a može se povezati sa AV ulazom TV-a putem AV kablova.

4. Povežite jedan kraj VGA kablova sa VGA portom kompjutera, a drugi kraj sa VGA portom TV-a, a zatim zategnite šrafove u smeru okretanja kazaljki sata na priključcima na oba kraja kablova.

Obratiti pažnju:

Pri priključivanju 15-to pinovog VGA kablova vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

5. Priključite jedan kraj HDMI kablova sa HDMI izlazom nekog uređaja, a drugi sa HDMI ulazom TV-a.

Obratiti pažnju:

Pri priključivanju HDMI kablova vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

6. Proverite da su odgovarajući AV kablovi spojeni sa odgovarajućim AV ulazima na TV-u.

7. Povežite naponski kabl sa izvorom struje od 100-240V.

Obratiti pažnju:

 
-Opseg izvora napajanja TV-a je 100-240V, 50/60Hz. Ne priključivati ga na izvor napajanja koji nije u tom opsegu.

-Molimo Vas da držite izolovani deo utikača naponskog kablova kada ga isključujete i nemojte da dodirujete direktno njegove metalne delove.

Osnovne operacije:

Vodič za brz start

-Povezivanje:

1. Priključite napajanje i antenu.
2. Pritisnite taster  na daljinskom upravljaču da uključite TV.





-Početno podešavanje:

Kada je TV uključen po prvi put pojaviće se niz uputstava na ekranu koji će vam pomoći u podešavanju osnovnih parametara.

1. Izaberite željeni jezik.

Pritisnite tastere ///, a zatim taster OK.


2. Izaberite odgovarajuću zemlju.


Pritisnite dugmiće ///, a zatim taster OK da bi izabrali zemlju posle čega će početi traženje kanala.

Upaliti/ ugasiti TV

-Upaliti TV

Priključite kabl za napajanje. U tom trenutku TV će preći u stanje čekanja (standby).

Pritisnite taster  na daljinskom upravljaču kako bi iz stanja pripravnosti upalili TV. -Ugasiti TV

Pritisnite taster  na daljinskom upravljaču kako bi ga prebacili u stanje pripravnosti (standby).

Ne ostavljajte vaš TV u stanju čekanja duže vreme. Najbolje je da TV isključite iz napajanja i da ga odvojite od kabla za antenu.

-Nema signala

Ako nema ulaznog signala pojaviće se poruka koja vas na to upozorava. U TV/DTV modu ako nema signala 15 minuta, TV će se sam ugasiti. U PC modu TV će se sam ugasiti ako ulaznog signala nema 5 minuta. Kada spojite VGA kabl, TV će se sam upaliti.

Biranje programa

- Korišćenje CH+/CH- tastera na TV u i na daljinskom upravljaču

Pritisnite taster CH+ da bi prešli na viši kanal.

Pritisnite taster CH- da bi prešli na niži kanal.

-Korišćenje tastera sa brojevima (0-9)


Birajte željeni kanal pritiskanjem odgovarajućih brojeva od 0 do 9 (u TV i DTV modu)


-Korišćenje tastera -/--

Možete da izaberete deo broja kanala pritiskanjem dugmeta -/--

Podešavanje zvuka

 

-Pritisnite taster VOL +/- da podesite jačinu zvuka

-Ako želite da isključite zvuk pritisnite taster 

-Ako želite da ponovo uključite zvuk pritisnite taster  ili VOL +/-

Promena izvora ulaznog signala

Možete da birate izvor ulaznog signala tako što ćete pritisnuti taster INPUT na daljinskom upravljaču.

Zatim pomoću dugmića / se krećete između datih izvora ulaznih signala i pritisnite taster OK da potvrdite izbor.

Daljinski upravljač

Tasteri daljinskog upravljača izgledaju kao što je prikaz a no:



NAPOMENE:

- Sve fotografije u ovom priručniku su primeri, samo za referencu, stvarni proizvod može se razlikovati od prikazanih fotografija
- Tasteri koji nisu pomenuti, u ovom modelu se ne koriste

Definisanje tastera na daljinskom upravljaču:

1. **STANDBY:** Uključite TV ili pristupite standby modu.
2. **MUTE:** Isključite/Uključite zvuk.
3. **NUMBER BUTTONS:** "0-9" se koriste za direktno pristupanje kanalima.
4. **-/- :** Unesite broj kanala koji želite da gledate
5. **↺ :** Pritisnite za menjanje između trenutnog i kanala koji ste prethodno gledali.
6. **P.MODE:** Direktno odaberite mod slike.
7. **S.MODE:** Direktno odaberite mod zvuka.
8. **MENU:** Otvorite stranicu za glavni meni.
9. **SLEEP:** Podesite vreme isključenja.
10. **INPUT:** Izaberite izvor signala.
11. **AUDIO:** Izbor između NICAM DUAL / NICAM DUAL+ / NICAM DUAL+/MONO standard zvuka i u DTV režimu rada izbor jezika koji se sluša
12. **OK:** Potvrdite odabranu opciju.
13. **↕** Pritisnite **▼▲** za odabir podešavanja
Pritisnite taster **◀▶** da je podesite.
14. **MENU:** Otvorite meni ili se vratite na glavni.
15. **EXIT:** Pritisnite da napustite OSD meni.
16. **VOL+/VOL-:** Povećava jačinu zvuk./Smanjuje jačinu zvuka.
17. **CH+/CH-:** Programi unapred./Programi unazad.
18. **ASPECT:** Aspekt funkcija.
19. **INFO:** Prikaži informacije o sadržaju trenutnog kanala
20. **LIST :** Pristup listi kanala.
21. **COLOR BUTTONS: ZELENI/ CRVENI/ ŽUTI/ PLAVI taster**
 - ◀◀ : Brz pregled sadržaja unazad (u MEDIA režimu rada)
 - ▶▶ : Brz pregled sadržaja unapred (u MEDIA režimu rada)
 - ◀◀◀ : Prethodno (u MEDIA režimu rada)
 - ▶▶▶ : Sledeće (u MEDIA režimu rada)
 - ▶|| : Reprodukcija / pauza (u MEDIA režimu rada)
 - : Zaustavi (u MEDIA režimu rada)
22. **FAV:** Pritisnite da dodate ili uklonite Vaš oniljeni kanal u okviru tv menija.
23. **TEXT:** Uključivanje i isključivanje Teletext moda
24. **HOLD:** Uključenje i isključenje prikaza trenutne stranice.
25. **SUBTITLE:** Prikazivanje titla u USB modu.
26. **INDEX:** Zatraži Index stranicu u Teletext modu.
Isključenje reprodukcije u PVR modu ili Media Player modu.
27. **REVEAL:** Otkrivanje skrivenih informacija nekih stranica teleteksta.
28. **EPG:** Pozovite EPG (Elektronski programski vodič), samo u DTV režim rada
29. **SUBPAGE:** Unesite podstranicu.
30. **SIZE:** Promena veličine prikaza u Teletext modu.
31. **REC:** Započinjanje snimanja u PVR modu

Prva instalacija

Povežite antenskim kablom TV i antenu.

Izbor jezika

Pritisnite ◀ / ▶ kako bi u opciji Language odabrali željeni jezik.

Izbor zemlje

Pritisnite ▼ / ▲ i izaberite opciju Country

Pritisnite ◀ / ▶ kako bi u opciji Country odabrali željenu zemlju.

First Time Installation	
Language	English
Country	Germany
Environment	Home Mode
Sorting by LCN	On
ENTER Auto Tuning	

Tuning Setup	
Tune Type	DTV + ATV
Digital Type	DVB-T
Scan Type	Full
Network ID	Auto
Frequency	Auto
Symbol Rate	Auto
MENU Back ENTER Start	

Glavni meni

Channel Meni

 
Pritisnite taster MENU kako bi prikazali glavni meni.
Pritisnite tester levo/desno i izaberite CHANNEL opciju.



1. Pritisnite ▼ / ▲ i izaberite opciju u CHANNEL meniju koju želite da podesite.
2. Pritisnite taster ENTER za podešavanje.
3. Po završetku podešavanja, pritisnite taster ENTER kako bi sačuvali promene i vratili se na prethodni meni.

Automatsko podešavanje


Pritisnite ▼ / ▲ i izaberite opciju Auto Tuning, a zatim pritisnite ENTER za potvrdu.

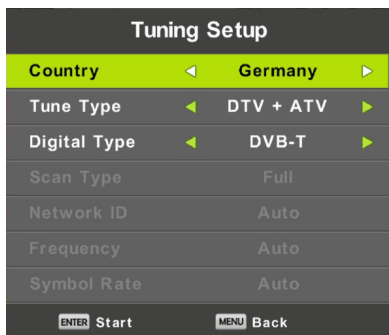

DTV ručno podešavanje


Pritisnite ▼ / ▲ i izaberite opciju DTV Manual Tuning, a zatim taster ENTER kako bi otvorili podmeni.

 Pritisnite ◀ / ▶ i izaberite kanal, a zatim taster ENTER kako bi počeli pretragu programa.

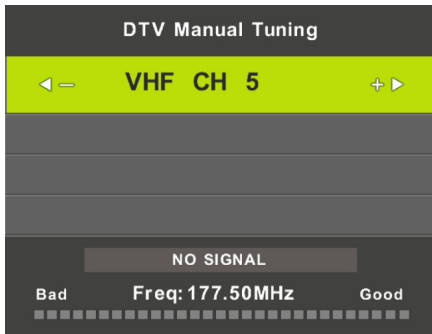

Spisak programa

 Pritisnite ▼ / ▲ i izaberite opciju Program Edit, a zatim taster ENTER kako bi otvorili podmeni.

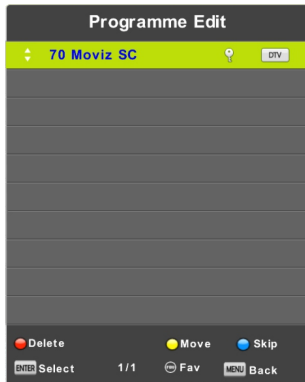

Tri tastera u boji predstavljaju prečice za uređivanje programa iz liste.

Prvo pritisnite ▼ / ▲ i izaberite željeni kanal.

 
Pritisnite CRVENI taster da izbrisete program iz Pritisnite liste. ŽUTI taster da premestite program u Vaših najomiljenijih programa.

Pritisnite taster FAV na daljinskom upravljaču kako bi kanal koji trenutno gledate stavili u listu vaših omiljenih kanala.


Pritisnite PLAVI taster da preskočite izabrani program. Pri korišćenju tastera CH+/CH- vaš TV će automatski preskočiti taj kanal.

Lista rasporeda


Pritisnite ▼ / ▲ i izaberite opciju Schedule List, a zatim taster ENTER kako bi otvorili podmeni.

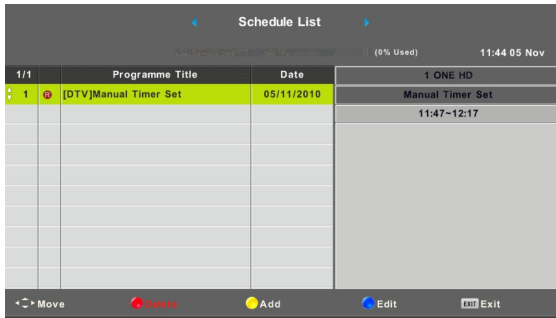

 Pritisnite ŽUTI taster kako bi dodali novi raspored kao što je prikazano dole.

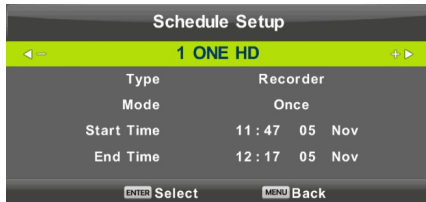


 Ako je uneto vreme u konfliktu, prikazaće vam se poruka upozorenja.

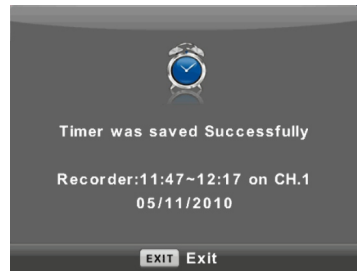

Informacije o signalu

 Pritisnite ▼ / ▲ i izaberite opciju Signal Information, a zatim taster ENTER kako bi videli detalje o signalu. Ova opcija je moguća samo kod DTV-a.

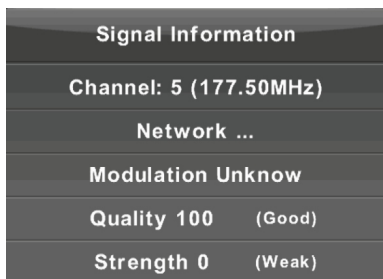


Lista kanala u satelitskom izvoru




Automatsko podešavanje

 Pritisnite **▼** / **▲** i izaberite opciju Auto Tuning, a zatim pritisnite ENTER za potvrdu.

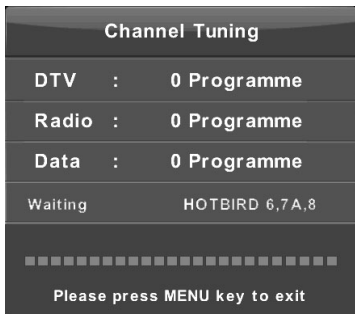

Podešavanje setelitske antene

 Pritisnite **▼** / **▲** i izaberite opciju Dish Setup, a zatim pritisnite ENTER za potvrdu

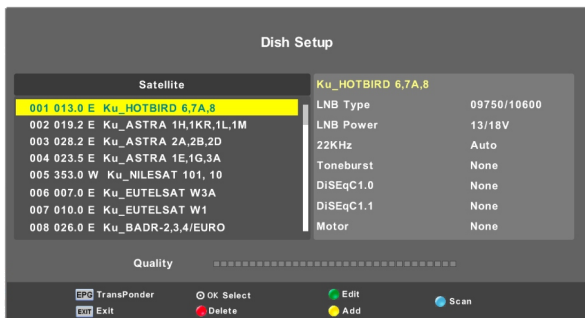

Pritisnite MENU taster kako bi ste otvorili glavni meni.
Odaberite "Channel" koristeći navigacione tastere pritisnite OK za pristup.
Zatim odaberite "Dish Setup" i pritisnite OK za pristup.
Pritisnite ◀ / ▶ da izabere levu, srednju ili desnu kolonu.
Pritisnite EXIT za povratak.

A. Kada je odabrana opcija **Satellite**:

(1) Pritisnite **ŽUTI** taster da pristupite tzv. Add meniju:

Satellite Name

Pritisnite ◀ da pristupite stranici za promenu imena
Koriste navigacionu dugmad kako bi ste ispisali novo ime.

Longitude Direction

Pritisnite ◀ / ▶ da izaberete željenu opciju

Longitude Angle

Pritisnite ◀ / ▶ da pomerite kursor i pritisnite dugmad sa brojevima
na daljinskom upravljaču kako bi uneli željenu vrednost.

Band

Pritisnite ◀ / ▶ da izaberete željenu opciju.

(2) Pritisnite **ZELENI** taster na daljinskom upravljaču da uđete u tzv. Edit meni. Opcije u ovom meniju su iste kao u prethodnom.

(3) Pritisnite **PLAVI** taster na daljinskom upravljaču da pristupite tzv. Scan menu. Pritisnite ▼ / ▲ da izaberete željeni objekat.
Pritisnite ◀ da izaberete željeni režim skeniranja, tip kanala i tip usluge.

(4) Pritisnite **CRVENI** taster za brisanje.

Pritisnite **EPG** da zamenite satelit i Transponder.

B. Kada je odabrana **Transpoder (Srednja) opcija**:

(1) Pritisnite **ŽUTI** taster da pristupite tzv. Add meniju

Frequency

Pritisnite ◀ / ▶ da pomerite kursor i pritisnite dugmad sa brojevima na daljinskom upravljaču kako bi uneli željenu vrednost.

Symbol (ks/s)

Pritisnite ◀ / ▶ da pomerite kursor i pritisnite dugmad sa brojevima na daljinskom upravljaču kako bi uneli željenu vrednost.

Polarity

Pritisnite ◀ / ▶ da izaberete željenu opciju

(2) Pritisnite **ZELENI** taster na daljinskom upravljaču da uđete u tzv. Edit meni. Opcije u ovom meniju su iste kao u prethodnom.

(3) Pritisnite **PLAVI** taster na daljinskom upravljaču da pristupite tzv. Scan menu. Pritisnite ▼ / ▲ da izaberete željeni objekat. Pritisnite ◀ da izaberete željeni režim skeniranja, tip kanala i tip usluge.

C. Kada je Ku_ASTRA... (Desna) opcija izabrana:

LNB (Low Noise Block) Type

Pritisnite ◀ / ▶ da uđete u podmeni. Potom pritisnite ▼ / ▲ da izaberete željenu opciju.

LNB Power

Pritisnite ◀ / ▶ da izaberete željenu opciju.

22 kHz

Pritisnite ◀ / ▶ da izaberete željenu opciju.

Toneburst

Pritisnite ◀ / ▶ da izaberete željenu opciju.

DisEqc1.0 (Digital Satellite Equipment Control)

Pritisnite ◀ / ▶ da izaberete željenu opciju.

DisEqc1.1

Pritisnite ◀ / ▶ da izaberete željenu opciju.

Motor

Pritisnite ◀ / ▶ da izaberete željenu opciju.

EPG

Pritisnite **EPG** taster na daljinskom upravljaču da snimate programe.

7 Day TV GUIDE			
12:00 - 12:59	05 Nov 2010	Sports	Age 09
Another high octane hour of ANDRA Drag Racing only on ONE. The Rocket Allstars fire up at the Sydney Dragway for another action packed Friday Night on the quarter mile. #BJ(¶◊ © Ten]w " TD3C4 ýýýheTEDU_jr{UÛËÿXJkfv\$ýs@W3#rì»VTC333X3 ©_T†@◊◊◊			
[phkr] --}tkgjs]			
05 Nov 2010 12:03:58		05 Nov 2010	
1 ONE HD	12:00-12:59	Drag Racing: ANDRA Pro Series	Now
2 AFD0, 4:3	12:59-15:00	Rugby: Grand Slam Tour 2009	Next
3 AFD1, 16:9	15:00-15:30	Sports Tonight Late	
4 AFD1, 4:3	15:30-16:01	MVP	
5 AFD2, 16:9	16:01-16:31	Real NBA	
6 AFD2, 4:3	16:31-17:01	Omnisport	
7 AFD3, 16:9	17:01-20:00	Football: Arsenal TV	
8 AFD3, 4:3	20:00-21:00	Football: Bundesliga Weekly Highlights	
Record	Remind	Prev Day	Next Day
Move View	Info	Details	EXIT Exit

Pritisnite ◀ / ▶ da izaberete željeni program.

Pritisnite ◀ / ▶ da se prebacite sa leve na desnu kolonu.

Kada je program izabran (kursor pomeren na desnu kolonu):

Pritisnite **CRVENI** taster da snimate program.

Pritisnite **ZELENI** taster nekoliko puta da postavite podsetnik.

Pritisnite **ŽUTI** taster da pristupite jučerašnjem programu.

Pritisnite **PLAVI** taster da pristupite sutrašnjem programu.

Picture opcija

Pritisnite MENU taster da pristupite glavnom meniju.
Pritisnite ◀ / ▶ da izaberete PICTURE u glavnom meniju.



1. Pritisnite ▼ / ▲ da izaberete opciju koju želite da podesite u PICTURE meniju.
2. Pritisnite OK taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni.

Picture Mode

Pritisnite ▼ / ▲ da izaberete Picture Mode, zatim pritisnite OK da pristupite podmeniju.
Možete da promenite vrednost kontrasta, jačine svetlosti, boje, izoštrnosti i tonakada je slika u Personal modu.

SAVET: Možete da pritisnete PMODE taster da pristupite podešavanjima slike direktno.



Contrast/ Brightness/ Color/ Tint / Sharpness

Pritisnite ▼ / ▲ da odaberete opciju, potom pritisnite ◀ / ▶ da prilagodite.

- Contrast** Podesite intenzitet isticanja slike, ali senka slike je nepromenjena.
- Brightness** Prilagodite izlaz optičkih vlakna cele slike, uticaće na tamni region slike
- Color** Podesite zasićenost boje kako Vam odgovara.
- Tint** Upotreba u kompoziciji boje je promenjena sa prenosom u NTSC mod.
- Sharpness** Podesite izoštrnost detalja na slici.

 
Color Temp

Promenite celokupnu boju slike.

Pritisnite ▼ / ▲ da izaberete Color Temperature, zatim pritisnite **OK** da pristupite podmeniju.

Pritisnite ▼ / ▲ da izaberete. (Dostupne Picture mode opcije: Cold, Normal, Warm).

Možete da promenite vrednost crvene, zelene i plave boje kada je Colour Temperature u **User** modu.

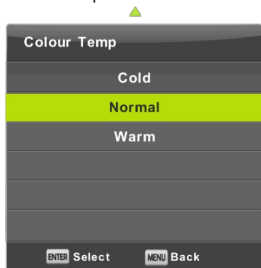


- Cold** Povećajte plave tonove u odnosu na bele.
- Normal** Podesite na podrazumevanu temperaturu boje.
- Warm** Povećajte crvene tonove u odnosu na bele.

Noise Reduction

Smanjite šum slike kako bi popravili njen kvalitet.

 Pritisnite ▼ / ▲ da izaberete Noise Reduction, zatim pritisnite **OK** da pristupite podmeniju.

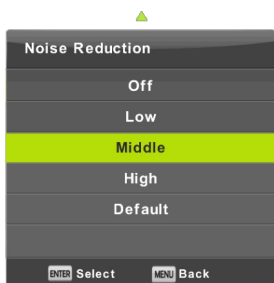


- Off** Isključite otkrivanja šuma u videu
- Low** Otkrivanje i smanjivanje niskog video šuma.
- Middle** Otkrivanje i smanjivanje umerenog video šuma.
- High** Otkrivanje i smanjivanje visokog video šuma.
- Default** Postavi po podrazumevanom.


Sound Opcija

Pritisnite MENU taster da pristupite glavnom meniju

 Pritisnite ◀ / ▶ da izaberete **SOUND** u glavnom meniju.

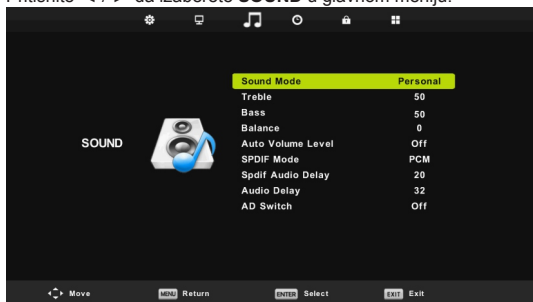

 1. Pritisnite ▼ / ▲ da izaberete opciju koju želite da podesite u **SOUND** meniju.
2. Pritisnite ENTER taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni.

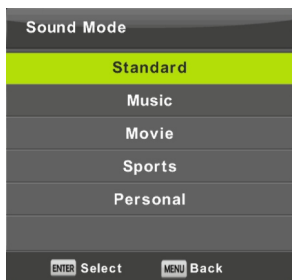

Sound Mode

Pritisnite ▼ / ▲ da izaberete Sound Mode, zatim pritisnite **Enter** da pristupite podmeniju. Pritisnite ▼/▲ da izaberete.

Možete da promenite vrednosti glasa i basa kada je zvuk u Personal modu.

SAVET: Možete da pritisnete SMODE taster da pristupite podešavanjima zvuk direktno.

Standard	Obezbeđuje stabilan zvuk u svim okruženjima.
Music	Čuva originalan zvuk. Dobar za muzičke programe.
Movie	Pojačava glasove i bas za bogato zvučno iskustvo.
Sports	Pojačava vokale.
Personal	Izaberite kako bi podesili zvuk po svojim potrebama.

Beleška: Glas i bas su dostupni isključivo u **Personal** modu, možete da ih podesite kako želite.

Balance

Pritisnite ▼ / ▲ da odaberete opciju, pritisnite ◀ / ▶ da prilagodite.

Auto Volume level

Pritisnite ▼ / ▲ da izaberete Auto Volume Level, potom pritisnite ◀ / ▶ da izaberete On ili Off.

SPDIF Mode

Pritisnite ▼ / ▲ da izaberete SPDIF Mode, potom pritisnite ◀ / ▶ da izaberete Off / PCM / Auto.

AD Switch

Pritisnite ▼ / ▲ da izaberete AD Switch, potom pritisnite ◀ / ▶ da izaberete On ili Off.

Funkcija za slepe, zvuk opisuje trenutno stanje na ekranu.

BELEŠKA:

Balance: Podešavanje zvučnika, omogućava Vam da slušanje prilagodite svom položaju.

Auto Volume: Smanjuje razliku između jačine zvuka programa i kanala.

Time opcija

Pritisnite **MENU** da pristupite glavnom meniju.
Pritisnite ◀ / ▶ da izaberete **TIME** u glavnom meniju.

 


1. Pritisnite ▼ / ▲ da izaberete opciju koju želite da podesite u TIME meniju.
2. Pritisnite OK taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni.


Off Time Pritisnite ◀ / ▶ da izaberete On/Off.

On Time Pritisnite ◀ / ▶ da izaberete On/Off.

Time Zone Pritisnite ▼ / ▲ da izaberete Time Zone, potom pritisnite **Enter** kako bi pristupili podmeniju.
Pritisnite ▼ / ▲ / ◀ / ▶ da izaberete vremensku zonu.

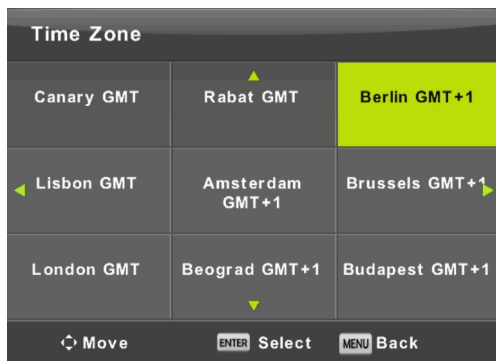


Sleep Timer

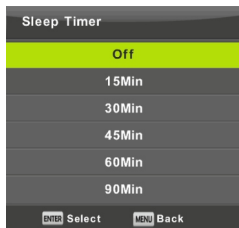 

Pritisnite ▼ / ▲ da izaberete Sleep Timer, potom pritisnite **Enter** da pristupite podmeniju.

Pritisnite ▼ / ▲ da izaberete.
(Dostupne opcije su: Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min).

 Auto Standby

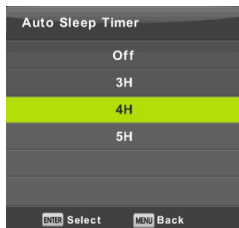


Pritisnite ▼ / ▲ da izaberete Auto Standby, potom pritisnite **Enter** da pristupite podmeniju.

Pritisnite ▼ / ▲ da odaberete.

Savet: Ukoliko daljinsko upravljanje nije korišćeno u hipotetočkom vremenu, ugasiće se automatski. Ako se izvrši bilo kakva operacija, vreme će se restartovati.

 OSD Timer

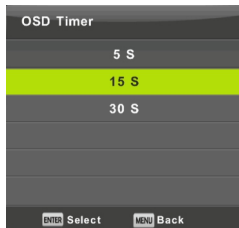

Pritisnite ▼ / ▲ da odaberete OSD Timer, potom pritisnite **Enter** da pristupite podmeniju.

Pritisnite ◀ / ▶ da odaberete.

 
Lock opcija

Pritisnite **MENU** da pristupite glavnom meniju.
Pritisnite **◀ / ▶** da izaberete **Lock** u glavnom meniju.



1. Pritisnite **▼ / ▲** da izaberete opciju koju želite da podesite u LOCK meniju.
2. Pritisnite OK taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni. .

System Lock

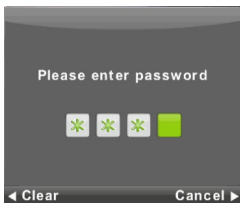

Pritisnite **▼ / ▲** da izaberete System Lock ,
potom pritisnite **Enter** da učinite sledeće 4 opcije mogućim.

 
Automatska lozinka je 0000, ako zaboravite koju ste lozinku postavili, molimo Vas da pozovete servis.

Set Password




Pritisnite **▼ / ▲** da pristupite Set Password,
potom pritisnite **Enter** da pristupite podmeniju kako bi postavili novu lozinku.

Channel Lock

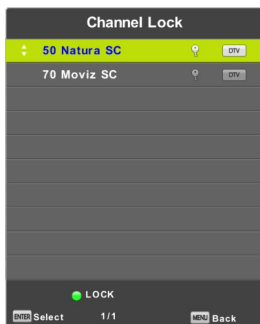

Pritisnite ▼ / ▲ da izaberete Channel Lock potom pritisnite **Enter** da uđete u podmeni. Pritisnite **Zeleno** da zaključate ili otključate kanal.

 Parental Guidance

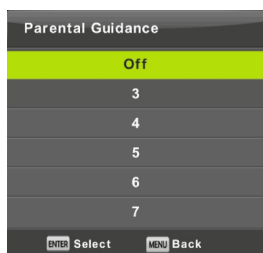


Pritisnite ▼ / ▲ da izaberete Parental Guidance, potom pritisnite **Enter** da uđete u podmeni da izaberete broj godina u skladu sa godinama Vaše dece. Na taj način određujete koji programi su pogodni za Vašu decu.

Key Lock

Pritisnite ▼ / ▲ da izaberete Key Lock, potom pritisnite ◀ / ▶ da izaberete Off ili On. Kada je Key Lock status na ON, ne možete da koristite Key panel taster.

 Hotel opcija

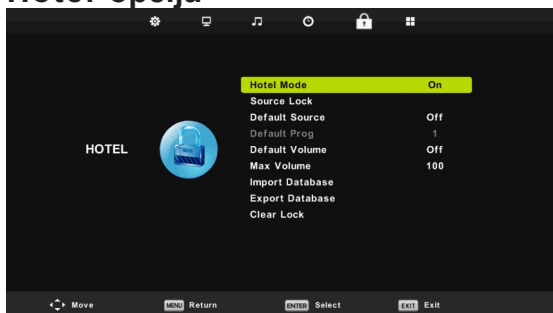

1. Pritisnite ▼ / ▲ da izaberete opciju koju želite da podesite u LOCK meniju.
2. Pritisnite OK taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni.

Hotel Mode

Pritisnite ▼ / ▲ da izaberete Hotel Mode, potom pritisnite ◀ / ▶ da izaberete on ili off.

Source Lock

Pritisnite ▼ / ▲ da izaberete Source Lock da zaključate izbor koji želite, potom pritisnite **Enter** da pristupite podmeniju.

Default Source

Pritisnite ▼ / ▲ da pristupite Default Source, potom pritisnite **Enter** da pristupite podmeniju.

Default Prog

Pritisnite ▼ / ▲ da izaberete Default Prog, potom pritisnite ◀ / ▶ da prilagodite. Dostupno je kada je automatski izvor TV.

Max Volume

Pritisnite ▼ / ▲ da izaberete Max Volume, potom pritisnite ◀ / ▶ da prilagodite.

Clear Lock

Pritisnite ▼ / ▲ da izaberete Clear Lock, potom pritisnite **Enter** da obrišete podešavanje koje ste prethodno namestili.

Setup opcija

Pritisnite **MENU** da pristupite glavnom meniju.

Pritisnite ◀ / ▶ da izaberete **SETUP** u glavnom meniju.

 


1. Pritisnite ▼ / ▲ da izaberete opciju koju želite da podesite u SETUP meniju.
2. Pritisnite ENTER taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni.

Language

OSD izbor jezika biće prikazan na ekranu. Automatski jezik je engleski u glavnom meniju.

Pritisnite ▼ / ▲ / ◀ / ▶ da izaberete Menu Language (jezik menije)

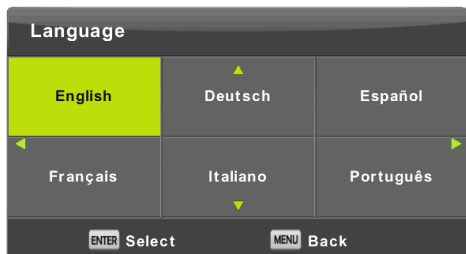

TT Language

Pritisnite ▼ / ▲ da izaberete TT Language, potom pritisnite **Enter** da pristupite podmeniju.

Pritisnite ▼ / ▲ / ◀ / ▶ da izaberete TT language.



Audio Languages

Pritisnite **▼ / ▲** da izaberete Audio Languages, potom pritisnite **Enter** da pristupite podmeniju.
Pritisnite **◀ / ▶** da izaberete osnovne Audio Languages.
Pritisnite **▼ / ▲ / ◀ / ▶** da odaberete Audio Languages.

Audio Languages		Primary
English	Italiano ▲	Čeština
◀ Français	Español	Dansk ▶
Deutsch	Português ▼	Ελληνικά
ENTER Select		MENU Back

Subtitle Language

Pritisnite **▼ / ▲** da odaberete Subtitle Language, potom pritisnite **Enter** da pristupite podmeniju.
Pritisnite **◀ / ▶** da izaberete osnovne Subtitle Language.
Pritisnite **▼ / ▲ / ◀ / ▶** da odaberete Subtitle Language.

Subtitle Language		Primary
English	Italiano ▲	Čeština
◀ Français	Español	Dansk ▶
Deutsch	Português ▼	Ελληνικά
ENTER Select		MENU Back

Hearing Impaired

Pritisnite **▼ / ▲** da odaberete Hearing Impaired, potom pritisnite **Enter** da odaberete On ili Off.

PVR File System

Pritisnite **▼ / ▲** da odaberete PVR File System , potom pritisnite **Enter** da pristupite podmeniju.
Pritisnite **▼ / ▲** da izaberete Check PVR File System ,
potom pritisnite **Enter** da pristupite opciji. Biće proverena brzina USB-a.

Select Disk	C:
Check PVR File System	Start
USB Disk	
Format	
Timeshift Size	
Speed	
Free Record Limit	6 Hr.
MENU Select	MENU Back

Aspect Ratio

Pritisnite ▼ / ▲ da odaberete Aspect Ratio, potom pritisnite **Enter** da pristupite podmeniju..

Pritisnite ▼ / ▲ da odaberete Aspect Ratio. (Dostupne opcije su: Auto, 4:3, 16:9, Zoom1, Zoom2).



Blue Screen

Pritisnite ▼ / ▲ da odaberete Blue Screen, potom pritisnite **Enter** da izaberete On or Off.

First Time Installation

Pritisnite ▼ / ▲ da odaberete First time installation, potom pritisnite **Enter** da pristupite.

Reset

 
Pritisnite ▼ / ▲ da odaberete Reset, potom pritisnite **Enter** da pristupite podmeniju.

Software Update(USB)

Pritisnite ▼ / ▲ da odaberete Software Update (USB), priključite svoj USB u USB slot (ulaz), potom pritisnite **Enter** da unapredite odgovarajući softver.

HDMI CEC

Pritisnite ▼ / ▲ da odaberete HDMI CEC, potom pritisnite **Enter** da pristupite podmeniju.

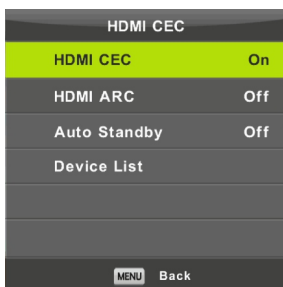

HDMI CEC Pritisnite ◀ / ▶ da uključite ili isključite HDMI CEC.

HDMI ARC Pritisnite ◀ / ▶ da uključite ili isključite HDMI ARC.

Auto Standby Pritisnite ◀ / ▶ da uključite ili isključite Auto Standby.

Device List Pritisnite **Enter** da otvorite glavni meni.

PC

Screen opcija

Pritisnite **MENU** da pristupite glavnom meniju.

Pritisnite **◀ / ▶** da odaberete **SCREEN** u glavnom meniju.



1. Pritisnite **▼ / ▲** da izaberete opciju koju želite da podesite u **SCREEN** meniju.

2. Pritisnite **ENTER** taster da podesite.

3. Nakon podešavanja, pritisnite **ENTER** da sačuvate promene i vratite se na pređašnji meni.

Auto Adjust

Pritisnite **Enter** da počnete sa podešavanjem **H-Offset/V-Offset/Size/Phase** automatski.

H-Offset.

Podesi horizontalnu poziciju slike.

Pritisnite **▼ / ▲** da odaberete **H-Offset**, potom pritisnite **Enter** da pristupite podmeniju.

V-Offset

Podesi vertikalnu poziciju slike.

Oritisnite **▼ / ▲** da odaberete **V-Offset**, potom pritisnite **Enter** da pristupite podmeniju.

Size

Podesite veličinu ekrana.

Pritisnite **▼ / ▲** da odaberete **Size**, potom pritisnite **Enter** da pristupite podmeniju.

Phase

Podesite horizontalne linije interferencije.

Pritisnite **▼ / ▲** da odaberete **Phase**, potom pritisnite **Enter** da pristupite podmeniju.

Position Reset

Pritisnite **▼ / ▲** da odaberete **Position Reset**, potom pritisnite **Enter** za pristup.

BELEŠKE:

 
1. Noise Reduction (smanjenje buke) u PICTURE je nevažeće.
2. AD Switch u SOUND je nevažeći.
3. TIME meni i opis su isti kao za Air mod.
4. Block Program i Parental Guidance u LOCK opciji su nevažeći.
5. Audio Languages, Subtitle Language, Hearing Impaired i PVR File System u SETUP opciji su nevažeći.
6. PC mod nema CHANNEL meni.

MEDIA

Korišćenje Media opcije

BELEŠKA: Pre korišćenja **Media** menija, priključite USB, potom pritisnite INPUTdugme da podesite Input Source u **Media**.

Pritisnite ▼ / ▲ da odaberete **Media** u Source meniju, potom pritisnite **Enter** da pristupite ovoj opciji.

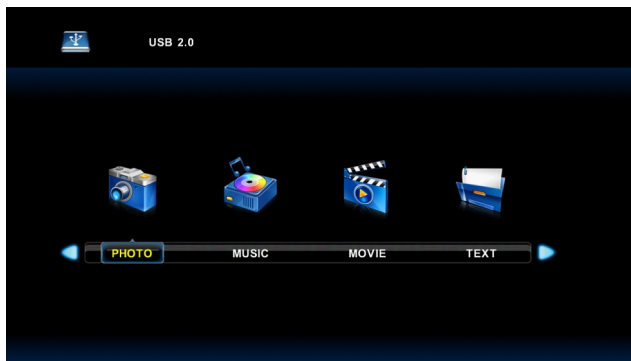


Pritisnite ◀ / ▶ da odaberete opciju koju želite da podesite u glavnom **Media** meniju, tptom pritisnite **Enter** da toj opciji pristupite.

Photo opcija


Pritisnite ◀ / ▶ da odaberete PHOTO u glavnom meniju, potom pritisnite **Enter** da pristupite opciji.

 Pritisnite **Exit** da se vratite na pređašnji meni i izađete iz menija kada završite.

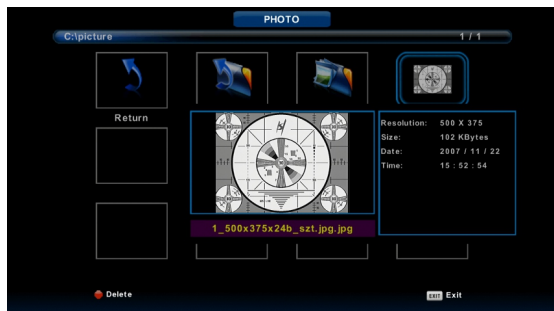

Pritisnite ◀ / ▶ da odaberete fajl koji želite da vidite u File selecting meniju (izabrani fajlovi), potom pritisnite media taster da bi se prikazala slika.

 Kada birate opciju, informacije o fajlu će se pojaviti da desne strane, a slika će se prevashodno prikazati na centru.

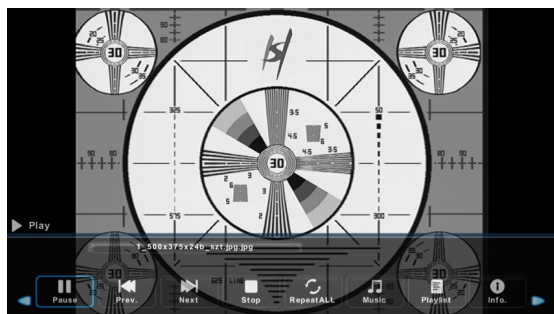

Music opcija

 
Pritisnite ◀ / ▶ da odaberete MUSIC u glavnom meniju, potom pritisnite **Enter** da pristupite opciji.

Pritisnite **Exit** da se vratite na pređašnji meni i izađete iz menija kada završite.



Pritisnite ◀ / ▶ da odaberete disk koji želite da pregledate, potom pritisnite **Enter** da mu pristupite.

Pritisnite ◀ / ▶ da odaberete opciju za povratak na pređašnji meni.

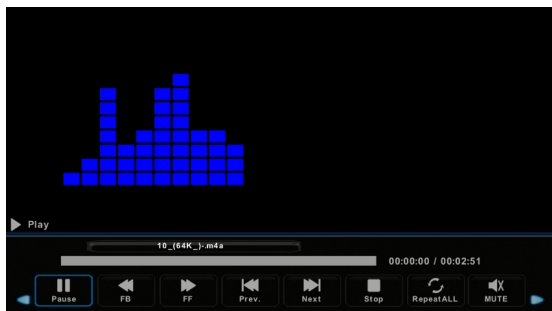

Movie opcija

Pritisnite ◀ / ▶ da odaberete MOVIE u glavnom meniju, potom pritisnite **Enter** da pristupite opciji.

 
Pritisnite **Exit** da se vratite na pređašnji meni i izađete iz menija kada završite.

Pritisnite ◀ / ▶ da odaberete disk koji želite da pregledate, a potom pritisnite **Enter** da mu pristupite.

Pritisnite media taster da pustite odabrani film.

Pritisnite display taster da odaberete meni u dnu koji želite da pokrenete, potom pritisnite **Enter** kako bi to učinili.

Pritisnite **Exit** da se vratite na pređašnji meni i izađete iz celokupne opcije.

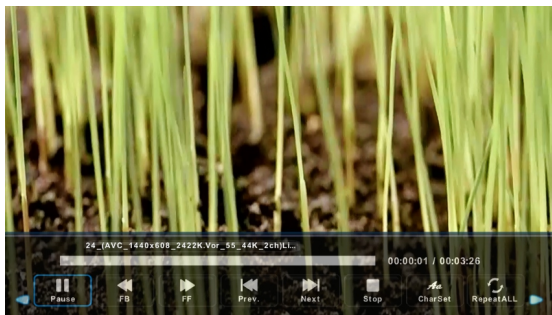


Text opcija

Pritisnite ◀ / ▶ da odaberete TEXT u glavnom meniju, potom pritisnite **Enter** da pristupite toj opciji.

Pritisnite Exit da se vratite na pređašnji meni i izađete iz menija kada završite..

Pritisnite ◀ / ▶ da odaberete disk koji želite da pregledate, potom pritisnite **Enter** da mu pristupite.

 Pritisnite ◀ / ▶ da pristupite opciji za povratak na pređašnji meni.

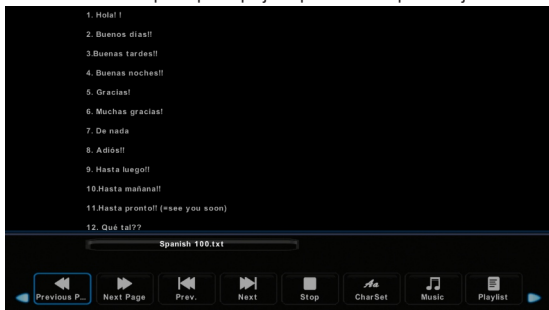

BELEŠKA: Postoji problem u VGA modu (primenjeno samo u VGA modu)

REŠAVANJE PROBLEMA

REŠAVANJE PROBLEMA

Pre nego što pozovete servis, sprovedite dole navedene provere. Ako ne uspete da rešite problem na ovaj način, isključite TV iz struje i pozovite servis.

PROBLEM	MOGUĆA REŠENJA
Nema zvuka ni slike	<ul style="list-style-type: none"> - Proverite da li je glavni kabl uključen u struju - - Priverite da li ste pritisnuli POWER taster - Proverite podešavanje kontrasta i jačine svetla
Normalna slika, ali nema zvuka	<ul style="list-style-type: none"> - Proverite jačinu zvuka - Proverite da li je MUTE opcija uključena - Promenite kanal, problem može da bude u emitovanju - Da li su svi kablovi vezani za zvuk priključeni kako treba?
Daljinsko upravljanje ne radi	<ul style="list-style-type: none"> - Proverite da li je neki objekat između daljinskog upravljača i proizvoda - Da li su baterije postavljene ispravno? Proverite polove + i - - Da li je postavljen ispravan mod upravljanja: TV, VCR itd.? - Promenite baterije
TV se iznenada isključio	<ul style="list-style-type: none"> - Da li je postavljen Sleep Timer? - Proverite podešavanja uključivanja i isključivanja. - Nema emitovanja na određenom kanalu, automatsko gašenje posle nekog vremena
Slika se pojavljuje postepeno nakon uključivanja uređaja	<ul style="list-style-type: none"> - Ovo je normalno, slika je isključena tokom uključivanja proizvoda. Molimo Vas da se obratite serviserima u slučaju da se slika ne pojavi nakon 5 minuta.
Slika ili boje su loše ili ih uopšte nema	<ul style="list-style-type: none"> - Podesite boju u meniju - Promenite kanal, problem može biti u emitovanju - Da li su svi kablovi vezani za VIDEO priključeni ispravno? - Aktivirajte bilo koju funkciju kako bi povratili normalnu jačinu svetlosti slike
Pojava horizontalnih ili vertikalnih linija, slika se tresu	<ul style="list-style-type: none"> - Proverite da li postoje lokalne smetnje kao što su električni aparati i slično.
Loš signal kod nekih kanala	<ul style="list-style-type: none"> - Televizijska stanica ima nekih problema. Promenite kanal - Signal je slab, promenite položaj antene - Proverite da li postoje neki izvori mogućih smetnji
Linije ili pruge na slikama	<ul style="list-style-type: none"> - Proverite antenu (Promenite njen položaj)
Nema zvuka u jednom zvučniku	<ul style="list-style-type: none"> - Podesite ravnotežu u meniju zvuka.

REŠAVANJE PROBLEMA

PROBLEM	MOGUĆE REŠENJE
Signal je van dometa	- Podesite rezoluciju, horizontalnu frekvenciju ili vertikalnu frekvenciju - Proverite da li je kabl vezan za signal povezan ispravno ili labavo - Proverite izvor
Vertikalna linija ili pruga u pozadini / horizontalna buka / nepravilna pozicija	- Odradite autokonfiguraciju ili podesite sat, fazu ili H/V poziciju
Boja ekrana je nestabilna / jedna boje je nestabilna	- Proverite kabl za signal - Ponovo instalirajte PC video karticu

ODRŽAVANJE

- Rani kvarovi mogu biti sprečeni. Pažljivo i redovno čišćenje može da produži vreme rada Vašeg televizora. Isključite televizor i izvadite kabl iz struje pre nego što započnete čišćenje. Čišćenje ekrana

1. Evo jednog sjajnog načina da očistite Vaš ekran od prašine na duže vreme. Meku krpu pokvasite u mekoj vodi pomešanoj sa malo omekšivača ili deterđenta. Prosušite krpu dok ne bude skoro potpuno suva, a zatim obrišite ekran.
2. Višak vode ne sme biti na ekranu. Budite sigurni da ga nema pre nego što ponovo uključite televizor.

Čišćenje okvira

Prilikom čišćenja koristite meku, suhu krpu bez vlakana. Molimo Vas, proverite da krpa nije mokra.

Produženo odsustvo



Ako planirate da ostavite svoj TV isključen na duži vremenski period (npr. tokom odmora), trebalo bi da isključite kabl za napajanje iz struje kako bi izbegli moguću štetu koja može nastati usled udara groma ili izliva struje.

Odlaganje starih električnih uređaja



 
 
 
 
 
Evropska direktiva 2002/96/EC o električnoj i elektronskoj opremi za otpad (WEEE) kaže da se stari električni uređaji za domaćinstvo ne smeju odlagati sa normalnim, nesortiranim komunalnim otpadom. Stari električni uređaji moraju se sakupljati odvojeno kako bi se optimizovao oporavak i recikliranje okoline.

Simbol precrtane kante za smeće tu je kako bi Vas podsetio da odložite ovaj uređaj zasebno. Potrošači bi trebalo da kontaktiraju lokalnu vlast ili prodavača kako bi dobili sve potrebne informacije o odlaganju aparata.

Beleška: Podaci na slici su samo reference.

STAND INSTALLATION

Stand Installation

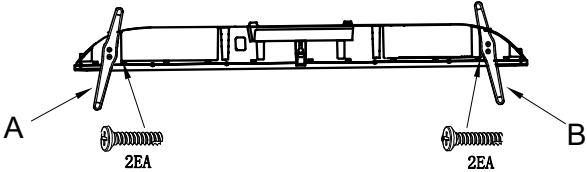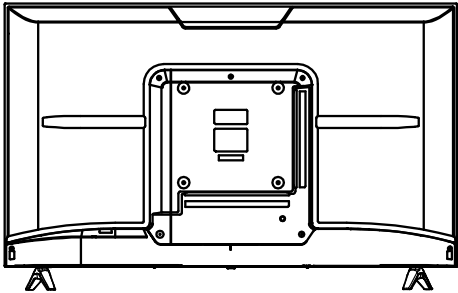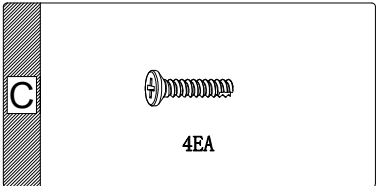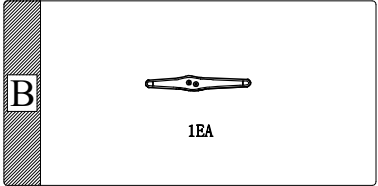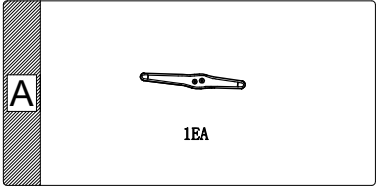



HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

USER MANUAL

LED TELEVISION Model:43DTV240D

Thank you for purchasing this device.

FOX LED TVs are known for their excellent technical features, as well as their modern, functional, and elegant design.

In addition, we have an efficient and widespread service network that gives our proud users a sense of security.

You have made the right choice. Below you will find the user manual. It's not complicated, but you must follow it carefully.

EN

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



WARNING:

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

REGULATORY INFORMATION

This equipment generates and uses can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or experienced radio/TV technician for help.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

DO not attempt to modify this product in any way without written authorization from supplier. Unauthorized modification could void the user's authority to operate this product.

It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen.

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

WARNING

To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.

Don't use the apparatus in tropical climates.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

The Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.

Keep minimum distances (5cm) around the apparatus for sufficient ventilation; (Minimum distance around the apparatus for sufficient ventilation.)

No naked flame sources, such as lighted candles, should be placed on the apparatus;

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Safety instructions

The device may malfunction when under electrostatic discharge. It can be manually resumed by power off and power on again.

CAUTION

Connecting the Power Cord

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and its if appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

The MAINS plug is used as the disconnect device, and the disconnect device shall remain readily operable.

BOMARE COMPANY SARL declare that the product BM4392 complies with the essential health and safety requirements of the R&TTE directive 1999/5/CE.

Power source of this TV : 100-240V 50/60HZ.

This TV complies with CE standard.

 
Alternating current:

To indicate on the rating plate that the equipment is suitable for alternating current only, to identify the relevant terminals.


Safety instructions

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.

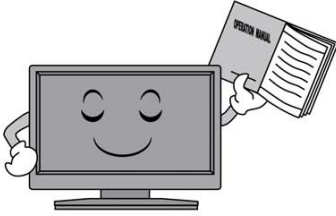

 7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.

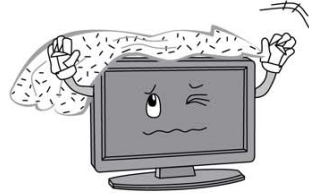


5. Do not use this apparatus near water.



8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



 6. Clean only with a dry cloth.

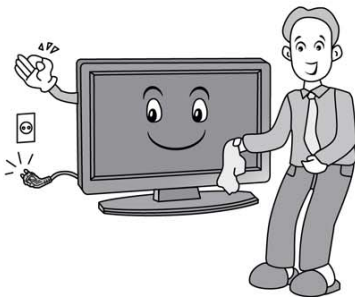


9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Safety instructions

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



 13. Unplug power cord and antenna during lightning storms or when unused for long periods of time.

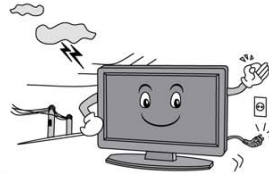

11. Only use the attachments/ accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



ON DISPOSAL

- The fluorescent lamp used in this product contain a small amount of mercury.
- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.

NOTE

- If the TV feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with TV.
- Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However these have no adverse effect on the monitor's performance.
- Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effect on the screen.

Getting Started

Using the remote control

When using the remote control, aim it at remote sensor on the television. If there is an object between the remote control and the remote sensor on the unit, the unit may not operate.

- ◆ Point the remote control at the REMOTE SENSOR located on the television.
- ◆ When using this television in a very brightly lit area, the infrared REMOTE CONTROL SENSOR may not work properly.
- ◆ The recommended effective distance for using the remote control is about 7 metres.

Installing Batteries in the Remote Control

1. Open the cover at the back of the remote control.
2. Install two AAA size batteries. Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.
3. Replace the cover.



Battery replacement

You will need to install the batteries into the remote control to make it operate following the instruction below.

When the batteries become weak, the operating distance of the remote control will be greatly reduced and you will need to replace the batteries.

Notes on Using Batteries:

The use of the wrong type of batteries may cause chemical leakage and/or explosion. Please note the following:

- ◆ Always ensure that the batteries are inserted with the + and - terminals in the correct direction as shown in the battery compartment.
- ◆ Different types of batteries have different characteristics. Do not mix different types.
- ◆ Do not mix old and new batteries. Mixing old and new batteries will shorten battery life and/or cause chemical leakage.
- ◆ Replace batteries as soon as they do not work.
- ◆ Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately with a dry cloth.
- ◆ The batteries may have a shorter life expectancy due to storage conditions. Remove the batteries whenever you anticipate that the remote control will not be used for an extended period.
- ◆ The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION:

- ◆ It may result in an explosion if batteries are replaced incorrectly.
- ◆ Only replace batteries with the same or equivalent type.

Cable Installation

Please read the relevant content in "Notice for Maintenance and Safety" carefully before the installation and use.

1. Take out the TV from the package and put it in a drafty and flat place.

NOTE:

◆ When you plug or unplug the TV, computer or other equipments, you must make sure that the AC power has been already shut down; when unplugging the power cable or signal cable, please hold the plug (the insulated part), do not draw the body of the cable.

2. The RF output terminal can be connected with the RF input port of the TV.
3. The output AV terminal of DVD can be connected with the AV input port of the TV through AV cable.
4. Connect one end of the VGA cable with the VGA port on computer, connect the other end of the VGA cable with the VGA port on the TV, and tighten the bolts clockwise on the each end of VGA cable.

NOTE:

◆ While connecting the 15-pin VGA, please do not insert the plug overexertedly, for fear the pin might be broken.

5. Connect one end of the HDMI cable with HDMI output port, connect the other end of the HDMI cable with the HDMI port on the TV.

NOTE:

◆ While connecting the HDMI, please aim at carefully, do not insert overexertedly, for fear the pin might be broken.

6. Check and make sure that all AV cables are connected with the corresponding ports correctly.
7. Connect the AC power cable with 100-240V~ power supply.

NOTE:

◆ The range of power input for the TV is 100-240V~ 50/60Hz, do not connect the TV power input port with the AC power out of the above range.

◆ Please hold the insulated part of the plug when you are unplugging the power cable, do not touch directly the metallic part of the cable.



 





QUICK START GUIDE

- **Connection**

1. Connect the mains and antenna.
2. Press the  button on remote control to turn on TV from standby mode.


- **Initial Setup**

When the TV is initially powered on, a sequence of on-screen prompts will assist in configuring basic settings.


1. Select the desired OSD (On Screen Display) language.
Press the /// button, then press the **OK** button.
2. Select the appropriate country.
Press the /// button to select the country, then press the **OK** button to Start Channel Tuning.

Turning on and off the TV

- **Turn on the TV**

Connect the AC input cable. At this time the TV will enter standby mode.
Press the  button on remote control to turn on TV from standby mode.

- **Turn off the TV**

Press the  button on the remote control to enter standby mode.
Do not leave your set in standby mode for long periods of time. It is best to unplug the set from the mains and aerial.

- **No signal**

There is No Signal menu on screen when there is no input signal. In TV/DTV mode, if there is no signal in fifteen minutes, the TV will turn off automatically. In PC mode, the TV set will automatically turn off in five minutes if no input signal. When VGA cable is connected, the TV turns on automatically.

Programme Selection

- **Using the CH+/CH- on the panel of TV or on the remote control.**

Press CH+ to increase channel number.
Press CH- to decrease channel number.



- **Using 0-9 digital buttons.**

You can select the channel number by pressing 0 to 9. (In TV, DTV mode)

 
 
- **Using -/-- button**

Using -/-- button enables you to enter double digit channel numbers

Volume adjustment

- Press the VOL+/- button to adjust the volume.
- If you want to switch the sound OFF, press the .
- You can release mute by pressing the  or increase/decrease the volume.

Changing the Input Source

You can select the input source by pressing the **INPUT** button on the remote control.
Press the / button to cycle through the input source, and press the **OK** button to confirm your choice.

REMOTE CONTROL

The button of the original remote control are as following:



NOTE:

● All pictures in this manual are examples, only for reference, actual product may differ from the pictures.

● The buttons not mentioned here are not used.

Definition of the buttons on remote control:

1. **STANDBY:** Enter or quit the standbymode.
2. **MUTE:** Mute or restore sound.
3. **NUMBER BUTTONS:** Use to choose channels.
4. **-/- :** Change the channel bits want to input
5. **↶ :** Return to last viewed program
6. **P.MODE:** Press to cycle through the available video picture mode.
7. **S.MODE:** Press to cycle through the different sound settings.
8. **MENU:** Press to display/disappear the on screen menus or to quit some operations.
9. **SLEEP:** Set the sleep timer.
10. **INPUT:** Select signal source.
11. **AUDIO:** Switch between NICAM DUAL /NICAM DUAL /NICAM DUAL + /MONO and switch Audio language in DTV mode.
12. **OK:** Select or confirm menu item.
13. **▲/▼/◀/▶ :** Select direction.
14. **MENU:** Press to display/disappear the on screen menus or to quit some operations.
15. **EXIT:** Quit the current interface.
16. **VOL+/VOL-:** Increase/Decrease audio volume.
17. **CH+/CH-:** Scroll to next/previous channel.
18. **ASPECT:** Adjust displayable aspect ratio.
19. **INFO:** Show channel program information.
20. **LIST :** Channel List Key.
21. **COLOR BUTTONS:** Red/green/yellow/blue key navigation link.
 - ◀◀: Fast reverse (in MEDIA mode)
 - ▶▶: Fast forward (in MEDIA mode)
 - ◀◀: Previous (in MEDIA mode)
 - ▶▶: Next (in MEDIA mode)
 - ⏸: Play / Pause (in MEDIA mode)
 - : Stop (in MEDIA mode)
22. **FAV:** Display the favorites program
23. **TEXT:** Enter the Teletext, press again for MIX mode, press this button again to exit
24. **HOLD:** Hold the teletext page on display press again to release
25. **SUBTITLE:** Enter subtitle mode
26. **INDEX:** Go to index page/Enter the recorded list.(In PVR mode).
27. **REVEAL:** Reveal the hidden information of some teletext pages.
28. **EPG:** Call up the EPG(Electronic Program Guide),using in the DTV mode
- 29.**SUBPAGE:** Enter the subpage.
- 30.**SIZE:**Change the size of Teletext screen in display mode.
- 31.**REC:** To start recording(InPVR Mode).

First Time Installation

Connect an RF cable from the Tv's input called "RF-In" and to your TV Aerial socket.

 
 
Select Language

Press ◀ / ▶ button to select the language to be used for menus and message.

Select Country

Press ▼ / ▲ button to highlight country menu.

Press ◀ / ▶ button to select the country you want to.

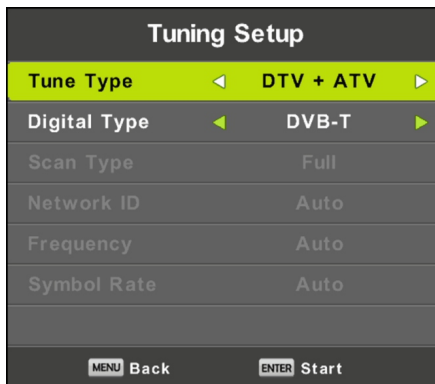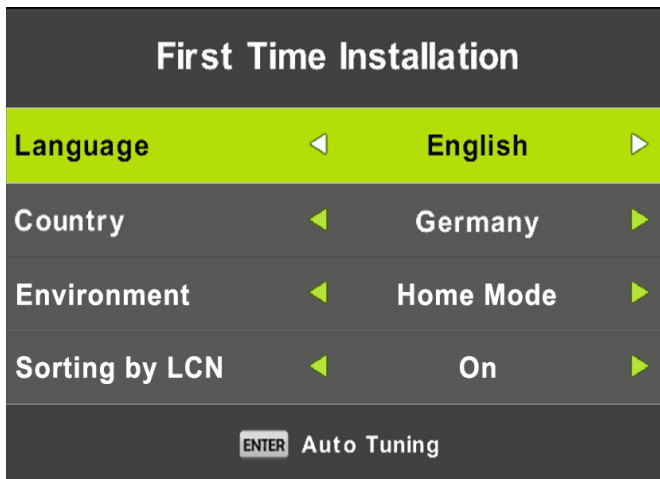

Main Menu Operation

Channel Menu

Press **MENU** button to display the main menu.

 
Press **◀ / ▶** button to select **CHANNEL** in the main menu.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.


Auto Tuning

Press **▼ / ▲** button to select Auto Tuning, then press **Enter/▶** button to enter.

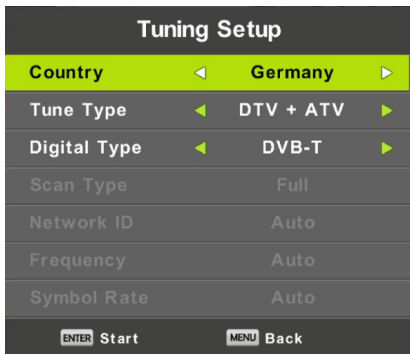


DTV Manual Tuning

 Press **▼ / ▲** button to select DTV Manual Tuning, then press **Enter** button to enter sub-menu.
Press **◀ / ▶** button to select channel, then press **Enter** button to search program.

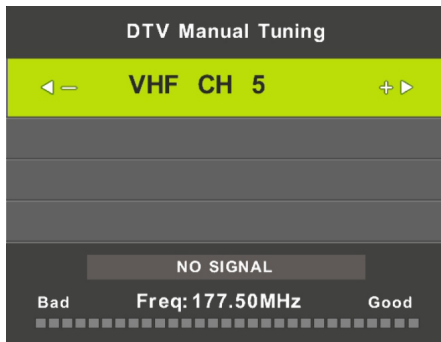

Program Edit

 Press **▼ / ▲** button to select Program Edit, then press **Enter** button to enter sub-menu.

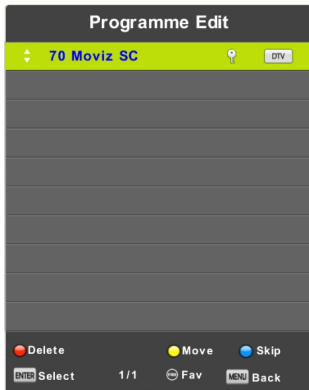

The three colored key is the shortcut key for programming the channel.

First press **▼ / ▲** to highlight the channel you want to select, then:

Press the **Red** button to delete the program in the list.

 
Press the **Yellow** button to move the channel in favorite list.

Press the **Blue** button to skip the selected channel.

Press Fav button to add or remote the channel to your favorite list.
(Your TV set will skip the channel automatically when using CH+/- to view the channels.)


Schedule List

Press **▼ / ▲** button to select Schedule List, then press **Enter** button to enter sub-menu. It is available in source.

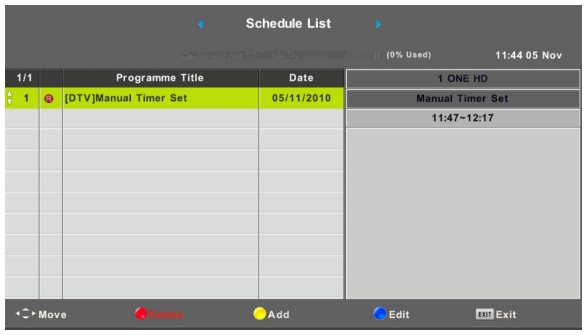


Press the **YELLOW** button to enter the interface below.

 When the time appointment is conflict , it will produce a warning message.

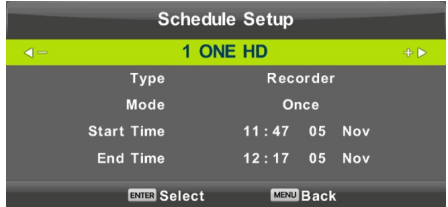

Signal Information

 Press **▼ / ▲** button to select **Signal Information**, press the **Enter** button to see the detail information about the signal. Only available when there is signal in DTV.

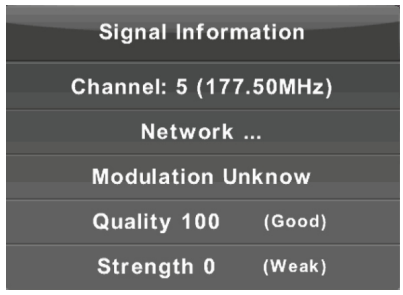


The CHANNEL List in Satellite Source.




Auto Tuning

 Press **▼ / ▲** button to select Auto Tuning, then press **Enter / ►** button to enter.

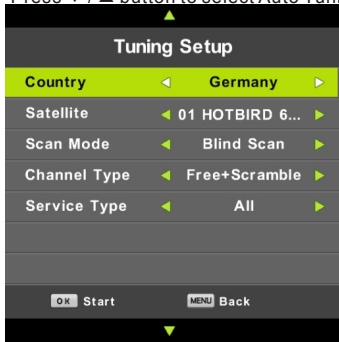

Dish Setup

 Press **▼ / ▲** button to select Dish Setup, then press **Enter / ►** button to enter.

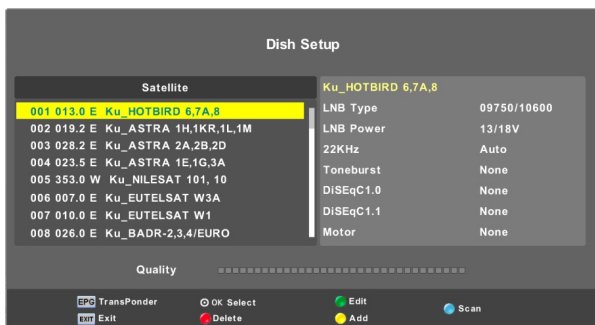

Press MENU button to call out the main menu.
Highlight “Channel” using navigation buttons and press OK to enter it.
Then highlight “Dish Setup” and press OK to enter it.
Press LEFT/RIGHT navigation button to highlight Left, Middle or Right column.
Press EXIT button to return.

A. When the “Satellite” column is highlighted:

(1) Press **YELLOW** button to enter Add menu.

Satellite Name

Press RIGHT navigation button to enter rename page.

Use navigation buttons to complete a new name.

Longitude Direction

Press LEFT/RIGHT navigation button to select desired option.

Longitude Angle

Press LEFT/RIGHT navigation button to move the cursor and press number buttons on remote control to input desired value.

Band

Press LEFT/RIGHT navigation button to select desired option.

(2) Press **GREEN** button on remote control to enter Edit menu.

The operations of Edit menu are the same as Add menu.

(3) Press **BLUE** button on remote control to enter Scan menu.

Press UP/DOWN navigation button to highlighted desired item.

Press RIGHT navigation button to select desired Scan Mode, Channel Type and Service Type.

(4) Press **RED** button to delete.

Press **EPG** button to switch satellite and Transponder.

B. When the “Transponder” (Middle) column is highlighted:

(1) Press **YELLOW** button on remote control to enter Add menu.

Frequency

Press LEFT/RIGHT navigation button to move the cursor and press number buttons on remote control to input desired value.

Symbol (ks/s)

Press LEFT/RIGHT navigation button to move the cursor and press number buttons on remote control to input desired value.

Polarity

Press LEFT/RIGHT navigation button to select desired option

(2) Press **GREEN** button on remote control to enter Edit menu

The operations of Edit menu are the same with Add menu.

(3) Press **BLUE** button on remote control to enter Scan menu.

Press UP/DOWN navigation button to highlighted desired item.

Press LEFT/RIGHT navigation button to select desired Scan Mode, Channel Type and Service Type..

C. When the “Ku_ASTRA...” (Right) column is highlighted:

LNB (Low Noise Block) Type

Press LEFT/RIGHT navigation button to enter submenu. Then use UP/DOWN navigation button to select desired option.

LNB Power

Press LEFT/RIGHT navigation button to select desired option.

22 kHz

Press LEFT/RIGHT navigation button to select desired option.

Toneburst

Press LEFT/RIGHT navigation button to select desired option.

DisEqc1.0 (Digital Satellite Equipment Control)

Press LEFT/RIGHT navigation button to select desired option.

DisEqc1.1

Press LEFT/RIGHT navigation button to select desired option.

Motor

Press LEFT/RIGHT navigation button to select desired option.

EPG

Press EPG in the remote control to record the programmes.

7 Day TV GUIDE		
12:00 - 12:59	05 Nov 2010	Sports Age 09
Another high octane hour of ANDRA Drag Racing only on ONE. The Rocket Allstars fire up at the Sydney Dragway for another action packed Friday Night on the quarter mile.		
#bJ[¶eo © Tenjw " TD3C4 yÿÿheTEDU,ri{UllÉÿXJkfv\$ÿ\$@W3#rii»VTC333X3		
05 Nov 2010 12:03:58 05 Nov 2010		
1 ONE HD	12:00-12:59	Drag Racing: ANDRA Pro Series Now
2 AFD0, 4:3	12:59-15:00	Rugby: Grand Slam Tour 2009 Next
3 AFD1, 16:9	15:00-15:30	Sports Tonight Late
4 AFD1, 4:3	15:30-16:01	MVP
5 AFD2, 16:9	16:01-16:31	Real NBA
6 AFD2, 4:3	16:31-17:01	Omnisport
7 AFD3, 16:9	17:01-20:00	Football: Arsenal TV
8 AFD3, 4:3	20:00-21:00	Football: Bundesliga Weekly Highlights

Press UP/DOWN navigation button to select preferred program.

Press LEFT/RIGHT navigation button to switch between left column and right column.

When a program is highlighted (cursor moved to Right column):

Press **RED** button to record program.

Press **GREEN** button repeatedly to set a reminder.

 
Press **YELLOW** button to display program guide of previous day.

Press **BLUE** button to display program guide of next day.

Picture Menu

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **PICTURE** in the main menu.

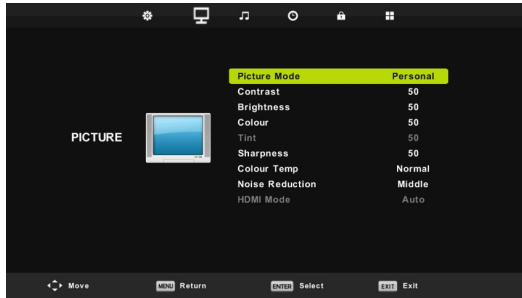

1. Press ▼ / ▲ button to select the option that you want to adjust in the **PICTURE** menu.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

Picture Mode

Press ▼ / ▲ button to select Picture Mode, then press **OK** button to enter sub-menu.

You can change the value of contrast, brightness, color, sharpness and tint when the picture is in

Personal mode.

TIPS: You can press PMODE button to change the Picture Mode directly.



Contrast/ Brightness/ Color/ Tint / Sharpness

Press ▼ / ▲ button to select option, then press ◀ / ▶ button to adjust.

Contrast Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Brightness Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.

Color Adjust the saturation of the color based on your own like.

Tint Use in compensating color changed with the transmission in the NTSC code.

Sharpness Adjust the peaking in the detail of the picture.

Color Temp

Change the overall color cast of the picture.

Press ▼ / ▲ button to select Color Temperature , then press **OK** button to enter sub-menu.

Press ▼ / ▲ button to select. (Available Picture mode: Cold!, Normal, Warm).

You can change the value of red,green and blue when the color temperature is in **User** mode.



Cold Increase the blue tone for the white.

 
Normal Set to default color temperature.

Warm Increase the red color for the white.

Noise Reduction

Filter out and reduces the image noise to improve picture quality.

Press ▼ / ▲ button to select Noise Reduction , then press **OK** button to enter sub-menu.

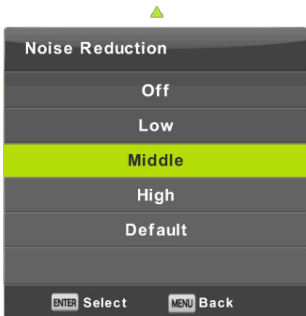

Off Select to turn off video noise detection.

Low Detect and reduce low video noise.

Middle Detect and reduce moderate video noise.

 
High Detect and reduce enhanced video noise.

Default Set as Default.


Sound Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **SOUND** in the main menu.

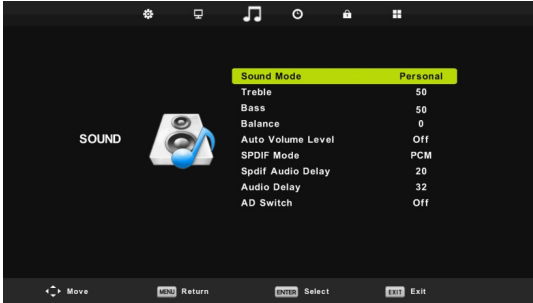

 1. Press **▼ / ▲** button to select the option that you want to adjust in the **SOUND** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

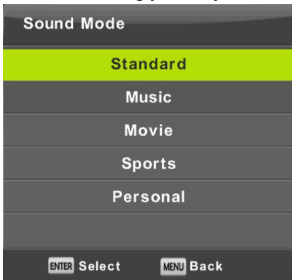

Sound Mode

Press **▼ / ▲** button to select Sound Mode, then press **Enter** button to enter sub-menu. Press **▼ / ▲** button to select.

You can change the value of Treble and Bass when the sound is in Personal mode.

TIPS: You can press **S.MODE** button on the remote control to change the Sound Mode directly.

Standard	Produces a balanced sound in all environments.
Music	Preserves the original sound. Good for musical programs.
Movie	Enhances treble and bass for a rich sound experience.
Sports	Enhances vocals for sports.
Personal	Select to customize sound settings.

Note: The treble and bass are only available in **Personal** mode, you can adjust them as you like.

Balance

Press **▼ / ▲** button to select option, Press **◀ / ▶** button to adjust.

Auto Volume level

Press **▼ / ▲** button to select Auto Volume Level, then press **◀ / ▶** button to select On or Off.

SPDIF Mode

Press **▼ / ▲** button to select SPDIF Mode, then press **◀ / ▶** button to select Off / PCM / Auto.

AD Switch

Press **▼ / ▲** button to select AD Switch, then press **◀ / ▶** button to select On or Off. Amblyopia function for the blind, the tracks will be mixed describe the current screen. It need codestream to support.

NOTE:

Balance: This item can adjust the speaker's output, it enables you to listen to best at your position.

Auto Volume: This item is used for reducing the difference between channel and program's volume automatically.

Time Menu

Press **MENU** button to display the main menu.
 Press ◀ / ▶ button to select **TIME** in the main menu.

 


1. Press ▼ / ▲ button to select the option that you want to adjust in the **TIME** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.


Off Time Press ◀ / ▶ button to select On/Off.

On Time Press ◀ / ▶ button to select On/Off.

Time Zone Press ▼ / ▲ button to select Time Zone, then press **Enter** button to enter sub-menu.
 Press ▼ / ▲ / ◀ / ▶ button to select time zone.

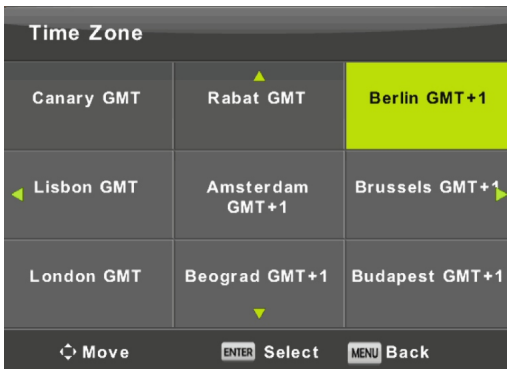


Sleep Timer

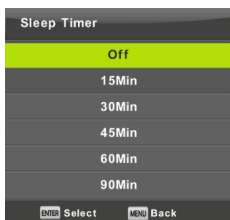 

Press ▼ / ▲ button to select Sleep Timer, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ button to select.
(Available options are: Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min).

 Auto Standby

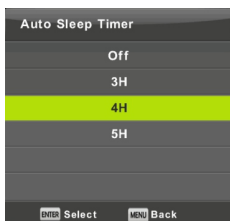


Press ▼ / ▲ button to select Auto Standby, then press **Enter** button to enter sub-menu.

Press ▼ / ▲ button to select.

Tips: The remote control does not make any operation in the hypothesis time, it will close down automatically. If you do any operation, it will reset the time.

 OSD Timer

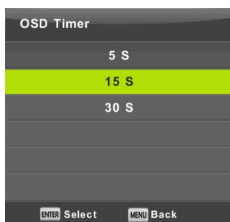

Press ▼ / ▲ button to select OSD Timer, then press **Enter** button to enter sub-menu.

Press ◀ / ▶ button to select.

 
Lock Menu

Press **MENU** button to display the main menu.
Press **◀ / ▶** button to select **Lock** in the main menu.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **LOCK** menu.
2. Press **Enter/◀ / ▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu


System Lock

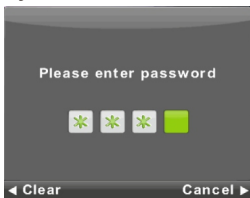

Press **▼ / ▲** button to select System Lock ,
then press **Enter** button to make the following 4 options valid.


Default password is 0000, and if forget what you set,
please call the service center.

 Set Password

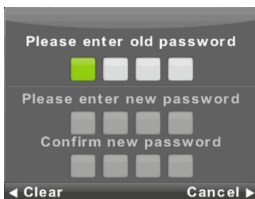

Press **▼ / ▲** button to select Set Password,
then press **Enter** button to enter sub-menu to set new password.

 Channel Lock

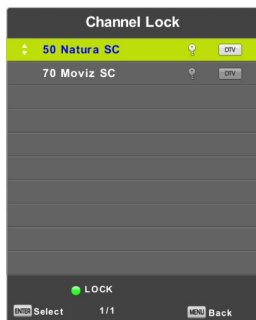

Press ▼ / ▲ button to select Channel Lock then press **Enter** button to enter sub-menu to select. Press **Green** button to lock or unlock the channel.

Parental Guidance

 


Press ▼ / ▲ button to select Parental Guidance, then press **Enter** button to enter sub-menu to select the number of age which is suitable for your children.

Key Lock

Press ▼ / ▲ button to select Key Lock, then press ◀ / ▶ button to select Off or On. When Key Lock's statue is on, you can't use the Key panel button.

Hotel Mode

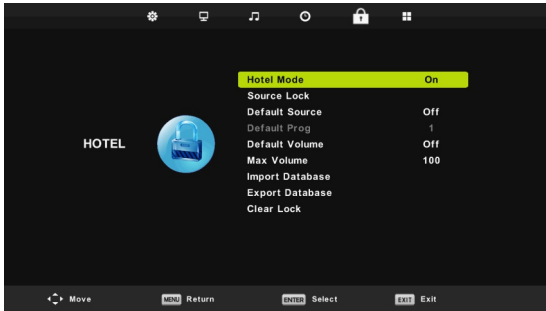

1. Press **▼ / ▲** button on the remote control to select hotel mode in the **Lock** menu.
2. Press **Enter** button on the remote control to enter the sub-menu.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

Hotel Mode

Press **▼ / ▲** button to select Hotel Mode, then press **◀ / ▶** button to select on or off.

Source Lock

Press **▼ / ▲** button to select Source Lock to lock the source you want, then press **Enter** button to enter sub-menu to select.

Default Source

Press **▼ / ▲** button to select Default Source, then press **Enter** button to enter sub-menu to select.

Default Prog

Press **▼ / ▲** button to select Default Prog, then press **◀ / ▶** button to adjust. It is available when the default source is TV.

Max Volume

Press **▼ / ▲** button to select Max Volume, then press **◀ / ▶** button to adjust.

Clear Lock

Press **▼ / ▲** button to select Clear Lock, then press **Enter** button to clear the setting you have done before.

Setup Menu

 
Press **MENU** button to display the main menu.
Press **◀ / ▶** button to select **SETUP** in the main menu.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **SETUP** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

Language

Select an OSD menu language can be displayed. Default English is selected as menu language.
Press **▼ / ▲ / ◀ / ▶** button to select Menu Language.

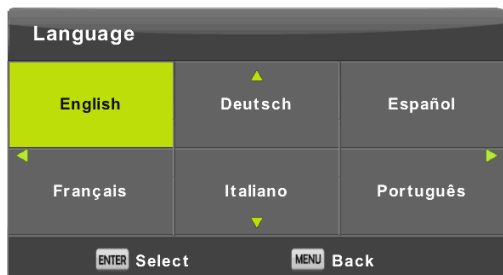

TT Language

Press **▼ / ▲** button to select TT Language, then press **Enter** button to enter sub-menu.
Press **▼ / ▲ / ◀ / ▶** button to select TT language.



Audio Languages

Press ▼ / ▲ button to select Audio Languages, then press **Enter** button to enter sub-menu.
Press ◀ / ▶ button to select the primary of Audio Languages.
Press ▼ / ▲ / ◀ / ▶ button to select the Audio Languages.



Subtitle Language

Press ▼ / ▲ button to select Subtitle Language, then press **Enter** button to enter sub-menu.
Press ◀ / ▶ button to select the primary of Subtitle Language.
Press ▼ / ▲ / ◀ / ▶ button to select the Subtitle Language.



Hearing Impaired

Press ▼ / ▲ button to select Hearing Impaired, then press **Enter** button to select On or Off.

PVR File System

Press ▼ / ▲ button to select PVR File System, then press **Enter** button to enter sub-menu.
Press ▼ / ▲ button to select Check PVR File System, then press **Enter** button to enter. Then it will check the USB speed.



Aspect Ratio

Press **▼ / ▲** button to select Aspect Ratio, then press **Enter** button to enter sub-menu.
Press **▼ / ▲** button to select aspect ratio. (Available options are: Auto, 4:3, 16:9, Zoom1, Zoom2).



Blue Screen

Press **▼ / ▲** button to select Blue Screen, then press **Enter** button to select On or Off.

First Time Installation

Press **▼ / ▲** button to select First time installation, then press **Enter** button to enter.

Reset

Press **▼ / ▲** button to select Reset, then press **Enter** button to enter sub-menu.

Software Update(USB)

Press **▼ / ▲** button to select Software Update (USB), plug your USB device in the USB slot, then press **Enter** button to update the right software.

HDMI CEC

Press **▼ / ▲** button to select HDMI CEC, then press **Enter** button to enter the sub-menu.



HDMI CEC Press **◀ / ▶** button to turn the HDMI CEC On or Off.

HDMI ARC Press **◀ / ▶** button to turn the HDMI ARC On or Off.

Auto Standby Press **◀ / ▶** button to turn the Auto Standby On or Off.

 
Device List Press **Enter** button to open the main menu of device.

PC

Screen Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **SCREEN** in the main menu.

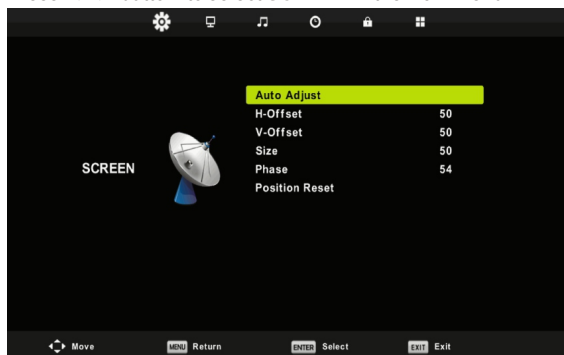

1. Press **▼ / ▲** button to select the option that you want to adjust in the **SCREEN** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

Auto Adjust

Press **Enter** button to start adjusting **H-Offset/V-Offset/Size/Phase** automatically.

H-Offset.

Adjust the horizontal position of the picture.

Press **▼ / ▲** button to select **H-Offset**, then press **Enter** button to enter sub-menu.

V-Offset

Adjust the vertical position of the picture.

Press **▼ / ▲** button to select **V-Offset**, then press **Enter** button to enter sub-menu.

Size

Adjust the display size.

Press **▼ / ▲** button to select **Size**, then press **Enter** button to enter sub-menu.

Phase

Adjust the horizontal interfering lines.

Press **▼ / ▲** button to select **Phase**, then press **Enter** button to enter sub-menu.

Position Reset

Press **▼ / ▲** button to select **Position Reset**, then press **Enter** button to enter.

 
Notes:

1. Noise Reduction in PICTURE option is invalid.
2. AD Switch in SOUND option is invalid.
3. TIME menu and description are the same as that for Air mode.
4. Block Program and Parental Guidance in LOCK option is invalid.
5. Audio Languages, Subtitle Language, Hearing Impaired and PVR File System in SETUP option is invalid.
6. PC mode has no CHANNEL menu.

MEDIA

Media OPERATION

Note: Before operating **Media** menu, Plug in USB device, then press INPUT button to set the Input Source to **Media** . Press ▼ / ▲ button to select **Media** in the Source menu, then press **Enter** button to enter.

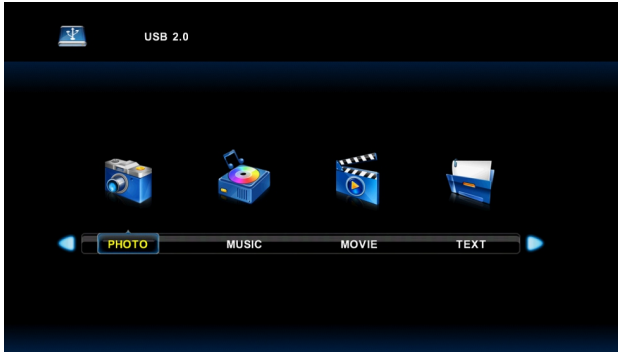


Press ◀ / ▶ button to select the option you want to adjust in the main **Media** menu, then press **Enter** button to enter.

Photo Menu


Press ◀ / ▶ button to select PHOTO in the main menu, then press **Enter** button to enter.

 Press **Exit** button to return to the previous menu and exit menu to quit.

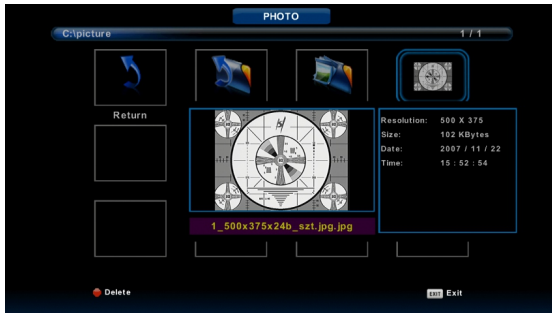

Press ◀ / ▶ button to select the file you want to watch in the file selecting menu, then press media button to display picture.

 When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.

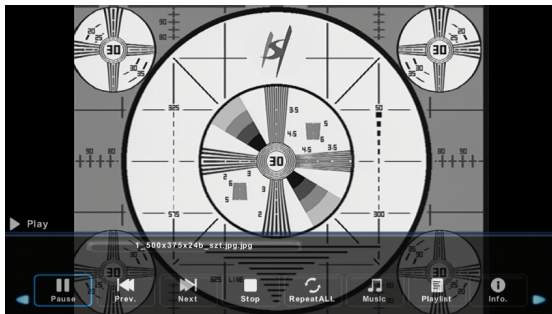

Music Menu

Press ◀ / ▶ button to select MUSIC in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.



Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

Press ◀ / ▶ button to select return option to the previous menu.



Movie Menu

Press ◀ / ▶ button to select MOVIE in the main menu, then press **Enter** button to enter.

 
Press **Exit** button to return to the previous menu and exit menu to quit.

Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

Press media button to play the selected movie.

Press display button to select menu in the bottom you want to run, then press **Enter** button to operate.

Press **Exit** button to back to the previous menu and exit button to quit the entire menu.

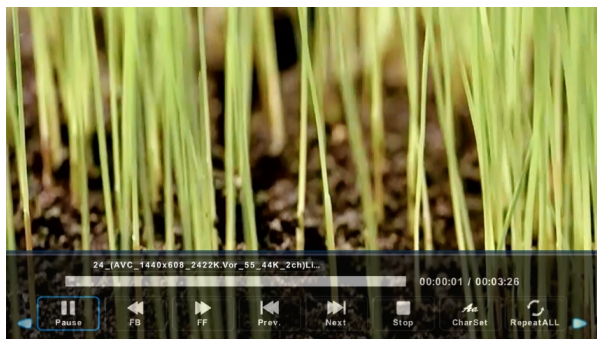


Text Menu

Press ◀ / ▶ button to select TEXT in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.

Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

 Press ◀ / ▶ button to select return option to back to the previous menu.

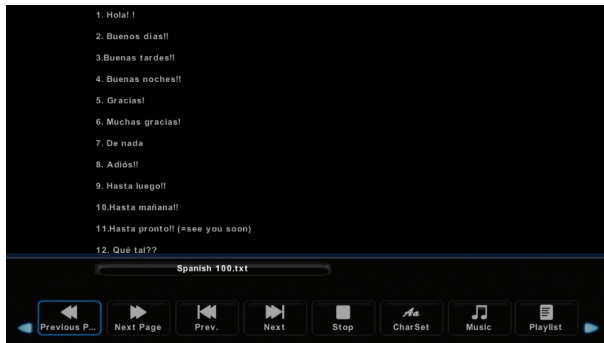

NOTE: The data in the picture is reference only, and the actual goods shall prevail.

Troubleshooting Guide

Troubleshooting

Before contrast the service technician, perform the following simple checks. If any program still persists, unplug the TV and calling for serving.

PROBLEM	POSSIBLE SOLUTION
No sound and picture	<ul style="list-style-type: none"> - Check whether the main plug has been connected to a wall let. - Check whether you have pressed the POWER button on the front of TV set. - Check the picture contrast and brightness settings.
Normal picture but no sound	<ul style="list-style-type: none"> - Check the volume. - Sound muted? Press the MUTE button. - Try another channel, the problem may be with the broadcast. - Are the audio cables installed properly?
The remote control does not work	<ul style="list-style-type: none"> - Check to see if there any object between the product and remote control Causing obstruction. - Are batteries installed with correct polarity (+ to +, - to -)? - Correct remote operating mode set: TV, VCR etc.? - Install new batteries
Power is suddenly turned off	<ul style="list-style-type: none"> - Is the sleep timer set? - Check the power control settings. Power interrupted. - No broadcast on station tuned with auto activated.
Picture appears slowly after switching on	<ul style="list-style-type: none"> - This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.
No or poor color or poor picture	<ul style="list-style-type: none"> - Adjust the color in menu option. - Keep a sufficient distance between the product and the VCR. - Try another channel, the problem may be with the broadcast. - Are the VIDEO cables installed properly? - Activate the any function to restore the brightness of the picture.
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> - Check for local interference such as an electrical appliance or power tool.
Poor reception on some channels	<ul style="list-style-type: none"> - Station or cable product experiencing problems. Tune to another station. - Station signal is weak, reorient antenna to receive weaker station. - Check for sources of possible interference.
Lines or streaks in pictures	<ul style="list-style-type: none"> - Check the antenna (Change the direction of the antenna).
No output from one of the speakers	<ul style="list-style-type: none"> - Adjust balance in menu option.

NOTE: There is a problem in VGA mode (Only VGA mode applied).

Troubleshooting Guide

PROBLEM	POSSIBLE SOLUTION
The signal is out of range.	<ul style="list-style-type: none">- Adjust resolution, horizontal frequency, or vertical frequency.- Check it whether the signal cable is connected or loose.- Check the input source.
Vertical bar or stripe on back ground & Horizontal Noise & Incorrect position.	<ul style="list-style-type: none">- Work the auto configure or adjust clock, phase, or H/V position.
Screen color is unstable or single color.	<ul style="list-style-type: none">- Check the signal cable.- Reinstall the PC video card.

Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then used it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

Extended Absence



If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

Disposal of old electrical appliances

 
 
 
 
 


The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

STAND INSTALLATION

Stand Installation

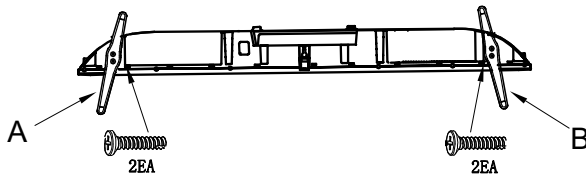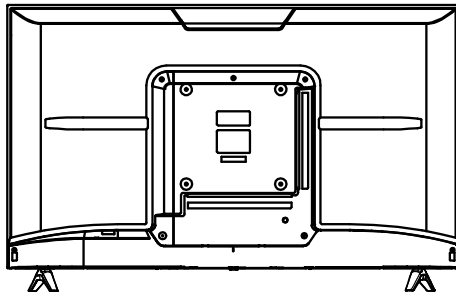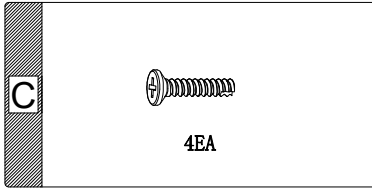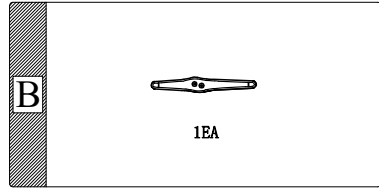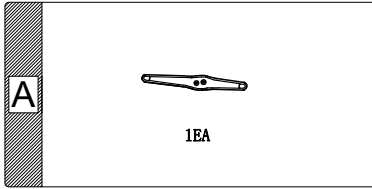



HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model:43DTV240D

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR



Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.



UPOZORENJE:
KAKO BI SMANJILI RIZIK OD STRUJNOG UDARA NE UKLANJAJTE POKLOPAC (ILI ZADNJI DEO). UNUTAR UREĐAJA NEMA DELOVA KOJE SAMI MOŽETE ZAMENITI. OBRATITE SE KVALIFIKOVANIM SERVISERIMA.



Simbol munje u jednakostraničnom trouglu upozorava korisnika na neizolovane opasne delove pod naponom unutar uređaja, koji može biti dovoljne jačine da predstavlja rizik od električnog udara.



Znak uzvika u jednakostraničnom trouglu obaveštava korisnika na postojanje važnih operacionih instrukcija kao i instrukcija za održavanje u literaturi koja prati proizvod.

INFORMACIJE O PROPISIMA:

Ova oprema stvara, koristi i zrači radio frekventne talase i ako nije instalirana i korišćena u skladu sa uputstvom, može izazvati štetne smetnje u radio komunikaciji. Ipak, ne postoji garancija da se smetnje neće pojaviti prilikom određenih instalacija. Ako ova oprema ipak izazove štetne smetnje pri radio ili TV prijemu signala, što se može utvrditi tako što se oprema isključi pa ponovo uključi, korisnik se savetuje da ukloni smetnje pomoću jedne ili više ponuđenih mera:

- Premestite prijemnu antenu.
 - Povećajte razdaljinu između opreme i prijemnika.
 - Opremu i prijemnik uključite u različite strujne utičnice.
 - Posavetujte se sa prodavcem ili sa iskusnim radio/TV serviserom.
- Sve izmene ili modifikacije koje nisu izričito odobrene od strane koja je ovlašćena da izda saglasnost, mogu da ponište garanciju izdatu od strane proizvođača uređaja.

OPREZ:

 
NE pokušavajte da modifikujete ovaj proizvod u bilo kom smislu bez pismenog odobrenja prodavca. Neovlašćena modifikacija proizvoda može da poništi garanciju izdatu od strane proizvođača uređaja.

Nije preporučljivo da određena statična slika bude stalno prikazana na ekranu duže vreme ili da prikazujete ekstremno svetle slike.


Ilustracije u ovom uputstvu su obezbeđene samo kao preporuke i mogu se razlikovati od stvarnog izgleda proizvoda. Dizajn i specifikacije proizvoda mogu se promeniti bez prethodnog upozorenja.

VAŽNE MERE OPREZA:

1. Pročitajte ovo uputstvo.
2. Sačuvajte ovo uputstvo.
3. Pročitajte sva upozorenja.
4. Pratite sve instrukcije.

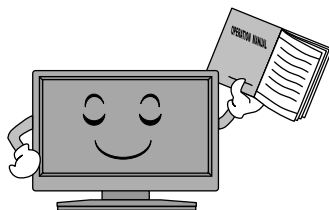

 
7. Ne blokirajte bilo koji ventilacioni otvor. Montirajte TV u skladu sa uputstvom proizvođača.

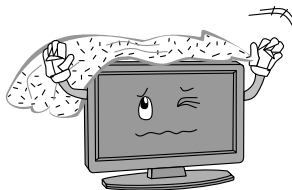


5. Ne koristiti proizvod u blizini vode.



 8. Ne postavljati u blizini izvora toplote kao što su radijatori, peći ili drugi objekti (uključujući i pojačavače) koji emituju toplotu.

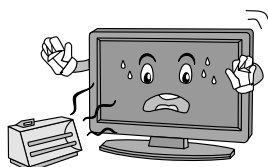

 6. Brisati samo sa suvom krpom.

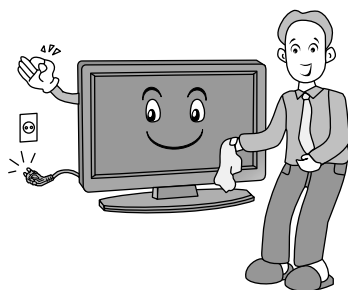

9. Utikač aparata priključite u odgovarajuću utičnicu, odnosno voditi računa da li je utikač sa polarizovanim viljuškama ili sa uzemljenjem pa shodno tome odabrati i utičnicu.

Mere opreza:

10. Čuvajte mrežni kabl od gaženja ili od priklještenja naročito kod utikača, razvodne kutije i izlaza iz aparata.

 


11. Koristite samo one dodatke navedene od strane proizvođača.


12. Aparat koristiti samo sa kolicima, stalkom, tronožcem, podupiračem ili stolom naznačenim od strane proizvođača ili sa onim dobijenim uz aparat. Kada koristite kolica obratite pažnju kada ih pomerate da bi izbegli ozledu ako dođe do prevrtanja.



13. Isključite iz struje ovaj aparat za vreme oluja sa munjama ili ako ga duže vreme ne koristite.

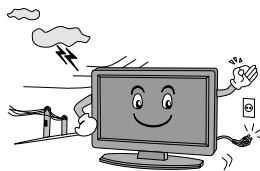

 14. Prepustite servisiranje kvalifikovanim osobama. Servis je potreban kad je aparat oštećen u bilo kom smislu, kao na primer oštećenje utikača ili naponskog kabla, ako je po njemu prosuta tečnost ili je neki predmet upao u njega, ako je bio izložen kiši ili vlazi, ako ne radi normalno ili ako je ispušten.

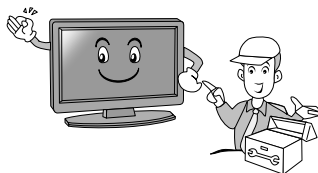

PRILIKOM ODLAGANJA (BACANJA):

- Ne bacajte ovaj proizvod sa ostalim kućnim smećem.
- Odlaganje (bacanje) ovog proizvoda mora da se uradi u skladu sa regulativama zemlje u kojoj živite.

OBRATITI PAŽNJU:

- Ako je aparat hladan na dodir, može doći do malog treperenja prilikom paljenja. Ovo je normalno, nema ničeg nepravilnog u radu vašeg TV-a.
- Nekoliko minuta mogu biti vidljive tačkaste nepravilnosti na ekranu, pojavljujući se kao sićušne crvene, zelene ili plave tačke. Ova pojava nema štetan uticaj na performanse vašeg TV-a.
- Izbegavajte dodirivanje ili držanje prsta duže vreme na ekranu. Ako to uradite može doći do privremene iskrivljenosti vašeg ekrana.

 
Upotreba daljinskog upravljača:

Kada koristite daljinski upravljač usmerite ga ka senzoru na TV-u. Ako postoji predmet između daljinskog i senzora, aparat možda neće reagovati.

- Uperite daljinski upravljač ka senzoru na TV-u.
- Kada koristite TV u veoma osetljivoj prostoriji infra crveni senzor možda neće raditi kako treba.
- Preporučena daljina za nesmetan rad daljinskog upravljača je oko 7 metara.

Postavljanje baterija u daljinski upravljač:

1. Otvorite poklopac na zadnjem delu daljinskog upravljača.
2. Postavite dve baterije veličine AAA. Budite sigurni da ste ih postavili pravilno tako da + i - baterije odgovaraju dijagramu unutar upravljača.
3. Vratite poklopac.

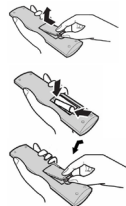

Zamena baterija:

Potrebno je da postavite baterije u daljinski upravljač tako što ćete pratiti sledeće instrukcije. Kada baterije oslabe operativna razdaljina daljinskog upravljača će drastično opasti i moraće ih zameniti.

Preporuka kako koristiti baterije:

Korišćenjem pogrešnih vrsta baterija može dovesti do hemijskog curenja ili eksplozije. Molimo vas obratite pažnju na sledeće:

- Budite sigurni da ste polove + i - baterija postavili kako je prikazano na dijagramu u odeljku za baterije daljinskog upravljača.
- Različite vrste baterije imaju drugačije karakteristike. Ne mešajte različite vrste baterija.
- Ne mešajte nove i stare baterije. Ako to uradite smanjujete životni vek baterije i može doći do curenja iste.
- Promenite baterije istog trenutka kada prestanu da rade.
- Hemikalije koje cure iz baterije mogu izazvati iritaciju kože. Ako hemikalije počnu da cure iz baterije odmah ih obrišite sa suvom krpom.
- Baterije mogu da imaju kraći životni vek zbog stanja prilikom skladištenja. Izvadite baterije kad znate da nećete koristiti daljinski upravljač duže vreme.
- Baterije ne izlažite prekomernoj toploti kao što su sunčeva svetlost, vatra ili slično.

Oprez:

- Može doći do eksplozije ako baterije nisu zamenjene pravilno.
- Zamenite baterije sa istom ili sličnom vrstom baterija.

Povezivanje kablova:

Molimo Vas da pročitate pažljivo važne stavke u delu "Održavanje i bezbednost" pre povezivanja i korišćenja proizvoda.

1. Izvadite TV iz pakovanja i stavite ga na ravnu podlogu.

Obratiti pažnju:

- Kada uključujete ili isključujete te TV, kompjuter ili drugi uređaj budite sigurni da je naizmenična struja već isključena. Kada isključujete naponski ili signalni kabl, držite ga za utikač (izolovani deo), a ne za telo kablova.

2. RF izlazni terminal može se povezati sa RF ulazom TV-a.

3. AV terminal DVD-a može se povezati sa AV ulazom TV-a putem AV kablova.

4. Povežite jedan kraj VGA kablova sa VGA portom kompjutera, a drugi kraj sa VGA portom TV-a, a zatim zategnite šrafove u smeru okretanja kazaljki sata na priključcima na oba kraja kablova.

Obratiti pažnju:

Pri priključivanju 15-to pinovog VGA kablova vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

5. Priključite jedan kraj HDMI kablova sa HDMI izlazom nekog uređaja, a drugi sa HDMI ulazom TV-a.

Obratiti pažnju:

Pri priključivanju HDMI kablova vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

6. Proverite da su odgovarajući AV kablovi spojeni sa odgovarajućim AV ulazima na TV-u.

7. Povežite naponski kabl sa izvorom struje od 100-240V.

Obratiti pažnju:

 
-Opseg izvora napajanja TV-a je 100-240V, 50/60Hz. Ne priključivati ga na izvor napajanja koji nije u tom opsegu.

-Molimo Vas da držite izolovani deo utikača naponskog kablova kada ga isključujete i nemojte da dodirujete direktno njegove metalne delove.

Osnovne operacije:

Vodič za brz start

-Povezivanje:

1. Priključite napajanje i antenu.
2. Pritisnite taster  na daljinskom upravljaču da uključite TV.





-Početno podešavanje:

Kada je TV uključen po prvi put pojaviće se niz uputstava na ekranu koji će vam pomoći u podešavanju osnovnih parametara.

1. Izaberite željeni jezik.

Pritiskajte tastere ///, a zatim taster OK.


2. Izaberite odgovarajuću zemlju.


Pritiskajte dugmiće ///, a zatim taster OK da bi izabrali zemlju posle čega će početi traženje kanala.

Upaliti/ ugasiti TV

-Upaliti TV

Priključite kabl za napajanje. U tom trenutku TV će preći u stanje čekanja (standby).

Pritisnite taster  na daljinskom upravljaču kako bi iz stanja pripravnosti upalili TV. -Ugasiti TV

Pritisnite taster  na daljinskom upravljaču kako bi ga prebacili u stanje pripravnosti (standby).

Ne ostavljajte vaš TV u stanju čekanja duže vreme. Najbolje je da TV isključite iz napajanja i da ga odvojite od kabla za antenu.

-Nema signala

Ako nema ulaznog signala pojaviće se poruka koja vas na to upozorava. U TV/DTV modu ako nema signala 15 minuta, TV će se sam ugasiti. U PC modu TV će se sam ugasiti ako ulaznog signala nema 5 minuta. Kada spojite VGA kabl, TV će se sam upaliti.

Biranje programa

- Korišćenje CH+/CH- tastera na TV u i na daljinskom upravljaču

Pritisnite taster CH+ da bi prešli na viši kanal.

Pritisnite taster CH- da bi prešli na niži kanal.

-Korišćenje tastera sa brojevima (0-9)


Birajte željeni kanal pritiskanjem odgovarajućih brojeva od 0 do 9 (u TV i DTV modu)


-Korišćenje tastera -/--

Možete da izaberete deo broja kanala pritiskanjem dugmeta -/--

Podešavanje zvuka

 

-Pritisnite taster VOL +/- da podesite jačinu zvuka

-Ako želite da isključite zvuk pritisnite taster 

-Ako želite da ponovo uključite zvuk pritisnite taster  ili VOL +/-

Promena izvora ulaznog signala

Možete da birate izvor ulaznog signala tako što ćete pritisnuti taster INPUT na daljinskom upravljaču.

Zatim pomoću dugmića / se krećete između datih izvora ulaznih signala i pritisnite taster OK da potvrdite izbor.

Daljinski upravljač

Tasteri daljinskog upravljača izgledaju kao što je prikaz a no:



NAPOMENE:

- Sve fotografije u ovom priručniku su primeri, samo za referencu, stvarni proizvod može se razlikovati od prikazanih fotografija
- Tasteri koji nisu pomenuti, u ovom modelu se ne koriste

Definisanje tastera na daljinskom upravljaču:

1. **STANDBY:** Uključite TV ili pristupite standbymodu.
2. **MUTE:** Isključite/Uključite zvuk.
3. **NUMBER BUTTONS:** "0-9" se koriste za direktno pristupanje kanalima.
4. **-/- :** Unesite broj kanala koji želite da gledateK
5. **↺ :** Pritisnite za menjanje između trenutnog I kanala koji ste prethodno gledali.
6. **P.MODE:** Direktno odaberite mod slike.
7. **S.MODE:** Direktno odaberite mod zvuka.
8. **MENU:** Otvorite stranicu za glavni meni.
9. **SLEEP:** Podesite vreme isključenja.
10. **INPUT:** Izaberite izvor signala.
11. **AUDIO:** Izbor između NICAM DUAL / NICAM DUAL / NICAM DUAL+/MONO standard zvuka i u DTV režimu rada izbor jezika koji se sluša
12. **OK:** Potvrdite odabranu opciju.
13. **⬆️⬆️** Pritisnite **⬆️⬆️** za odabir podešavanja
⬆️⬆️ Pritisnite taster **⬅️➡️** da je podesite.
14. **MENU:** Otvorite meniii se vratite na glavni.
15. **EXIT:** Pritisnite da napustite OSD meni.
16. **VOL+/VOL-:** Povećava jačinu zvuk./Smanjuje jačinu zvuka.
17. **CH+/CH-:** Programi unapred./Programi unazad.
18. **ASPECT:** Aspekt funkcija.
19. **INFO:** Prikaži informacije o sadržaju trenutnog kanala
20. **LIST :** Pristup listi kanala.
21. **COLOR BUTTONS: ZELENI/ CRVENI/ ŽUTI/ PLAVI taster**
 - ⬅️ : Brz pregled sadržaja unazad (u MEDIA režimu rada)
 - ➡️ : Brz pregled sadržaja unapred (u MEDIA režimu rada)
 - ⏪ : Prethodno (u MEDIA režimu rada)
 - ⏩ : Sledeće (u MEDIA režimu rada)
 - ⏮ : Reprodukcija / pauza (u MEDIA režimu rada)
 - ⏹ : Zaustavi (u MEDIA režimu rada)
22. **FAV:** Pritisnite da dodate ili uklonite Vaš oniljeni kanal u okviru tv menija.
23. **TEXT:** Uključivanje i isključivanje Teletekst moda
24. **HOLD:** Uključenje i isključenje prikaza trenutne stranice.
25. **SUBTITLE:** Prikazivanje titla u USB modu.
26. **INDEX:** Zatraži Index stranicu u Teletekst modu.
Isključenje reprodukcije u PVR modu ili Media Player modu.
27. **REVEAL:** Otkrivanje skrivenih informacija nekih stranica teleteksta.
28. **EPG:** Pozovite EPG (Elektronski programski vodič), samo u DTV režim rada
29. **SUBPAGE:** Unesite podstranicu.
30. **SIZE:** Promena veličine prikaza u Teletekst modu.
31. **REC:** Započinjanje snimanja u PVR modu

Prva instalacija

Povežite antenskim kablom TV i antenu.

Izbor jezika

Pritisnite ◀ / ▶ kako bi u opciji Language odabrali željeni jezik.

Izbor zemlje

Pritisnite ▼ / ▲ i izaberite opciju Country

Pritisnite ◀ / ▶ kako bi u opciji Country odabrali željenu zemlju.

First Time Installation	
Language	English
Country	Germany
Environment	Home Mode
Sorting by LCN	On
ENTER Auto Tuning	

Tuning Setup	
Tune Type	DTV + ATV
Digital Type	DVB-T
Scan Type	Full
Network ID	Auto
Frequency	Auto
Symbol Rate	Auto
MENU Back ENTER Start	

Glavni meni

Channel Meni

 
Pritisnite taster MENU kako bi prikazali glavni meni.
Pritisnite tester levo/desno i izaberite CHANNEL opciju.

 
 
 


1. Pritisnite ▼ / ▲ i izaberite opciju u CHANNEL meniju koju želite da podesite.
2. Pritisnite taster ENTER za podešavanje.
3. Po završetku podešavanja, pritisnite taster ENTER kako bi sačuvali promene i vratili se na prethodni meni.


Automatsko podešavanje

Pritisnite ▼ / ▲ i izaberite opciju Auto Tuning, a zatim pritisnite ENTER za potvrdu.

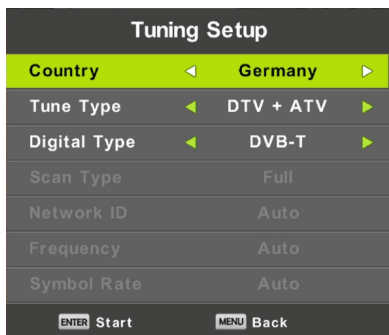

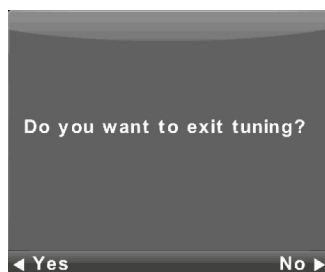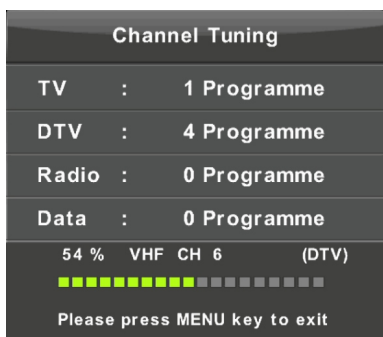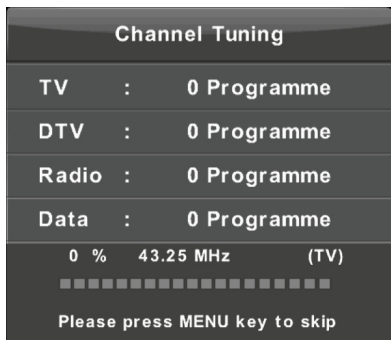

ATV ručno podešavanje

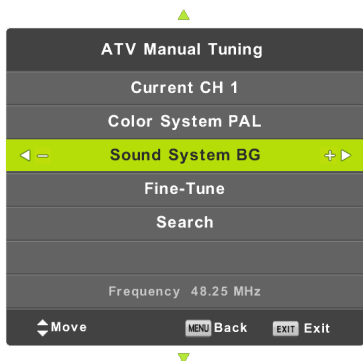 

Current CH

Broj trenutno odabranog kanala

Color System

Biranje kolor sistema.
Dostupne opcije: AUTO, PAL SECAM.

Sound System

Biranje zvučnog sistema.

Fine-Turn

Finopodešavanje frekvencije kanala.

 
Search

Početak pretrage kanala.

DTV ručno podešavanje


Pritisnite ▼ / ▲ i izaberite opciju DTV Manual Tuning, a zatim taster ENTER kako bi otvorili podmeni.

Pritisnite ◀ / ▶ i izaberite kanal, a zatim taster ENTER kako bi počeli pretragu programa.

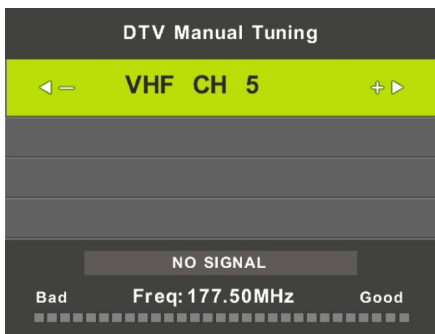

Spisak programa

 Pritisnite ▼ / ▲ i izaberite opciju Program Edit, a zatim taster ENTER kako bi otvorili podmeni.

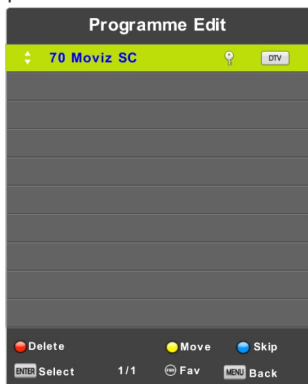

Tri tastera u boji predstavljaju prečice za uređivanje programa iz liste.

Prvo pritisnite ▼ / ▲ i izaberite željeni kanal.

 
Pritisnite CRVENI taster da izbrisete program iz Pritisnite liste. ŽUTI taster da premestite program u Vaših najomiljenijih programa.

Pritisnite taster FAV na daljinskom upravljaču kako bi kanal koji trenutno gledate stavili u listu vaših omiljenih kanala.


Pritisnite PLAVI taster da preskočite izabrani program. Pri korišćenju tastera CH+/CH- vaš TV će automatski preskočiti taj kanal.

Lista rasporeda


Pritisnite ▼ / ▲ i izaberite opciju Schedule List, a zatim taster ENTER kako bi otvorili podmeni.

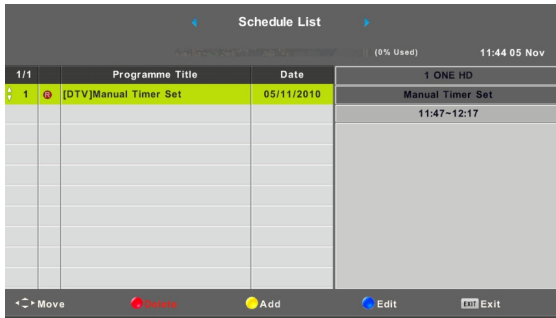

 Pritisnite ŽUTI taster kako bi dodali novi raspored kao što je prikazano dole.

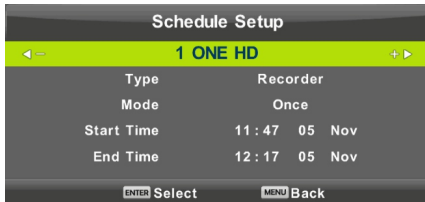


 Ako je uneto vreme u konfliktu, prikazaće vam se poruka upozorenja.

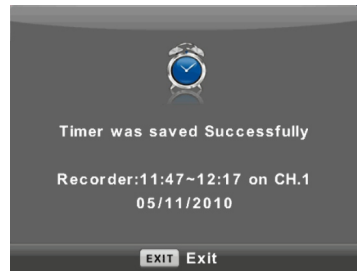

Informacije o signalu

 Pritisnite ▼ / ▲ i izaberite opciju Signal Information, a zatim taster ENTER kako bi videli detalje o signalu. Ova opcija je moguća samo kod DTV-a.

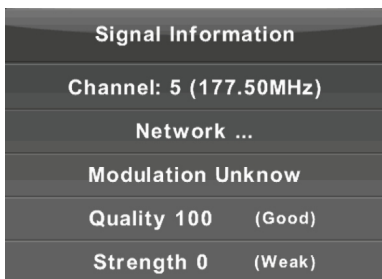

Lista kanala u satelitskom izvoru



 
Automatsko podešavanje

Pritisnite **▼** / **▲** i izaberite opciju Auto Tuning, a zatim pritisnite ENTER za potvrdu.



Podešavanje setelitske antene

Pritisnite **▼** / **▲** i izaberite opciju Dish Setup, a zatim pritisnite ENTER za potvrdu

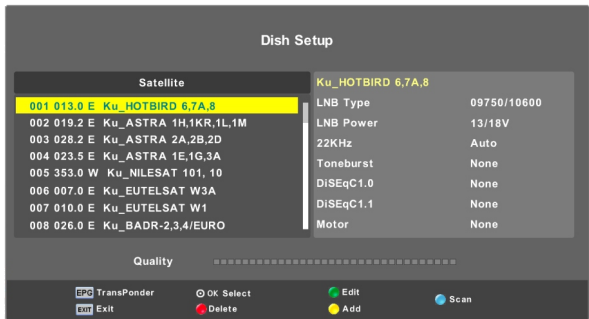

Pritisnite MENU taster kako bi ste otvorili glavni meni.
Odaberite "Channel" koristeći navigacione tastere pritisnite OK za pristup.
Zatim odaberite "Dish Setup" i pritisnite OK za pristup.
Pritisnite ◀ / ▶ da izabere levu, srednju ili desnu kolonu.
Pritisnite EXIT za povratak.

A. Kada je odabrana opcija **Satellite**:

(1) Pritisnite **ŽUTI** taster da pristupite tzv. Add meniju:

Satellite Name

Pritisnite ◀ da pristupite stranici za promenu imena
Koriste navigacionu dugmad kako bi ste ispisali novo ime.

Longitude Direction

Pritisnite ◀ / ▶ da izaberete željenu opciju

Longitude Angle

Pritisnite ◀ / ▶ da pomerite kursor i pritisnite dugmad sa brojevima
na daljinskom upravljaču kako bi uneli željenu vrednost.

Band

Pritisnite ◀ / ▶ da izaberete željenu opciju.

(2) Pritisnite **ZELENI** taster na daljinskom upravljaču da uđete u
tzv. Edit meni. Opcije u ovom meniju su iste kao u prethodnom.

(3) Pritisnite **PLAVI** taster na daljinskom upravljaču da pristupite
tzv. Scan menu. Pritisnite ▼ / ▲ da izaberete željeni objekat.
Pritisnite ◀ da izaberete željeni režim skeniranja, tip kanala i tip
usluge.

(4) Pritisnite **CRVENI** taster za brisanje.

Pritisnite **EPG** da zamenite satelit i Transponder.

B. Kada je odabrana **Transpoder (Srednja) opcija**:

(1) Pritisnite **ŽUTI** taster da pristupite tzv. Add meniju

Frequency

Pritisnite ◀ / ▶ da pomerite kursor i pritisnite dugmad sa brojevima na
daljinskom upravljaču kako bi uneli željenu vrednost.

Symbol (ks/s)

Pritisnite ◀ / ▶ da pomerite kursor i pritisnite dugmad sa brojevima na
daljinskom upravljaču kako bi uneli željenu vrednost.

Polarity

Pritisnite ◀ / ▶ da izaberete željenu opciju

(2) Pritisnite **ZELENI** taster na daljinskom upravljaču da uđete u tzv. Edit
meni. Opcije u ovom meniju su iste kao u prethodnom.

(3) Pritisnite **PLAVI** taster na daljinskom upravljaču da pristupite tzv.
Scan menu. Pritisnite ▼ / ▲ da izaberete željeni objekat. Pritisnite ◀ da
izaberete željeni režim skeniranja, tip kanala i tip usluge.

C. Kada je Ku_ASTRA... (Desna) opcija izabrana:

LNB (Low Noise Block) Type

Pritisnite ◀ / ▶ da uđete u podmeni. Potom pritisnite ▼ / ▲ da izaberete željenu opciju.

LNB Power

Pritisnite ◀ / ▶ da izaberete željenu opciju.

22 kHz

Pritisnite ◀ / ▶ da izaberete željenu opciju.

Toneburst

Pritisnite ◀ / ▶ da izaberete željenu opciju.

DisEqc1.0 (Digital Satellite Equipment Control)

Pritisnite ◀ / ▶ da izaberete željenu opciju.

DisEqc1.1

Pritisnite ◀ / ▶ da izaberete željenu opciju.

Motor

Pritisnite ◀ / ▶ da izaberete željenu opciju.

EPG

Pritisnite **EPG** taster na daljinskom upravljaču da snimate programe.

7 Day TV GUIDE			
12:00 - 12:59	05 Nov 2010	Sports	Age 09
Another high octane hour of ANDRA Drag Racing only on ONE. The Rocket Allstars fire up at the Sydney Dragway for another action packed Friday Night on the quarter mile. #BJ(¶◊ © Ten]w ~ TD3C4 ýýÿheTEDU_î{UÛËÿXJkfv\$ýs@W3#rì»VTC33&X3 ©_T†@◊◊◊◊ [pñkr] ~}tkgjs]			
05 Nov 2010 12:03:58		05 Nov 2010	
1 ONE HD	12:00-12:59	Drag Racing: ANDRA Pro Series	Now
2 AFD0, 4:3	12:59-15:00	Rugby: Grand Slam Tour 2009	Next
3 AFD1, 16:9	15:00-15:30	Sports Tonight Late	
4 AFD1, 4:3	15:30-16:01	MVP	
5 AFD2, 16:9	16:01-16:31	Real NBA	
6 AFD2, 4:3	16:31-17:01	Omnisport	
7 AFD3, 16:9	17:01-20:00	Football: Arsenal TV	
8 AFD3, 4:3	20:00-21:00	Football: Bundesliga Weekly Highlights	
Record	Remind	Prev Day	Next Day
Move View	Info	Details	EXIT Exit

Pritisnite ◀ / ▶ da izaberete željeni program.

Pritisnite ◀ / ▶ da se prebacite sa leve na desnu kolonu.

Kada je program izabran (kursor pomeren na desnu kolonu):

Pritisnite **CRVENI** taster da snimate program.

Pritisnite **ZELENI** taster nekoliko puta da postavite podsetnik.

Pritisnite **ŽUTI** taster da pristupite jučerašnjem programu.

Pritisnite **PLAVI** taster da pristupite sutrašnjem programu.

Picture opcija

Pritisnite MENU taster da pristupite glavnom meniju.
Pritisnite ◀ / ▶ da izaberete PICTURE u glavnom meniju.



1. Pritisnite ▼ / ▲ da izaberete opciju koju želite da podesite u PICTURE meniju.
2. Pritisnite OK taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni.

Picture Mode

Pritisnite ▼ / ▲ da izaberete Picture Mode, zatim pritisnite OK da pristupite podmeniju.
Možete da promenite vrednost kontrasta, jačine svetlosti, boje, izoštrjenosti i tonakada je slika u Personal modu.

SAVET: Možete da pritisnete PMODE taster da pristupite podešavanjima slike direktno.



Contrast/ Brightness/ Color/ Tint / Sharpness

Pritisnite ▼ / ▲ da odaberete opciju, potom pritisnite ◀ / ▶ da prilagodite.

- Contrast** Podesite intenzitet isticanja slike, ali senka slike je nepromenjena.
- Brightness** Prilagodite izlaz optičkih vlakna cele slike, uticaće na tamni region slike
- Color** Podesite zasićenost boje kako Vam odgovara.
- Tint** Upotreba u kompoziciji boje je promenjena sa prenosom u NTSC mod.
- Sharpness** Podesite izoštrjenost detalja na slici.

 
Color Temp

Promenite celokupnu boju slike.

Pritisnite ▼ / ▲ da izaberete Color Temperature, zatim pritisnite **OK** da pristupite podmeniju.

Pritisnite ▼ / ▲ da izaberete. (Dostupne Picture mode opcije: Cold, Normal, Warm).

Možete da promenite vrednost crvene, zelene i plave boje kada je Colour Temperature u **User** modu.

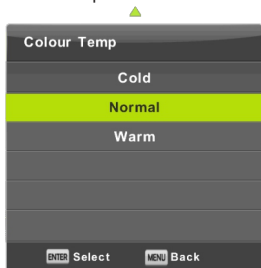


- Cold** Povećajte plave tonove u odnosu na bele.
- Normal** Podesite na podrazumevanu temperaturu boje.
- Warm** Povećajte crvene tonove u odnosu na bele.

Noise Reduction

Smanjite šum slike kako bi popravili njen kvalitet.

 Pritisnite ▼ / ▲ da izaberete Noise Reduction, zatim pritisnite **OK** da pristupite podmeniju.

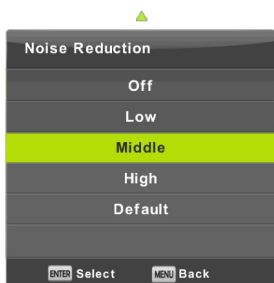


- Off** Isključite otkrivanja šuma u videu
- Low** Otkrivanje i smanjivanje niskog video šuma.
- Middle** Otkrivanje i smanjivanje umerenog video šuma.
- High** Otkrivanje i smanjivanje visokog video šuma.
- Default** Postavi po podrazumevanom.


Sound Opcija

Pritisnite MENU taster da pristupite glavnom meniju

 Pritisnite ◀ / ▶ da izaberete **SOUND** u glavnom meniju.

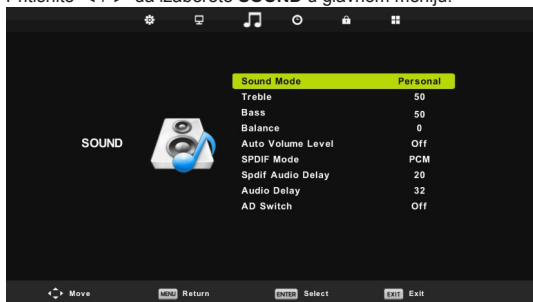

 1. Pritisnite ▼ / ▲ da izaberete opciju koju želite da podesite u **SOUND** meniju.
2. Pritisnite ENTER taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni.

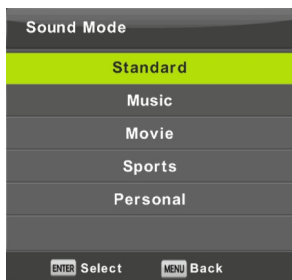

Sound Mode

Pritisnite ▼ / ▲ da izaberete Sound Mode, zatim pritisnite **Enter** da pristupite podmeniju. Pritisnite ▼/▲ da izaberete.

Možete da promenite vrednosti glasa i basa kada je zvuk u Personal modu.

SAVET: Možete da pritisnete SMODE taster da pristupite podešavanjima zvuk direktno.

Standard	Obezbeđuje stabilan zvuk u svim okruženjima.
Music	Čuva originalan zvuk. Dobar za muzičke programe.
Movie	Pojačava glasove i bas za bogato zvučno iskustvo.
Sports	Pojačava vokale.
Personal	Izaberite kako bi podesili zvuk po svojim potrebama.

Beleška: Glas i bas su dostupni isključivo u **Personal** modu, možete da ih podesite kako želite.

Balance

Pritisnite ▼ / ▲ da odaberete opciju, pritisnite ◀ / ▶ da prilagodite.

Auto Volume level

Pritisnite ▼ / ▲ da izaberete Auto Volume Level, potom pritisnite ◀ / ▶ da izaberete On ili Off.

SPDIF Mode

Pritisnite ▼ / ▲ da izaberete SPDIF Mode, potom pritisnite ◀ / ▶ da izaberete Off / PCM / Auto.

AD Switch

Pritisnite ▼ / ▲ da izaberete AD Switch, potom pritisnite ◀ / ▶ da izaberete On ili Off.

Funkcija za slepe, zvuk opisuje trenutno stanje na ekranu.

BELEŠKA:

Balance: Podešavanje zvučnika, omogućava Vam da slušanje prilagodite svom položaju.

Auto Volume: Smanjuje razliku između jačine zvuka programa i kanala.

Time opcija

Pritisnite **MENU** da pristupite glavnom meniju.
Pritisnite ◀ / ▶ da izaberete **TIME** u glavnom meniju.

 


1. Pritisnite ▼ / ▲ da izaberete opciju koju želite da podesite u TIME meniju.
2. Pritisnite OK taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni.


Off Time Pritisnite ◀ / ▶ da izaberete On/Off.

On Time Pritisnite ◀ / ▶ da izaberete On/Off.

Time Zone Pritisnite ▼ / ▲ da izaberete Time Zone, potom pritisnite **Enter** kako bi pristupili podmeniju.
Pritisnite ▼ / ▲ / ◀ / ▶ da izaberete vremensku zonu.

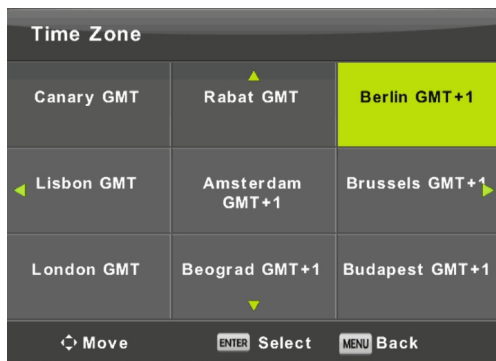


Sleep Timer

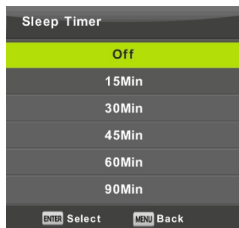 

Pritisnite ▼ / ▲ da izaberete Sleep Timer, potom pritisnite **Enter** da pristupite podmeniju.

Pritisnite ▼ / ▲ da izaberete.
(Dostupne opcije su: Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min).

 Auto Standby

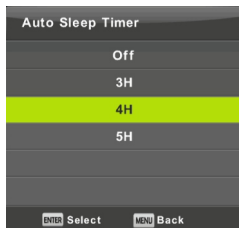


Pritisnite ▼ / ▲ da izaberete Auto Standby, potom pritisnite **Enter** da pristupite podmeniju.

Pritisnite ▼ / ▲ da odaberete.

Savet: Ukoliko daljinsko upravljanje nije korišćeno u hipotetočkom vremenu, ugasiće se automatski. Ako se izvrši bilo kakva operacija, vreme će se restartovati.

 OSD Timer

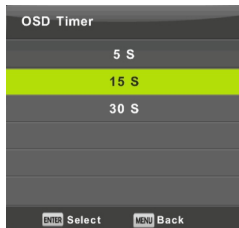

Pritisnite ▼ / ▲ da odaberete OSD Timer, potom pritisnite **Enter** da pristupite podmeniju.

Pritisnite ◀ / ▶ da odaberete.

 
Lock opcija

Pritisnite **MENU** da pristupite glavnom meniju.
Pritisnite **◀ / ▶** da izaberete **Lock** u glavnom meniju.



1. Pritisnite **▼ / ▲** da izaberete opciju koju želite da podesite u LOCK meniju.
2. Pritisnite OK taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni. .


System Lock

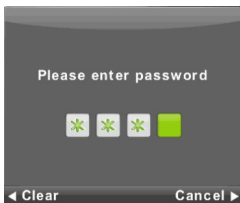

Pritisnite **▼ / ▲** da izaberete System Lock ,
potom pritisnite **Enter** da učinite sledeće 4 opcije mogućim.


Automatska lozinka je 0000, ako zaboravite koju ste lozinku postavili, molimo Vas da pozovete servis.

 Set Password

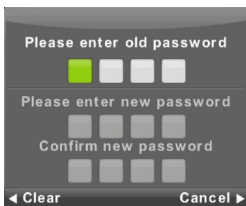


Pritisnite **▼ / ▲** da pristupite Set Password,
potom pritisnite **Enter** da pristupite podmeniju kako bi postavili novu lozinku.

 Channel Lock

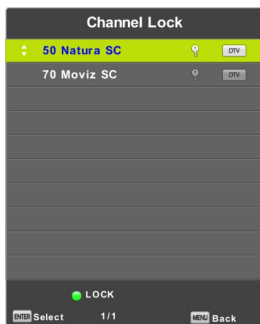

Pritisnite ▼ / ▲ da izaberete Channel Lock potom pritisnite **Enter** da uđete u podmeni. Pritisnite **Zeleno** da zaključate ili otključate kanal.

 Parental Guidance

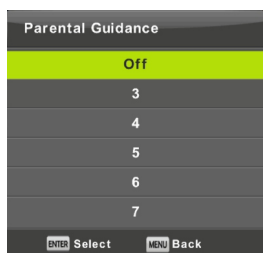


Pritisnite ▼ / ▲ da izaberete Parental Guidance, potom pritisnite **Enter** da uđete u podmeni da izaberete broj godina u skladu sa godinama Vaše dece. Na taj način određujete koji programi su pogodni za Vašu decu.

Key Lock

Pritisnite ▼ / ▲ da izaberete Key Lock, potom pritisnite ◀ / ▶ da izaberete Off ili On. Kada je Key Lock status na ON, ne možete da koristite Key panel taster.

 Hotel opcija

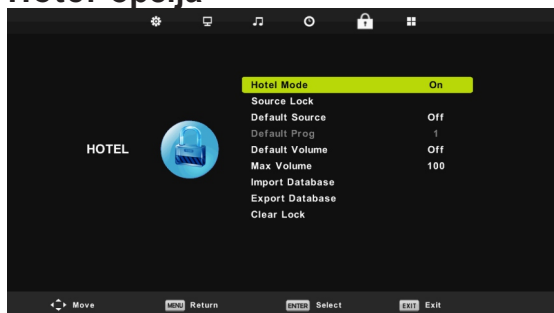

1. Pritisnite ▼ / ▲ da izaberete opciju koju želite da podesite u LOCK meniju.
2. Pritisnite OK taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni.

Hotel Mode

Pritisnite ▼ / ▲ da izaberete Hotel Mode, potom pritisnite ◀ / ▶ da izaberete on ili off.

Source Lock

Pritisnite ▼ / ▲ da izaberete Source Lock da zaključate izbor koji želite, potom pritisnite **Enter** da pristupite podmeniju.

Default Source

Pritisnite ▼ / ▲ da pristupite Default Source, potom pritisnite **Enter** da pristupite podmeniju.

Default Prog

Pritisnite ▼ / ▲ da izaberete Default Prog, potom pritisnite ◀ / ▶ da prilagodite. Dostupno je kada je automatski izvor TV.

Max Volume

Pritisnite ▼ / ▲ da izaberete Max Volume, potom pritisnite ◀ / ▶ da prilagodite.

Clear Lock

Pritisnite ▼ / ▲ da izaberete Clear Lock, potom pritisnite **Enter** da obrišete podešavanje koje ste prethodno namestili.

Setup opcija

Pritisnite **MENU** da pristupite glavnom meniju.

Pritisnite ◀ / ▶ da izaberete **SETUP** u glavnom meniju.

 


1. Pritisnite ▼ / ▲ da izaberete opciju koju želite da podesite u SETUP meniju.
2. Pritisnite ENTER taster da podesite.
3. Nakon podešavanja, pritisnite MENU da sačuvate promene i vratite se na pređašnji meni.

Language

OSD izbor jezika biće prikazan na ekranu. Automatski jezik je engleski u glavnom meniju.

Pritisnite ▼ / ▲ / ◀ / ▶ da izaberete Menu Language (jezik menije)

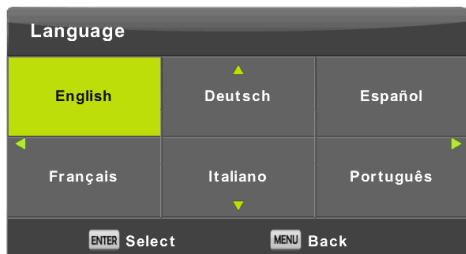

TT Language

Pritisnite ▼ / ▲ da izaberete TT Language, potom pritisnite **Enter** da pristupite podmeniju.

Pritisnite ▼ / ▲ / ◀ / ▶ da izaberete TT language.



Audio Languages

Pritisnite **▼ / ▲** da izaberete Audio Languages, potom pritisnite **Enter** da pristupite podmeniju.
Pritisnite **◀ / ▶** da izaberete osnovne Audio Languages.
Pritisnite **▼ / ▲ / ◀ / ▶** da odaberete Audio Languages.

Audio Languages		Primary
English	Italiano ▲	Čeština
◀ Français	Español	Dansk ▶
Deutsch	Português ▼	Ελληνικά
ENTER Select		MENU Back

Subtitle Language

Pritisnite **▼ / ▲** da odaberete Subtitle Language, potom pritisnite **Enter** da pristupite podmeniju.
Pritisnite **◀ / ▶** da izaberete osnovne Subtitle Language.
Pritisnite **▼ / ▲ / ◀ / ▶** da odaberete Subtitle Language.

Subtitle Language		Primary
English	Italiano ▲	Čeština
◀ Français	Español	Dansk ▶
Deutsch	Português ▼	Ελληνικά
ENTER Select		MENU Back

Hearing Impaired

Pritisnite **▼ / ▲** da odaberete Hearing Impaired, potom pritisnite **Enter** da odaberete On ili Off.

PVR File System

Pritisnite **▼ / ▲** da odaberete PVR File System , potom pritisnite **Enter** da pristupite podmeniju.
Pritisnite **▼ / ▲** da izaberete Check PVR File System ,
potom pritisnite **Enter** da pristupite opciji. Biće proverena brzina USB-a.

Select Disk	C:
Check PVR File System	Start
USB Disk	
Format	
Timeshift Size	
Speed	
Free Record Limit	6 Hr.
MENU Select	MENU Back

Aspect Ratio

Pritisnite ▼ / ▲ da odaberete Aspect Ratio, potom pritisnite **Enter** da pristupite podmeniju..

Pritisnite ▼ / ▲ da odaberete Aspect Ratio. (Dostupne opcije su: Auto, 4:3, 16:9, Zoom1, Zoom2).



Blue Screen

Pritisnite ▼ / ▲ da odaberete Blue Screen, potom pritisnite **Enter** da izaberete On or Off.

First Time Installation

Pritisnite ▼ / ▲ da odaberete First time installation, potom pritisnite **Enter** da pristupite.

Reset

 
Pritisnite ▼ / ▲ da odaberete Reset, potom pritisnite **Enter** da pristupite podmeniju.

Software Update(USB)

Pritisnite ▼ / ▲ da odaberete Software Update (USB), priključite svoj USB u USB slot (ulaz), potom pritisnite **Enter** da unapredite odgovarajući softver.

HDMI CEC

Pritisnite ▼ / ▲ da odaberete HDMI CEC, potom pritisnite **Enter** da pristupite podmeniju.

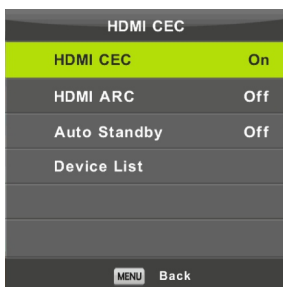

HDMI CEC Pritisnite ◀ / ▶ da uključite ili isključite HDMI CEC.

HDMI ARC Pritisnite ◀ / ▶ da uključite ili isključite HDMI ARC.

Auto Standby Pritisnite ◀ / ▶ da uključite ili isključite Auto Standby.

Device List Pritisnite **Enter** da otvorite glavni meni.

PC

Screen Menu

Press **MENU** button to display the main menu.

Press **◀ / ▶** button to select **SCREEN** in the main menu.



1. Press **▼ / ▲** button to select the option that you want to adjust in the **SCREEN** menu.
2. Press **Enter** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

Auto Adjust

Press **Enter** button to start adjusting **H-Offset/V-Offset/Size/Phase** automatically.

H-Offset.

Adjust the horizontal position of the picture.

Press **▼ / ▲** button to select **H-Offset**, then press **Enter** button to enter sub-menu.

V-Offset

Adjust the vertical position of the picture.

Press **▼ / ▲** button to select **V-Offset**, then press **Enter** button to enter sub-menu.

Size

Adjust the display size.

Press **▼ / ▲** button to select **Size**, then press **Enter** button to enter sub-menu.

Phase

Adjust the horizontal interfering lines.

Press **▼ / ▲** button to select **Phase**, then press **Enter** button to enter sub-menu.

Position Reset

Press **▼ / ▲** button to select **Position Reset**, then press **Enter** button to enter.

 
Notes:

1. Noise Reduction in PICTURE option is invalid.
2. AD Switch in SOUND option is invalid.
3. TIME menu and description are the same as that for Air mode.
4. Block Program and Parental Guidance in LOCK option is invalid.
5. Audio Languages, Subtitle Language, Hearing Impaired and PVR File System in SETUP option is invalid.
6. PC mode has no CHANNEL menu.

MEDIA

Media OPERATION

Note: Before operating **Media** menu, Plug in USB device, then press INPUT button to set the Input Source to **Media** . Press ▼ / ▲ button to select **Media** in the Source menu, then press **Enter** button to enter.

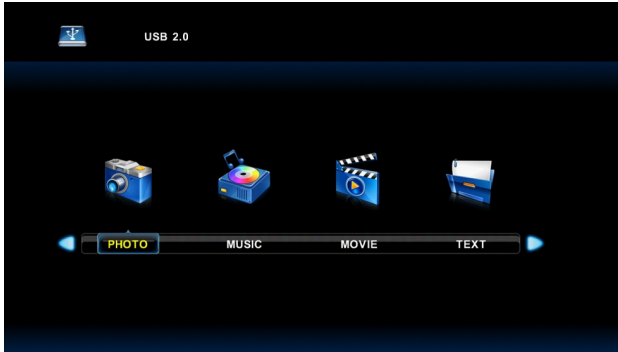


Press ◀ / ▶ button to select the option you want to adjust in the main **Media** menu, then press **Enter** button to enter.

Photo Menu


Press ◀ / ▶ button to select PHOTO in the main menu, then press **Enter** button to enter.

 Press **Exit** button to return to the previous menu and exit menu to quit.

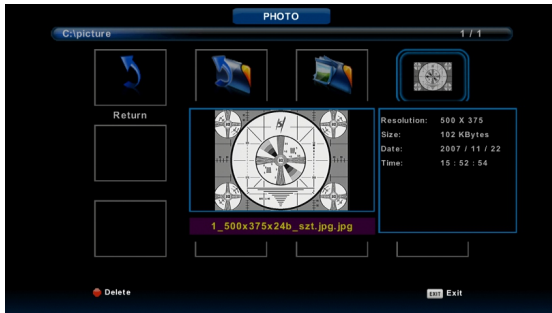

Press ◀ / ▶ button to select the file you want to watch in the file selecting menu, then press media button to display picture.

 When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.

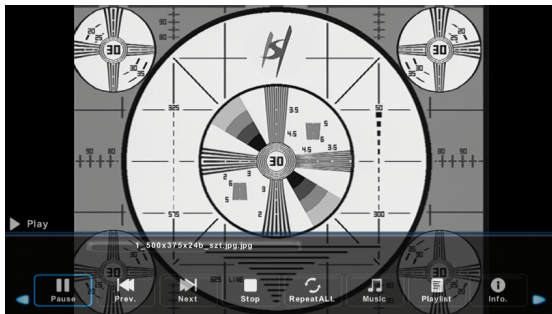

Music Menu

Press ◀ / ▶ button to select MUSIC in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.



Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

Press ◀ / ▶ button to select return option to the previous menu.



Movie Menu

Press ◀ / ▶ button to select MOVIE in the main menu, then press **Enter** button to enter.

 
Press **Exit** button to return to the previous menu and exit menu to quit.

Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

Press media button to play the selected movie.

Press display button to select menu in the bottom you want to run, then press **Enter** button to operate.

Press **Exit** button to back to the previous menu and exit button to quit the entire menu.

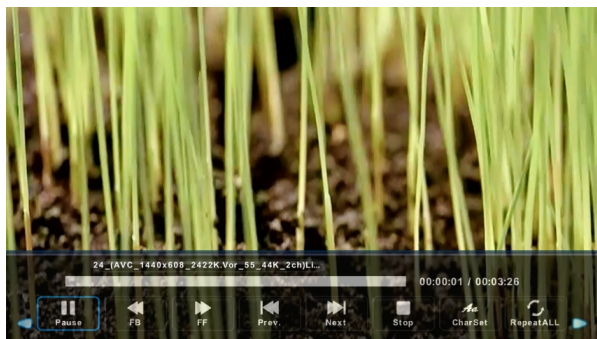


Text Menu

Press ◀ / ▶ button to select TEXT in the main menu, then press **Enter** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.

Press ◀ / ▶ button to select drive disk you want to watch, then press **Enter** button to enter.

 Press ◀ / ▶ button to select return option to back to the previous menu.

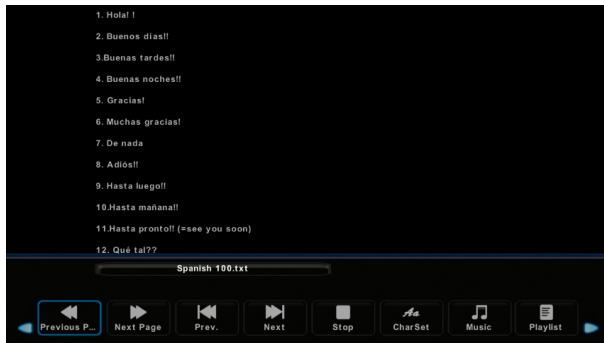

NOTE: The data in the picture is reference only, and the actual goods shall prevail.

Troubleshooting Guide

Troubleshooting

Before contrast the service technician, perform the following simple checks. If any program still persists, unplug the TV and calling for serving.

PROBLEM	POSSIBLE SOLUTION
No sound and picture	<ul style="list-style-type: none"> - Check whether the main plug has been connected to a wall let. - Check whether you have pressed the POWER button on the front of TV set. - Check the picture contrast and brightness settings.
Normal picture but no sound	<ul style="list-style-type: none"> - Check the volume. - Sound muted? Press the MUTE button. - Try another channel, the problem may be with the broadcast. - Are the audio cables installed properly?
The remote control does not work	<ul style="list-style-type: none"> - Check to see if there any object between the product and remote control Causing obstruction. - Are batteries installed with correct polarity (+ to +, - to -)? - Correct remote operating mode set: TV, VCR etc.? - Install new batteries
Power is suddenly turned off	<ul style="list-style-type: none"> - Is the sleep timer set? - Check the power control settings. Power interrupted. - No broadcast on station tuned with auto activated.
Picture appears slowly after switching on	<ul style="list-style-type: none"> - This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.
No or poor color or poor picture	<ul style="list-style-type: none"> - Adjust the color in menu option. - Keep a sufficient distance between the product and the VCR. - Try another channel, the problem may be with the broadcast. - Are the VIDEO cables installed properly? - Activate the any function to restore the brightness of the picture.
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> - Check for local interference such as an electrical appliance or power tool.
Poor reception on some channels	<ul style="list-style-type: none"> - Station or cable product experiencing problems. Tune to another station. - Station signal is weak, reorient antenna to receive weaker station. - Check for sources of possible interference.
Lines or streaks in pictures	<ul style="list-style-type: none"> - Check the antenna (Change the direction of the antenna).
No output from one of the speakers	<ul style="list-style-type: none"> - Adjust balance in menu option.

NOTE: There is a problem in VGA mode (Only VGA mode applied).

Troubleshooting Guide

PROBLEM	POSSIBLE SOLUTION
The signal is out of range.	<ul style="list-style-type: none">- Adjust resolution, horizontal frequency, or vertical frequency.- Check it whether the signal cable is connected or loose.- Check the input source.
Vertical bar or stripe on back ground & Horizontal Noise & Incorrect position.	<ul style="list-style-type: none">- Work the auto configure or adjust clock, phase, or H/V position.
Screen color is unstable or single color.	<ul style="list-style-type: none">- Check the signal cable.- Reinstall the PC video card.

Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then used it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

Extended Absence



If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

Disposal of old electrical appliances

 
 
 
 
 


The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

STAND INSTALLATION

Stand Installation

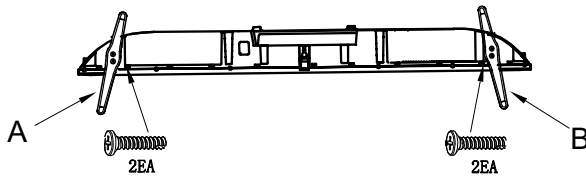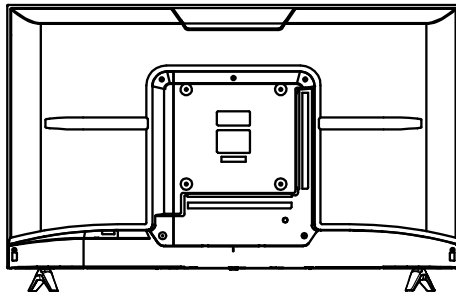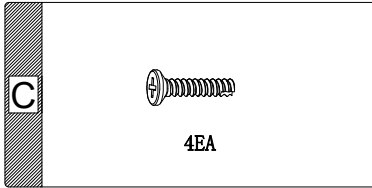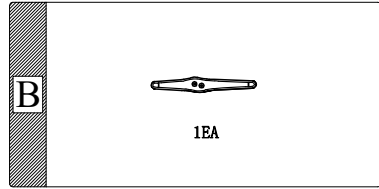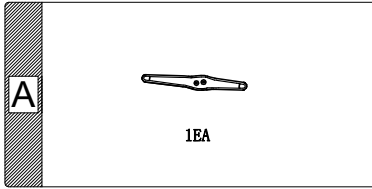



LED TV UREĐAJ
MODEL:43DTV240D

NAPAJANJE: 100-240V~ 50/60 Hz
SNAGA POTROŠNJE: 75W



UPOZORENJE: KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREĐAJ KIŠI ILI VLAZI. NE POSTAVLJAJTE PREDMETE ISPUNJENE TEČNOŠĆU NA I OKO UREĐAJA. KABL ZA NAPAJANJE ISKLJUČITE IZ UTIČNICE AKO UREĐAJ NE KORISTITE DUŽI VREMENSKI PERIOD. OVAJ UREĐAJ PRI RADU KORISTI VISOKI NAPON. NE UKLANJAJTE ZADNJI POKLOPAC. OBRATITE SE KVALIFIKOVANOJ SERVISNOJ SLUŽBI ZA OBAVLJANJE SERVISA.



Proizveo:
import d.o.o
Batajnički drum 9 deo 10a,
11080 Beograd, Zemun
Proizvedeno u Srbiji

SERIJSKI BROJ:



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs