



UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model: 32WHA471E

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne

podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR

Informacije o proizvodu (lista sa podacima)



Informacije	Vrednost	Jedinica
1. Ime ili zaštitni znak isporučioaca	VIMPORT DOO BEOGRAD	
Adresa isporučioaca	Batajnički drum 9 deo 10a, Beograd(Zemun)	
2. Identifikaciona oznaka modela	FOX LED TV 32WHA471E	
3. Klasa energetske efikasnosti za SDR mod	F	
4. Snaga u uključenom stanju za standardni dinamički raspon (SDR)	27.0	W
5. Klasa energetske efikasnosti (HDR)		
6. Snaga u uključenom stanju za mod velikog dinamičkog raspona (HDR), ako je primenljivo		W
7. Snaga u isključenom stanju, ako je primenljivo	0.0	W
8. Snaga u stanju pripravnosti, ako je primenljivo	0.5	W
9. Snaga u umrežanom stanju pripravnosti, ako je primenljivo		W
10. Kategorija elektronskog ekrana	Televizor	
11. Odnos veličina	16 : 9	
12. Rezolucija ekrana (u pikselima)	1366 x 768	piksela
13. Dijagonala ekrana	31.5	inča
14. Dijagonala ekrana	80.0	cm
15. Vidljivo područje ekrana	27.4	dm ²
16. Tehnologija panela koja se koristi	LCD sa LED	
17. Automatska regulacija sjajnosti (ABC) koja je dostupna	Ne	
18. Senzor za prepoznavanje glasa koji je dostupan	Ne	
19. Senzor prisutnosti u prostoriji koji je dostupan	Ne	
20. Učestalost osvežavanja slike (zadata postavka)	60	Hz
21. Minimalna garantovana raspoloživost ažuriranja softvera i integrisanog softvera uređaja, ako je propisana, od datuma završetka stavljanja na tržište do	3	godina
22. Minimalna garantovana raspoloživost rezervnih delova, ako je propisana, od datuma završetka stavljanja na tržište do	3	godina
23. Minimalno trajanje opšte garancije koju daje isporučilac	3	godina
24. Vrsta napajanja:	Unutrašnje	
25. Spoljašnje napajanje (priloženo uz proizvod, nije standardizovano)		
i.		
ii.	Ulazni napon	V
iii.	Izlazni napon	V
26. Spoljašnje standardizovano napajanje (ako nije priloženo uz proizvod, drugo odgovarajuće napajanje)		
i.	Podržani standardni naziv ili popis	
ii.	Potreban izlazni napon	V
iii.	Potrebna jačina struje (minimalna)	A
iv.	Potrebna frekvencija struje	Hz

Tehničke karakteristike : napajanje 100-240 Vac 50/60Hz
snaga potrošnje : 60 W

VAŽNA BEZBEDONOSNA UPUTSTVA

UPOZORENJE

KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEMOJTE KORISTITI PRODUŽNI KABL, DUPLI UTIKAČ ILI DRUGE DODATKE NA UTIČNICI OSIM ONIH KOJI BI MOGLI DA SPREČE IZAZIVANJE STRUJNOG UDARA. KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREĐAJ VLAZI ILI KIŠI.

 <p>Ovaj simbol munje u jednakostraničnom trouglu upozorava korisnike na prisustvo opasnog i ne izolovanog napona unutar kućišta proizvoda koji može biti dovoljan da stvori rizik STRUJNOG UDARA</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Upozorenje: Da biste smanjili rizik od strujnog udara nemojte skidati poklopac (ili zadnju stranu). Unutra nema delova koje korisnik može sam da zameni. Za obavljanje servisa zatražite pomoć kvalifikovanog osoblja.</p>	 <p>Znak uzvika unutar jednakostraničnog trougla u ovom uputstvu upozorava korisnika na prisustvo važnih instrukcija za rad i održavanje (servisiranje) uređaja.</p>
--	---	---

Ovaj aparat ne treba izlagati vodi, a predmete ispunjene tečnošću poput vaza ne treba da budu postavljeni na i oko uređaja.

OPREZ

Postoji opasnost od eksplozije ako se baterija nepropisno zameni.

Zamenite postojeću sa samo odgovarajućom vrstom baterije.

Nemojte izlagati bateriju direktnoj sunčevoj svetlosti ili bilo kojem drugom izvoru toplote.

Obezbedite pravilno odlaganje istrošenih baterija.

Ostavite lako dostupnim mesto gde je utikač ili nastavak za prekid napajanja.

Da biste smanjili rizik od strujnog udara, ne obavljajte bilo kakvo servisiranje osim onih koje se pominju u ovom uputstvu.

VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnom mestu, može postojati potencijalna opasnost od pada.

Mnoge povrede, posebno dečije, mogu se izbeći primenom jednostavnih mera opreza kao što su:

Korišćenje elemenata ili stalaka koje je preporučio proizvođač televizora.

Korišćenje samo onog nameštaja koji može sigurno izdržati uređaj.

Obezbeđivanje uređaja tako da ne prelazi ivicu nameštaja.

Nemojte postavljati TV na visok nameštaj (na primer, ormare ili police) bez prethodnog pričvršćivanja kako nameštaja tako i uređaja na odgovarajuću površinu.

Ne pokrivajte televizor krpom i ne stavljajte drugi materijal između televizora i nameštaja na kom on stoji.



Sigurna instalacija

Koristite pojas za fiksiranje televizora kako bi sprečili uređaj od pada unapred.



1. **Pročitajte uputstva**- Sve napomene o sigurnosti i načinu rada treba pročitati pre uključivanja aparata.
2. **Sačuvajte uputstva** – Uputstva za sigurnost i uputstvo za upotrebu treba da se sačuvaju za buduće potrebe.
3. **Imajte u vidu Upozorenja** – Treba se pridržavati svih upozorenja na aparatu i svih uputstava za upotrebu.
4. **Pratite uputstva**- Treba pratiti sva uputstva.

 


5. **Voda i vlažnost** – Aparat ne treba koristiti u blizini vode.
6. **Nosač i postolje** – Aparat treba koristiti samo sa nosačem ili postoljem koje preporučuje proizvođač
7. **Montaža na zid ili plafon** – Aparat treba da se montira na zid ili plafon samo po preporuci proizvođača.
8. **Ventilacija** – Aparat treba da bude dobro postavljen, tako da lokacija ili pozicija aparata ne ometaju njegovo provetravanje.
9. **Toplota** – Ovaj aparat treba postaviti dalje od izvora toplote kao što su radijatori i peći.
10. **Napajanje** - Aparat treba povezati samo na napajanje kao što je opisano u uputstvima za upotrebu ili onako kako je naznačeno na uređaju.
11. **Uzemljenje ili polarizacija** – Treba preduzeti mere predostrožnosti.
12. **Zaštita kabla za napajanje** – Naponski kabl treba da bude usmeren tako da je malo verovatno da se može gaziti, priklještitu stvarima na njemu i njegovom kraju.
13. **Čišćenje** – Aparat bi trebalo čistiti samo po preporuci proizvođača.
14. Napajanje spoljne antene treba da se nalazi daleko od dalekovoda.
15. **Uzemljenje spoljne antene** – Ako je spoljna antena povezana na prijemnik, antenski sistem mora biti uzemljen kako bi se obezbedila zaštita od naponskog i izvornog statičkog elektriciteta.
16. **Kada ga dugo ne koristite** – napajanje uređaja trebalo bi da bude isključeno iz utičnice kada se ne koristi duži vremenski period.
17. **Upad predmeta i tečnosti** – Treba paziti da predmeti ne upadnu, a tečnost ne prospe u kućište kroz otvore.
18. **Kada je potreban servis** – Aparat treba da servisira kvalifikovano servisno osoblje kada su:
 - Kabal za struju ili utikač oštećeni.
 - Kada predmeti upadnu ili kada se tečnost prolje po uređaju
 - Kada je aparat izložen kiši
 - Kada aparat ne radi normalno ili pokazuje značajnu promenu u radu.
19. Ventilacioni otvori ne bi trebalo da budu pokriveni predmetima, kao sto su novine, tkanine, zavese itd.
20. Izvore otvorenog plamena, kao sto su upaljene sveće, ne bi trebalo da stoje na aparatu
21. Aparat će biti povezan sa mrežnom utičnicom sa zaštitnim uzemljenjem. Utičnica ili nastavak za prekid napajanja trebaju da budu lako dostupni.




UPOZORENJE

Visok napon se koristi u napajanju ovog uređaja. Ne uklanjajte zadnji poklopac. Obratite se kvalifikovanoj osobi za obavljanje servisa.




UPOZORENJE

 Da biste sprečili požar ili strujni udar, nemojte izlagati uređaj kiši ili vlazi.



UPOZORENJE

 Nemojte ispuštati i gurati predmete u kućište TV-a ili u otvore. Nikada nemojte prosipati tečnost na TV prijemnik.

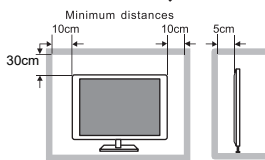


OPREZ

Ako televizor treba da se ugradi u zatvoreni odeljak ili na sličan način, morate se pridržavati dela uputstva o minimalnim udaljenostima. Toplota može smanjiti životni vek televizora, a takođe može biti povećan rizik od požara.



OPREZ

 Nikada nemojte da stanete ili se oslonite ili gurnete uređaj ili stalak na kom se uređaj nalazi. Treba obratiti posebnu pažnju na decu.

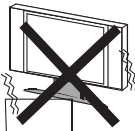


OPREZ

Ne stavljajte uređaj na nestabilno postolje, policu ili sto. Usled pada može doći do ozbiljne povrede lica ili štete na televizoru.



OPREZ

 Kada se proizvod ne koristi duži vremenski period, preporučljivo je da isključite mrežni kabl iz utičnice .

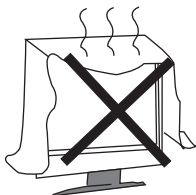

OPREZ

Izbegavajte izlaganje uređaja direktnom suncu i drugim izvorima toplote. Ne postavljajte televizor na druge proizvode koji emituju toplotu. Na primer: Video uređaj, audio pojačala. Ne blokiraj otvore za ventilaciju u zadnjem poklopcu. Ventilacija je od suštinskog značaja za sprečavanje električnih kvarova.



Ne stavljajte kabl za napajanje ispod uređaja.

 


OPREZ



Panel (ekran) koji se koristi u ovom proizvodu napravljen je od stakla. Može se slomiti padom uređaja ili nasilnim udarcem. Pojedinci treba oprezno da rade sa razbijenim staklom ekrana.





- Postavite TV na stabilnu, ravnu površinu, ostavljajući najmanje 10 cm oko njega i 30 cm između vrha uređaja i zida ili ormarića. Da biste sprečili da se televizor prevrne kada ga gurnete, postavite ga blizu zida. Umesto da držite gornju stranu televizora kada ga okrećete, trebalo bi da držite donju stranu.

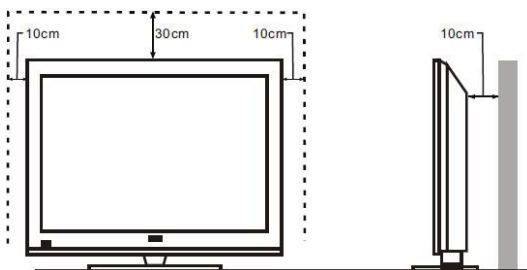

  Umesto da držite gornju stranu televizora kada ga krećete, trebalo bi da držite donju stranu.

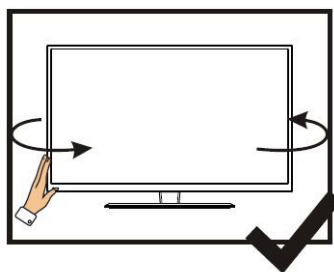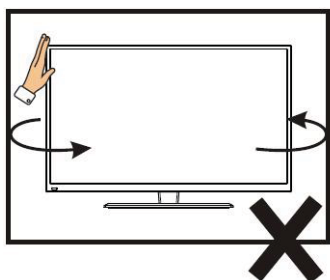

  - Izbegavajte rukovanje televizorom samo jednom rukom kada ga podižete; umesto toga, koristite dve ruke.

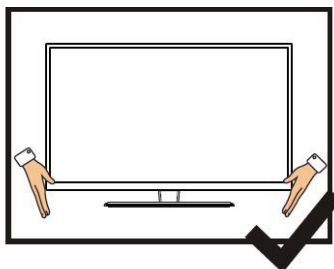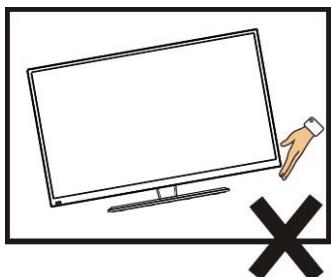

SADRŽAJ

1.	Povezivanje i priprema TV-a.....	2
1.1	Pribor.....	2
1.2	Instalacija postolja.....	2
1.3	Tasteri i interfejsi.....	3
1.4	Daljinski upravljač.....	4
1.5	Ugradnja baterija.....	5
2.	Osnovno rukovanje.....	5
2.1	Uključivanje/Isključivanje (opciono).....	5
2.2	Podešavanje režima pripravnosti (Standby).....	5
3.	Launcher.....	6
4.	Izvor ulaza i podešavanja.....	7
5.	Televizija uživo.....	10
6.	Tehnička specifikacija.....	11
7.	Podržani režimi signala.....	12
8.	Jednostavno rešavanje problema.....	13

FOX LED TV

 
1 Priključivanje i priprema TV-a

1.1 Dodatna oprema

- ✧ Uputstvo za korišćenje
- ✧ Daljinski upravljač
- ✧ Baterija (UM-4/R03P/AAA)
- ✧ Komplet za montiranje na zid (unapred montiran) (opciono)

1.2 Instalacija postolja



(Molimo pogledajte stvarni uređaj za detalje o fizičkoj strukturi.)

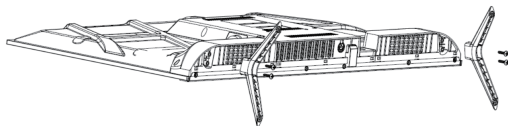


- 1) Postavite TV na mekanu tkaninu ili meke jastuke na sto tako da prednja ploča bude okrenuta nadole.
- 2) Postavite nogice u donje ležište televizora.
- 3) Zašrafite nogice sa šrafovim na mestu, a zatim ih zategnite.

FOX LED TV

  1.3 TASTERI i interfejsi

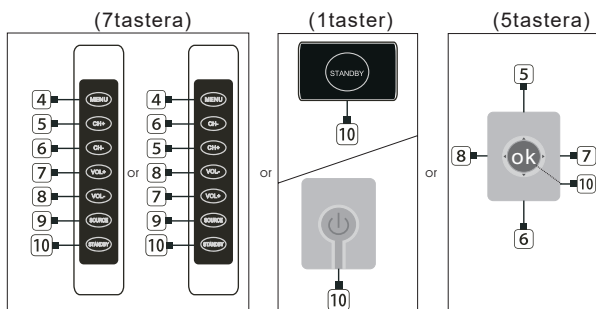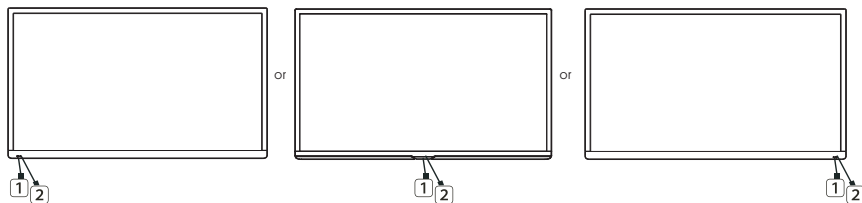

 
1. PROZOR DALJINSKOG SENZORA
2. INDIKATOR NAPAJANJA
3. ZVUČNIK
4. MENU TASTER
5. PROGRAM + TASTER
6. PROGRAM + TASTER
7. VOLUME + TASTER
8. VOLUME + TASTER
9. SOURCE TASTER
10. TASTER PRIPRAVNOSTI
11. ULAZ ZA NAPAJANJE

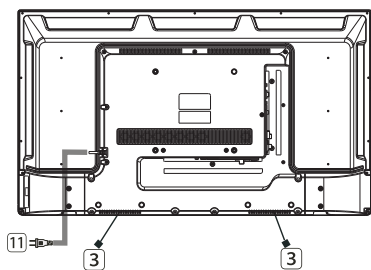

RF45	RF IN (S2) 13V/18V=500mA	RF IN (T2)	MINI AV IN	COAXIAL	USB2 USB1 5V=500mA	HDMI1 (ARC)	HDMI2	CI HDMI3	EARPHONE
------	-----------------------------	------------	------------	---------	--------------------------	-------------	-------	-------------	----------

FOX LED TV

 1.4 Daljinski u pravljač

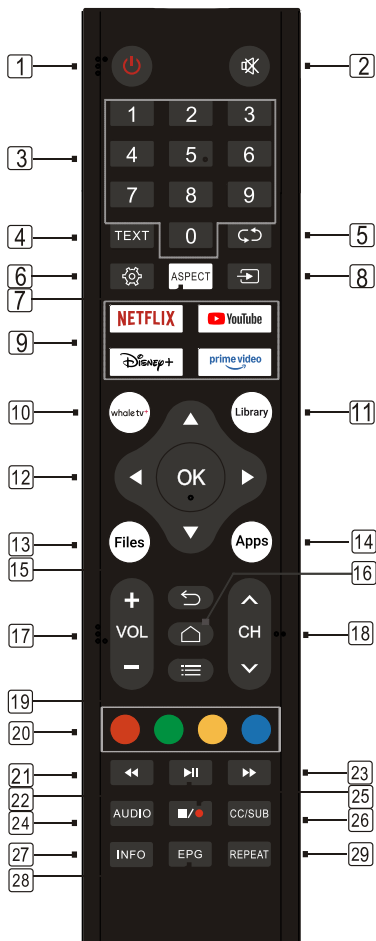

1. STANDBY:STANJE PRIPRAVNOSTI(): Uključivanje i isključivanje režima pripravnosti.
2. Mute: Isključi zvuk.
3. 0~9 : Pritiskom na tastere biraju se brojevi.
4. TEXT: Ulaz ili izlaz iz teleteksta.
5. RECALL: Povratak na prethodni kanal.
6. Settings: Ulazak u meni sa podešavanjima.
7. ASPECT: Promena odnosa slike.
8. SOURCE : Izbor ulaznog signala.
- 9.10.11.13.14. Contentarea: Osam sa aplikacijama.
12. Strelice/OK: Pomeri gore, dole, levo, desno / Potvrdi.
15. Exit: Izadi iz trenutnog interfejsa ili menija.
16. Home: Ulazak na početnu stranicu.
17. Volume: Pojačavanje/smanjivanje zvuka.
18. Channel: Promena kanala.
19. MENI: Prikazuje trenutne detalje programa.
20. 4 Boje: Prilagođeno posebnim funkcijama
21. : Premotavanje unazad.
22. Pritisni jednom za pauzu, ponovo za nastavak.
23. Premotavanje unapred.
24. AUDIO: Izbor audio režima TV-a.
25. : Zaustavi reprodukciju i vrati se na listu datoteka. RECORD: Snimanje DTV režima na USB disk.
26. CC: Pritisnite ovaj taster za podešavanje CC režima. SUBTITLE: U režimu USB reprodukcije filmova, uključiti ili isključiti funkciju titlova. (U USB i TV režim u)
27. INFO: Prikazuje informacije o trenutnom kanalu kao što su vreme i naziv kanala.
28. EPG: Ulazak ili izlazak iz EPG. (Elektronski programski vodič)
29. REPEAT: Omogućava ponavljanje pesama (jedna, nasumično, mešanje).

FOX LED TV

1.5 Instalacija baterija



- 1 Zadnji poklopac daljinskog upravljača treba da bude otvoren.
- 2 Stavite dve 7# (AAA) 1.5V baterije u sistem.
Uverite se da su baterije pravilno polarizovane.
- 3 Pokrijte zadnji poklopac.

Izvadite baterije iz daljinskog upravljača ako ga neko vreme nije koristio.

Izvršite sledeće provere ako daljinski upravljač ne funkcioniše ispravno.

- Proverite da li je TV u programu.
- Proverite da li je polaritet baterija odgovarajući.
- Proverite da li baterije nisu iscrpljene.
- Uverite se da je napajanje u ispravnom stanju ili da je kabl za napajanje pravilno povezan.
- Uverite se da u blizini nema neobičnih neonskih ili fluorescentnih svetla.



2 Osnovna operacija

2.1 Uključivanje/isključivanje (opciono)

- Povežite kabl za napajanje sa **AC ulazni** . Utaknite kabl za napajanje u odgovarajuću utičnicu. - Pritisnite **Prekidač** da uključite TV, zatim pritisnite **Napajanje** taster za uključivanje uređaja. - Pritisnite **Prekidač** ponovo da isključite TV.

Beleška: Nemojte odmah ponovo da otvarate prekidač za napajanje nakon što isključite TV; umesto toga, sačekajte jedan minut pre nego što ponovo otvorite prekidač za napajanje.

2.2 Podešavanje režima pripravnosti

- Pritisnite () taster da biste uključili uređaj.
- Pritisnite () taster ponovo da vratite ekran u režim pripravnosti. Indikator napajanja svetli crveno.
- Uverite se da vaš TV nije ostavljen u režimu pripravnosti duži vremenski period.

2.3 Izbor režima unosa

 
Ovaj set sadrži više modova izvora signala; pritisnite dugme **Source** više puta da biste izabrali izvor signala.

FOX LED TV

3. Launcher

Po ulasku na početnu stranicu, možete kliknuti levim tasterom miša za pristup navigacionom meniju.

1. Home: Glavna stranica sadrži često korišćene aplikacije, personalizovane preporuke i dodatni preporučeni sadržaj.
2. Free TV: Uključuje besplatne kanale, VOD (Video na zahtev) i još mnogo toga.
3. Discovery: Omogućava korisnicima da pretražuju ili pregledaju filmove, TV emisije, video snimke i još mnogo toga.
4. Apps: Sadrži ažuriranja aplikacija, Moje aplikacije, Kategorije aplikacija, preporučene aplikacije i pretragu aplikacija.
5. Brza podešavanja: Kliknite za otvaranje Globalnog menija (pogledajte opis Globalnog menija za detalje).
6. Pretraga: Unesite ključne reči da pronađete željeni sadržaj.
7. User Center: Lični nalog i podešavanja.

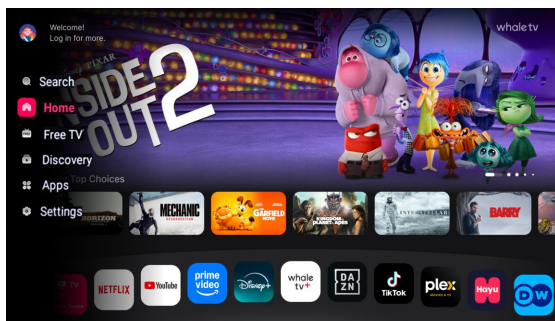

Home:

Prvi ekran početne stranice se sastoji od sledećih sekcija:

1. Banner: Baneri podržavaju automatsku rotaciju, ali se mogu ručno menjati kada su u fokusu.
2. Red aplikacija: Prikazuje unapred instalirane aplikacije, aplikacije preporučene iz pozadine i aplikacije koje je korisnik preuzeo.
3. Preporuka aplikacija
4. Poslednji izvor: Prikazuje poslednje korišćeni izvor – klikom na njega vraća se na prethodni izvor korisnika.

Free TV

Free TV uključuje ne samo FAST sadržaj, već i AVOD – sve dostupno besplatno.

Stranica Free TV se sastoji od sledećih sekcija:

1. Banner: Automatski rotirajući baneri koji se takođe mogu ručno menjati kada su u fokusu.
2. Live Now: Uključuje Program Guide i preporučeni live sadržaj.
3. Recommended Channels & Movies: Prikazuje preporučene live kanale i VOD sadržaj.
4. Free TV Apps: Posebne aplikacije povezane sa Free TV.

Discovery

Discovery prikazuje sve podatke o sadržaju u WhaleTV, uključujući one sa izvorima za reprodukciju i one bez njih (ali sa mnogo uvodnih informacija o sadržaju). Cilj mu je da kreira bazu podataka filmskog, televizijskog i audio sadržaja, kako bi korisnici mogli da istražuju i pronađu sadržaj koji im se dopada.

Apps

 
Apps (app store) nudi širok izbor aplikacija koje korisnici mogu da otkriju i preuzmu.

Напомена: Веze ка Apps i input source завise од детаљног распореда, горња фотографија је само за референцу.

FOX LED TV


 
Files


File Manager se koristi za pretragu svih fajlova u lokalnom skladištu i USB-u.

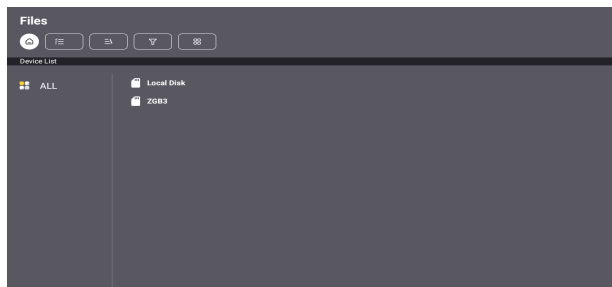

Pored toga, možete izvršavati radnje nad fajlovima pomoću tastera Menu, a radnje uključuju brisanje, kopiranje, lepljenje i preimenovanje.

4. Izvor ulaza i podešavanja

 Na početnom ekranu, klikom na Settings ili Source otvara se Global Menu,   koji omogućava pristup opcijama „Settings“, „Source“ i „Watch TV“.

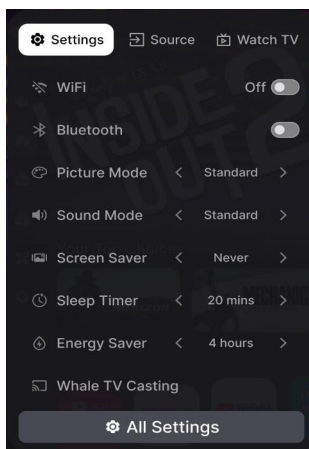

Global Menu je podeljen u 3 taba: Source, Settings i Watch TV (isključivo za TV proizvode).

1.1 Settings – Quick settings: WiFi, Bluetooth, Picture Mode, Sound Mode, Screen Saver, Sleep Timer, Energy

Saver, Whale TV Casting.

All Settings: Sve postavke sistema.

1.2 Source: Svi ostali izvori osim TV Source.

 
1.3 Watch TV – TV Source: Antenna, Cable, Satellite.

Uobičajene funkcije TV-a: TV Guide, PVR, Timeshift, Recordings.

Pritisnite  /  ili  /  da izaberete, zatim pritisnite **OK** da potvrdite.

FOX LED TV

All Settings

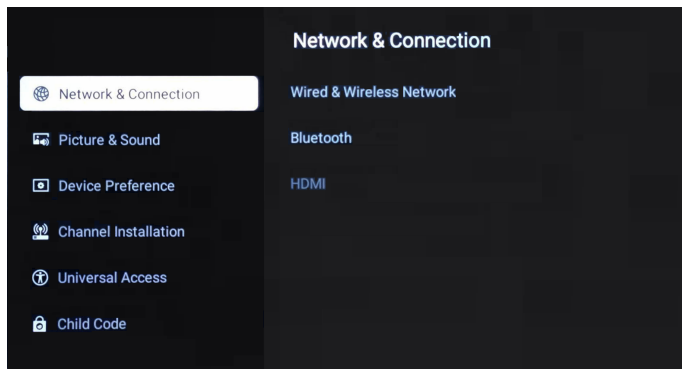

Network & Connection

Network settings

Podešavanja mreže uključuju Wi-Fi switch, network connection, network status i network reset.

Wireless network

Uključite Wi-Fi i izaberite mrežu na koju želite da se povežete.

Add New Network

Na mrežu sa skrivenim SSID-om možete se povezati klikom na „Add new network“ na stranici i ručnim unosom imena i lozinke Wi-Fi mreže.

Wired connection

Nakon umetanja mrežnog kabla, TV će se automatski povezati na žičanu mrežu. Ako je IP adresa uspešno dobijena, stranica View network info će prikazati informacije o žičanoj vezi.

Device Preference

Language

Pomeranjem gore/dole izaberite željeni jezik i kliknite „OK“ da promenite sistemski jezik.

Date and time

Korisnici mogu podesiti vreme i vremenski sistem prema svojim potrebama.

Program Audio & Subtitles

Podesite jezičke preference za Audio Language i Subtitle Language.

Reset TV

Kliknite na Reset „TV“ na stranici da uđete u stranicu za fabričko resetovanje. Korisnici mogu izvršiti fabričko resetovanje prema uputstvima na ekranu.

About

Prikazuje informacije o uređaju, uključujući informacije o uređaju, pravne informacije itd.

Hotel Mode

Device Preferences -> About Device info Pritisnite numeričke tastere: 0614 da uđete u hotel menu.

FOX LED TV

Channel Installation

Country: Podesite sistemsku zemlju.

Antenna or Cable or Satellite Installation: Instalirajte odgovarajući Tuner channel.

CAM Operator Profile: Prebacite Operator Profile. Ako izaberete Off, samo OP-povezane funkcije biće onemogućene, a ako želite potpuno da obrišete OP listu, potrebno je ponovo instalirati TV.

CAM Profile Name: Iskačući prozor prikazuje Profile Name. Ako nema naziva profila, iskačući prozor prikazuje: „No profile name available. There is no CAM installed or the installed CAM does not have a profile name.”

Copy Programmes: Uvoz i izvoz liste kanala putem USB fleš memorije.

Universal Access

Podešavanja pristupačnosti.

Child Code

Lock System: Opcija Lock System može podesiti stanje uključivanja/isključivanja systemske zaštite. Ako je podešeno na Off, zaštita u sistemu neće biti aktivna; ako je podešeno na On, zaštita će biti aktivna (uključujući Broadcast - Options - Lock Channel i Settings - Channel Installation te Settings - Reset Factory Settings i Reinstall TV gde je potrebno uneti kod). Kada je Lock System na Off, sve opcije su skrivene osim Change Code i Clear Code. Kada je Lock System na On, sledeće opcije se prikazuju i dostupne su za izbor. (Lozinka je 1234.)

Clear Code: Clear Code briše postavljeni kod; nakon klika pojavljuje se iskačući prozor „All personal setting will be cleared, do you want to continue?“, pri čemu je fokus podrazumevano na dugmetu Cancel. Klikom na dugme OK, brišu se svi kodovi u sistemu, prikazuje se poruka „Code is cleared.“, stanje opcije Lock System se postavlja na Off, a stavke u Child Code se resetuju.

Software Update

Nadogradnja sistema podržava mrežno i lokalno ažuriranje. Mrežno ažuriranje zahteva mrežnu vezu. USB ažuriranje zahteva ispravan paket za nadogradnju.

Local upgrade

Postavite OTA instalacioni paket (tipa zip kompresovana datoteka, ne koristiti image datoteku) pod nazivom update.zip u koreni direktorijum USB fleš memorije, ubacite USB u uređaj, kliknite na „Local Upgrade“; kada uređaj detektuje fajl za nadogradnju, pojavljuje se prozor sa slikom ispod — pritisnite “OK“ da restartujete uređaj i započnete proces nadogradnje.

FOX LED TV

5. Televizija uživo

 
Broadcast

Channel List

Kliknite OK na vrhu i pojaviće se iskačući prozor koji omogućava prebacivanje svih Channel Lists unutar trenutnog Tuner-a, uključujući i OP List.

Središnji deo prikazuje informacije o Favorite List, informacije o kodiranju (scrambling), Channel Logo (može se prikazati samo podrazumevana slika), informaciju o tome da li je kanal zaključan, tip kanala, broj kanala i ime kanala.

Options

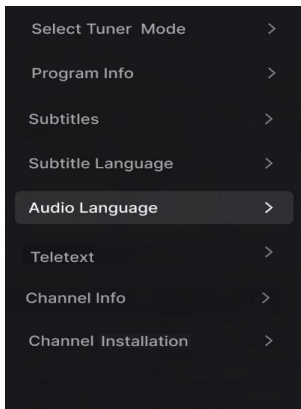

Select Tuner Mode: Izaberite Tuner.

Program Info: Otvori Info informacije o trenutnom programu i sledećem programu.

SUBTITLE: Uđite u podešavanje Subtitle.

Subtitle Language: Izaberite jezik titlova.

Audio Language: Izaberite jezik DTV zvuka.

Teletext: Uđite na stranicu Teletext.

Channel Info: Otvori informacije o kanalu.

Number Key Zapping & Searching Channels

Prebacite se na odgovarajući kanal pomoću numeričkih tastera na RC-u; ako kanal ne postoji, izvrši se pretraga po broju kanala — prvo se pretražuje DTV, zatim ATV.

CI Plus (Optional)

Dekodira kodirani program u TCS.

Instalira OP List sa CAM kartice (ako CAM kartica podržava OP List).

Ograničava pristup programima iz OP List-a prema starosnom ograničenju (ako CAM kartica podržava age lock).

PVR & Timeshift

Pokreće se putem Global Menu – Watch TV.

PVR: Snimanje trenutno emitovanog programa.

Timeshift: Pauziranje trenutnog programa i reprodukcija kasnije.

FOX LED TV

6. Tehnička specifikacija

Model proizvoda	32WHA471E	
Veličina ekrana	32" dijagonala	
Proporcija širine i visine	16:9	
Napajanje	AC 100-240V~,50/60Hz	
Potrošnja struje	60W	
TV sistem	PAL B/G D/K I,SECAM B/G D/K DVB-T/T2/C/S/S2(s/s2 option) (There is no DVB-C signal in some Countries or Areas.)	
Audio izlazna snaga (interna)	8Wx2	
Ulazni terminal	Antenski ulaz	x 2 (S2 option)
	USB ulazni	x 2
	HDMI ulazni	X 3
	VGA ulazni	NE
	PC AUDIO ulazni	NE
	Audio ulazni (L/R)	x 1 (MINI)
	Video ulazni	x 1 (MINI)
	YPbPr ulazni	NE
	RJ45 ulazni	x 1
	Ulazni CI kartice	x 1
	SCART ulazni/izlazni	NE
	DC ulazni (12V)	NE
Izlazni terminal	Slušalica	x 1
	Audio linijski izlazni (L/R)	NE
	Video izlazni	NE
	Optički	NE
	Koaksijalni izlazni	x 1
Radna temperatura	0°C~40°C	
Radna vlažnost	20% ~ 80% Bez kondenzacije	

Beleška: Gore navedene karakteristike su podložne promeni bez upozorenja u cilju poboljšanja kvaliteta.



Proizvedeno po licenci kompanije Dolby Laboratories. Dolby, Dolby Audio i dvostruki D simbol su zaštitni znaci kompanije Dolby Laboratories Licensing Corporation.

FOX LED TV

7. Podržani režimi HDMI rada.

Rezolucija	Horizontalna frekvencija (Khz)	Vertikalna frekvencija (Hz)
480p	31.468	59.94
576p	31.25	50.00
720P	45.00	60.00
1080i	33.75	60.00
1080P(1920x1080)	67.50	60.00

- *Poruka upozorenja će se pojaviti na ekranu ako je signal koji ekran prima izvan dozvoljenog opsega.*

-Na ekranu možete proveriti format ulaznog signala.



Izrazi HDMI, HDMI High-Definition Multimedia Interface, HDMI prepoznatljiv vizuelni identitet HDMI logotipi su žigovi ili registrovani žigovi kompanije HDMI Licensing Administrator, Inc.

8. Jednostavno otklanjanje poteškoća

Ako uređaj ne radi ili se njegove performanse drastično promene, proverite uređaj u skladu sa smernicama u nastavku. Ne zaboravite da pregledate periferne uređaje kako biste identifikovali koren problema.

Problem	Rešenje
Napajanje se ne može aktivirati. (Indikator napajanja ne svetli.)	-Potvrdite da su oba kraja kabla za napajanje pravilno uključena u utičnicu i da li je zidna utičnica funkcionalna.
Prikazuje se poruka Nema ulaznog signala.	- Proverite da li je signalna linija ispravno povezana. -Potvrdite da su relevantni periferni uređaji uključeni. -Uverite se da izabrani ulaza signala odgovara ulaznom signalu.
Daljinski upravljač ne radi ispravno.	-Proverite da baterije nisu istrošene. (Koristite nove baterije.) -Potvrdite da daljinski upravljač radi u svom dometu. - Uverite se da je daljinski upravljač usmeren ka senzoru daljinskog upravljača ekrana. - Uverite se da nema prepreka između daljinskog upravljača i njegovog senzora.
Na ekranu se nalaze trepćuće tačke ili pruge.	- Uverite se da nema emisija (auto, VN žice ili neonske sijalice) ili drugih potencijalnih izvora smetnji.
Boja ili kvalitet slike se pogoršavaju.	- Proverite da li su sva video podešavanja, kao što su osvetljenost, kontrast i boja, pravilno podešena. -Za dodatne informacije o video podešavanjima, pogledajte OSD funkcije poglavlja 2.
Položaj i veličina ekrana su netačni.	-Potvrdite da su pozicija i veličina ekrana na odgovarajući način podešene.
Slika ili boja su netačne.	- Proverite da li je signalna linija ispravno povezana. -Kada ste povezani sa računarom, možete da promenite rezoluciju računara da biste dobili odgovarajuću sliku. Disparitet u izlaznom signalu računara može uticati na prikaz slike.
Prikazivanja poruka upozorenja.	- Proverite da li je ulazna linija signala na odgovarajući način obezbeđena. -Izaberite odgovarajući ulazni signal. -Pogledajte Podržani režimi signala u poglavlju 4 za dodatne informacije.



USER MANUAL

LED Television Model: 32WHA471E

Thank you for purchasing this device.

FOX LED televisions are known for their great performance, as for modern, functional and elegant design. Besides that, we constantly improve our customer support, we have highly efficient and wide network of services, that make our proud customers feel safe.

You made a right choice.



Now it's time for instructions, they are not complicated, but you have to follow them.

EN

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<h3>CAUTION</h3> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



Safe installation

 
Use the belt fixing the television to facilitate restraining the television from toping forward.



1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.




5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects did not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.
 No naked flame sources, such as lighted candles, should be placed on the apparatus.
 The apparatus shall be connected to mains socket outlet with a protective earthing connection.
 The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.



Warning

 High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



Warning

 Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

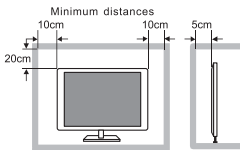

Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

 
Heat built up can reduce the service life of your television, and can also be dangerous.



Caution

Never stand on, lean on, push suddenly the product or its stand.

You should pay special attention to children.

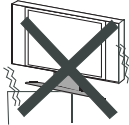

Caution

 
Do not place the main unit on an unstable cart stand, shelf or table.

Serious injury to an individual, and damage to the television, may result should it fall.



Caution

When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

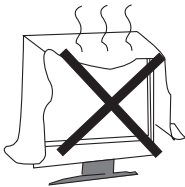

Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



 
Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force.



Individuals should execute caution when dealing with broken glass should the panel break.





- Place the TV on a firm and flat surface, leaving a space of at least 10cm around the set and 30cm from the top of the set to the wall or cabinet. Ensure the TV is positioned close to the wall to avoid it falling when pushed.

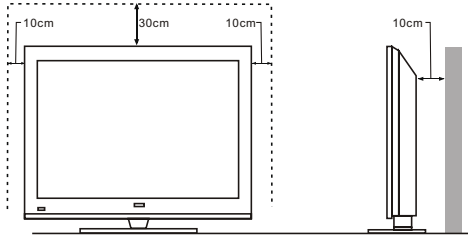

  - When you turning the TV set, do not hold the top side of the TV set, you should hold the bottom side.

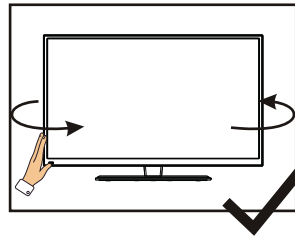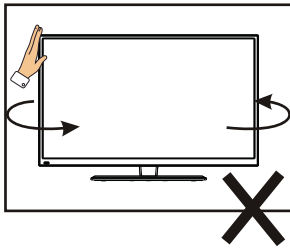

  - When you lifting the TV set, do not use one hand to handle it, you should lift the TV set by two hands.

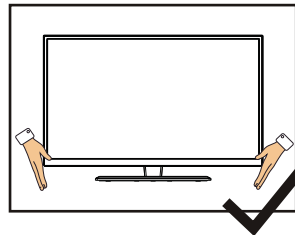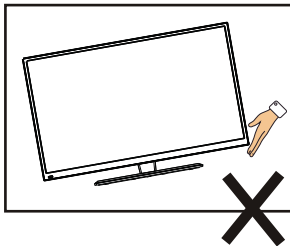

CONTENTS

1. Connection and Preparation of TV.....	2
1.1 Accessories	2
1.2 Installation of Stand.....	2
1.3 Keys and Interfaces.....	3
1.4 Remote Control.....	4
1.5 Installation of Batteries.....	5
2. Basic Operation.....	5
2.1 Power ON/Off(optional).....	5
2.2 Setting of Standby Mode	5
3. Launcher	6
4. Input source and Settings.....	7
5. Live TV	10
6. Technical Specification	11
7. Supported Signal Modes.....	12
8. Simple Troubleshooting	13

 
1.Connection and Preparation of TV

1.1 Accessories

- * User Manual
- * Remote Control
- * Battery(UM-4/R03P/AAA)
- * Wall Mount Kit (Pre-assembled)(Optional)

1.2 Installation of Stand





(For the physical structure, please refer to the real object)

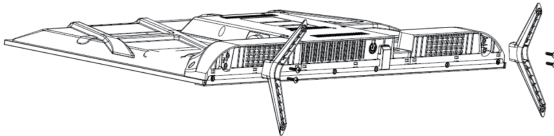


- ① Place the TV with the front panel facing downwards on the soft cloth or soft pads on a desk.
- ② Insert the stand into the bottom socket of the TV.
- ③ Insert the screws into the sockets and tighten them.

1.3 Keys and Interfaces

    The design and specification takes actual products as the standard

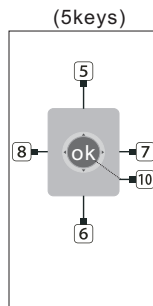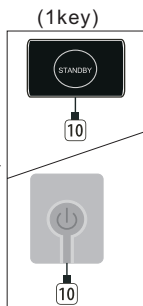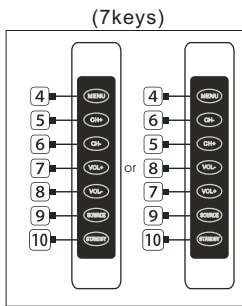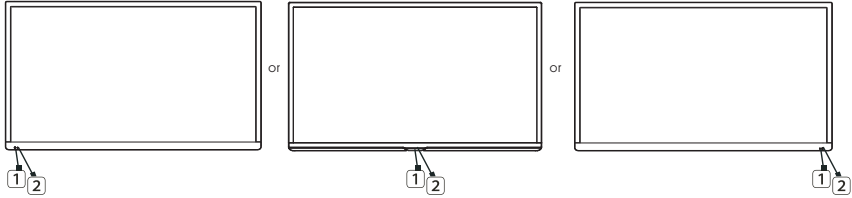

 
- 1. REMOTE SENSOR WINDOW
- 2. POWER INDICATOR
- 3. SPEAKER
- 4. MENU KEY
- 5. PROGRAM “+” KEY
- 6. PROGRAM “-” KEY
- 7. VOLUME “+” KEY
- 8. VOLUME “-” KEY
- 9. SOURCE KEY
- 10. STANDBYKEY
- 11. POWERPLUG INPUT

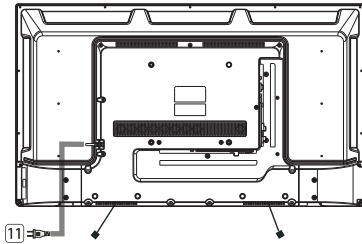

RJ45	RF IN (S2) 13V/18V=500mA	RF IN (T2)	MINI AV IN	COAXIAL	USB2 USB1 5V=500mA	HDMI1 (ARC)	HDMI2	CI HDMI3	EARPHONE
------	-----------------------------	------------	------------	---------	--------------------------	-------------	-------	-------------	----------

1.4 Remote Control


 
(Here is only the sketch, please in kind prevail)

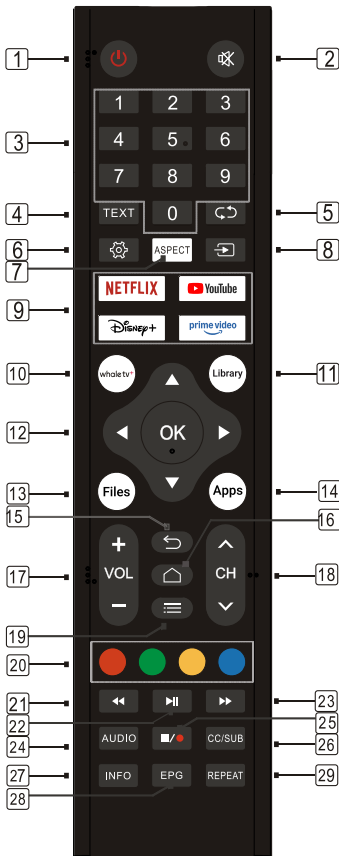

1. STANDBY(⏻) : Standby turn on and off.
2. Mute: Mute sound.
3. 0~9 : Continue to press the keys to select.
4. TEXT: Enter or exit teletext.
5. RECALL: Return to previous channel.
6. Settings: Enter the settings menu.
7. ASPECT: Change pictures proportion.
8. SOURCE: Choose input source.
9. 10. 11. 13. 14. Content area: Eight buttons for CPS APPS.
12. Direction/OK: Move up, down, left, right/Confirm.
15. Exit: Exit current interface or menu.
16. Home: Enter home page.
17. Volume: Volume up/down.
18. Channel: Change channel.
19. MENU: Display current program details.
20. 4 Color: Customized in different page.
21. ⏮: Fast Backward.
22. ⏸ Press one time to pause, press again to playback.
23. ⏭ Fast Forward.
24. AUDIO: Select TV audiomode.
25. ■: Stop the playback and return to file list.
- RECORD: DTV mode record data USB disk.
26. CC: Press this button to adjust CC mode.
- SUBTITLE: In the USB playback movies, open or closed subtitle Function. (In USB and TV mode)
27. INFO: Displays the present channel information such as the current time and channel name.
28. EPG: Enter or exit EPG. (Electronic Program Guide)
29. REPEAT: Allows you to repeat single random, shuffle and folder.

1.5 Installation of Batteries

  (Here is only the sketch, please in kind prevail)



- ① Open the back lid of the remote control.
- ② Install two 7#(AAA)1.5V batteries.
Ensure the correct polarity of the batteries.
- ③ Cover the back lid.
Please take out of the batteries from the remote control for long time of no use.

If the remote control doesn't work properly, please carry out the following checks.

- Check the TV is turned on.
- Check the polarity of the batteries are correct.
- Check the batteries are not drained.
- Check the power supply is normal or the power cord is correctly connected.
- Check there are no special fluorescent light or neon light around.



2. Basic Operation

2.1 Power ON/OFF(Optional)

- Connect the power cord to the **AC input**. Insert the power cord into the appropriate socket.
- Press the **Power switch** to switch on the TV, then press **Power** button to turn on the unit.
- Press the **Power switch** again to switch off the TV.

Note: After switch off the TV, please don't immediately re-open the power switch ,should be delayed one minute more to re-open the power switch.

2.2 Setting of Standby Mode

- Press () button to turn on the unit.
- Press () button again to return the display to standby mode. The power indicator turns red.
- Be sure not to set your TV in standby mode for a long period of time.

 
2.3 Selection of Input Mode

This set has different signal source modes, you may continue to press the **Source** button to select a signal source.

3. Launcher

Upon entering the homepage, you can left-click to access the navigation menu.

1. Home: The main page featuring frequently used apps, personalized recommendations, and more content recommended.
2. Free TV: Includes free channels, VOD (Video on Demand), and more.
3. Discovery: Allows users to browse or search for movies, TV shows, videos and more.
4. Apps: Includes App Updates, My Apps, App Categories, and App recommended and AppSearch.
5. Quick Settings: Click to open the Global Menu (refer to the Global Menu description for details).
6. Search: Enter keywords to find the content you want.
7. User Center: Personal account and settings.

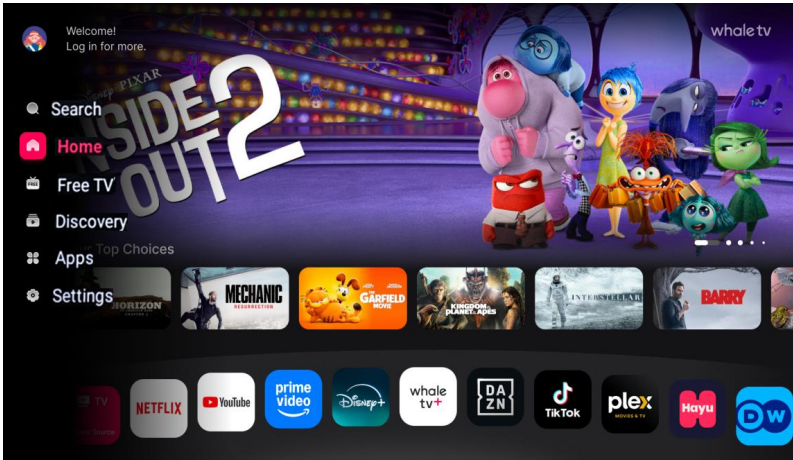

Home

The Home first screen consists of the following sections:

1. Banner: Banners support auto-rotate but can also be manually switched when focused.
2. App Row: Displays pre-installed apps, backend-recommended apps, and user-downloaded apps.
3. App Recommendation.
4. Recent Source: Shows the last-used source—clicking it switches back to the user’s previous source.

Free TV

Free TV includes not only FAST content but also AVOD—all available for free.

The Free TV page consists of the following sections:

1. Banner: Auto-rotating banners that can also be manually switched when focused.
2. Live Now: Includes Program Guide and recommended live content.
3. Recommended Channels & Movies: Displays recommended live channels and VOD content.
4. Free TV Apps: Dedicated apps related to Free TV.

Discovery

Discovery displays all content data in WhaleTV, including those with playback sources and those without (but with a lot of content introductions). It aims to create a database of film, television and audio content, so that users can explore and find the content they like.

 
Apps

Apps (the app store) provides a wide selection of applications for users to discover and download.

Note: Apps link and input source are subject to detail order, above photo just for your reference.

Files


The file Manager is used to search all files in local store and USB.

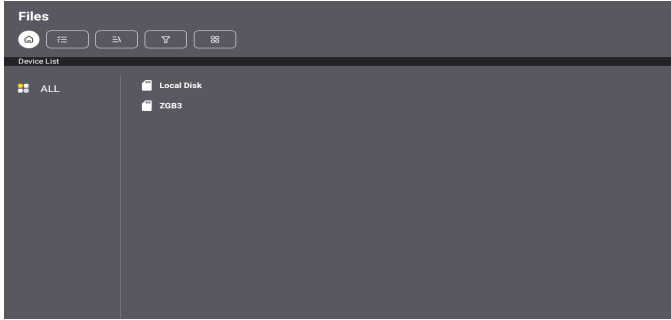

Besides, you can perform file operations by menu key, the file operations include delete, copy, paste, rename.

4. Input Source and Settings

 On the home screen, clicking on "Settings" or "Source" will bring up the Global Menu, providing access to selections for "Settings," "Source," and "Watch TV."

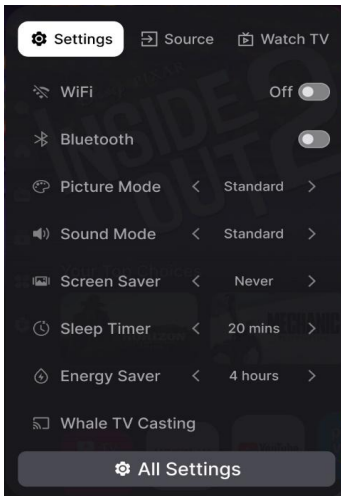

The Global Menu is divided into 3 tabs: Source, Settings, and Watch TV (exclusive to TV products)

1.1 Settings Quick settings: WiFi, Bluetooth, Picture Mode, Sound Mode, Screen Saver, Sleep Timer, Energy Saver, Whale TV Casting.

All Settings: All Settings of System.

 
1.2 Source All other sources except TV Source.

1.3 Watch TV TV Source: Antenna, Cable, Satellite

Common TV functions: TV Guide, PVR, Timeshift, Recordings.

Press ▲/▼/◀/▶ button to select, Press **OK** button to enter.

All Settings

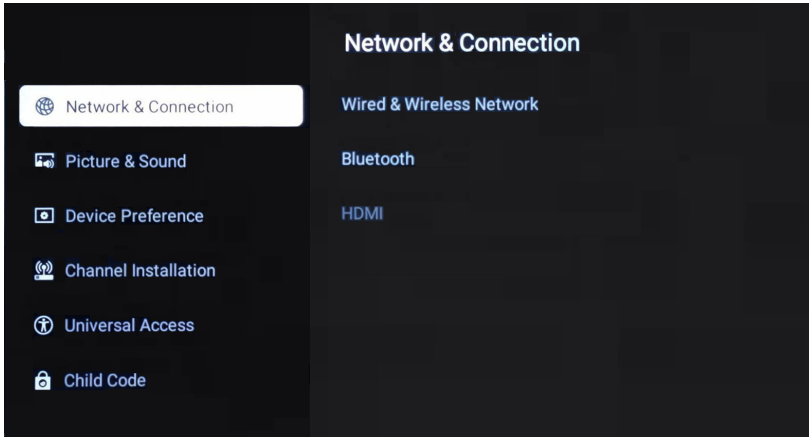

Network & Connection

Network settings

Network settings include Wi-Fi switch, network connection, network status, and network reset.

Wireless network

Turn on Wi-Fi and select the WiFi you want to connect to.

Add New Network

A network with hidden SSID can be connected by clicking "Add new network" on the page and manually entering the Wi-Fi name and password.

Wired connection

After inserting the network cable, the TV will automatically connect to the wired network. If the IP address is successfully obtained, the page View network info will display the wired connection information.

Device Preference

Language

Select the required language up and down, and click "OK" to switch the system language.

Date and time

Users can set the time and timing system according to their needs.

Program Audio & Subtitles

Set language preferences for Audio Language and Subtitle Language.

Reset TV

Click "Reset TV" on the page to enter the factory reset page. Users can perform factory reset operations according to the prompts.

About

Display device related information, including device information, legal information, etc.

Hotel Mode

Device Preferences -> About -> Device info, Press the number keys: 0614 to enter the hotel menu.

Channel Installation

Country: Set the system country.

Antenna or Cable or Satellite Installation: Install the corresponding Tuner channel.

CAM Operator Profile: Switch the Operator Profile. If you select Off, only OP-related functions are disabled, and if you want to completely delete the OP list, you need to reinstall TV.

CAM Profile Name: A pop-up window displays the Profile Name. If there is no profile name, a pop-up window will say "No profile name available. There is no CAM installed or the installed CAM does not have a profile name."

Copy Programmes: Import and export channel lists through USB flash drive.

Universal Access

Accessibility Settings.

Child Code

Lock System: The Lock System option can set the switch state of the system lock. If you set Off, the lock in the system will not take effect, and if you set it to On, the lock in the system will take effect (including Broadcast - Options - Lock Channel and Settings - Channel Installation and Settings - Reset Factory Settings and Reinstall TV where Code needs to be entered). The system lock is Off, and all options are hidden except Change Code and Clear Code. If the system lock is On, the following options are displayed and optional. (Password is 1234.)

Clear Code: Clear Code can clear the code that has been set, and a pop-up window "All personal setting will be cleared, do you want to continue?" pops up after clicking, and the focus is on the Cancel button by default. Click the OK button, all the codes in the system are cleared, the toast prompts "Code is cleared.", the status of the Lock System item is set to Off, and the items in the Child Code are reset.

Software Update

System upgrade supports network and local upgrade. Network upgrade requires network connection. USB upgrade requires the correct upgrade package.

Local upgrade

Put the OTA installation package (type is zip compressed file, do not mistakenly use the image file) named "update.zip", put it in the root directory of the USB flash drive, and insert the USB flash drive into the USB port of the device, click "Local Upgrade", when the device detects the upgrade file, the prompt box in the figure below will pop up, press the "OK" button to restart and enter the upgrade state.

5.Live TV

 
Broadcast

Channel List

Click OK at the top, and a pop-up window will pop up to switch all Channel Lists under the current Tuner, including OP List.

The middle part contains Favorite List information, scrambling information, Channel Logo (only the default image can be displayed), whether the channel is locked, channel type information, channel number, and channel name.

Options

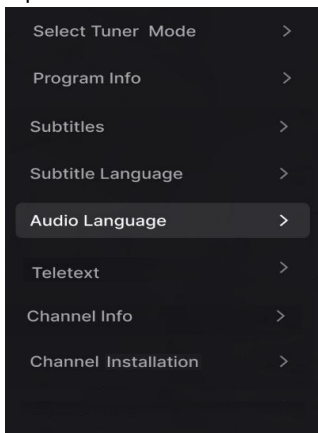

Select Tuner Mode: Select Tuner.

Program Info: Open the Info information of the current program and the next program.

Subtitle: Enter the Subtitle setting.

Subtitle Language: Select the Subtitle language.

Audio Language: Select the DTV sound language.

Teletext: Enter the Teletext page.

Channel Info: Open the channel information .

Number Key Zapping & Searching Channels

Switch to the corresponding channel through the RC number key, if there is no channel, search for the channel number, search for DTV first, and then search for ATV.

CI Plus(Optional)

Descramble the scrambling program in T C S.

Install the OP List of the CAM card (if the CAM card supports OP List).

Age Limit OP List Programs (if CAM card supports age lock)

PVR & Timeshift

Triggered via Global Menu – Watch TV

PVR: Record the currently playing program.

Timeshift: pause the current program and play it later.

6. Technical Specification

Product Model	32WHA471E	
Screen Size	32" diagonal	
Aspect Ratio	16:9	
Power Supply	AC 100-240V~,50/60Hz	
Power Consumption	60W	
TV System	PAL B/G D/K I,SECAM B/G D/K DVB-T/T2/C/S/S2(s/s2 option) (There is no DVB-C signal in some Countries or Areas.)	
Audio Output Power (Internal)	8Wx2	
Input Terminal	Antenna Input	x 2 (S2 option)
	USB Input	x 2
	HDMI Input	x 3
	VGA Input	NO
	PC AUDIO Input	NO
	Audio Input (L/R)	x 1 (MINI)
	Video Input	x 1 (MINI)
	YPbPr Input	NO
	RJ45 Input	x 1
	CI card In	x 1
	SCART In/Output	NO
	DC In (12V)	NO
CARD SLOT	NO	
Output Terminal	Earphone	x 1
	Audio Line Out(L/R)	NO
	Video Output	NO
	Optical	NO
	Coaxial out	x 1
Working Temperature	0°C~40°C	
Working Humidity	20% ~ 80% Non-condensing	

Note:the specification shown above may change without notice for quality improvement.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

7. Supported Signal Modes

A.HDMI Mode

Resolution	Horizontal Frequency (Khz)	Vertical Frequency (Hz)
480p	31.468	59.94
576p	31.25	50.00
720p	45.00	60.00
1080i	33.75	60.00
1080p(1920x1080)	67.50	60.00

-When the signal received by the Display exceeds the allowed range, a warning message will appear on the screen.

-You can confirm the input signal format onscreen.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

8. Simple Troubleshooting

If the display fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

Symptom	Solution
Power cannot be turned on.(Power indicator does not light.)	-Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational
No Input Signal message appears.	-Check that the signal line is connected properly. -Check that the power of the relevant peripherals is turned on. -Check that the Input option that has been selected matches with the input signal.
The remote control does not function properly.	-Check the batteries are not drained.(Use new batteries.) -Check that the remote control is within the operating range. -Check that the remote control is pointed to the remote control window on the display. -Check that there are no obstacles between the remote control and the remote control window.
Flashing spots or stripes appear on the screen.	-Check that there are no emission (Car, HV cable or Neon lamp) or other possible interference sources.
Image colour or quality deteriorates.	-Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc. -For more information about video settings, refer to OSD Functions in Chapter 2.
Screen position and size are incorrect.	-Check that the screen position and size is adjusted appropriately.
Image or colour is incorrect.	-Check that the signal line is connected properly. -When connecting to a PC, you can change the resolution of the PC to acquire the correct image. The discrepancy of the PC output signal may affect the display of the image.
Display warning message.	-Check that the input signal line is properly fixed. -Select the correct input signal. -For more information, refer to Supported Signal Modes in Chapter 4.

PROIZVOĐAČ: JinPin Electrical Company Ltd, Zhuhai S.E.Z.
No. Building 4, No. 55, Jinchuan Road, Hongqi Town, Jinwan District,
Zhuhai City, Guangdong Province, China
UVOZNIK ZA SRBIJU: VIMPORT DOO BEOGRAD,
BATAJNIČKI DRUM 9 DEO 10A, 11080 BEOGRAD-ZEMUN, SRBIJA
UVOZNIK ZA KOSOVO*: P.C. COMP SH.P.K.
ALI VITIA NR.225,10000 PRISTINA
UVOZNIK ZA BIH: FIS DOO,
POSLOVNI CENTAR 96, 72250, VITEZ, BIH
UVOZNIK ZA CRNU GORU: FOX MI DOO,
BRANKA DELETIĆA BB UL. E ST. 26,
81000 PODGORICA, CRNA GORA
UVOZNIK ZA SEVERNU MAKEDONIJU: RIMEKO DOO
PEPO HAKOV 116, 1000 SKOPJE,
SEBERNA MAKEDONIJA
UVOZNIK ZA ALBANIJU: GLOBE SHOPS SHPK,
RRUGA E KAVAJES,
PALLATI GLOBE, NDERTESA 124, HYRJA 10, 1023,
TIRANA, ALBANIJA

WWW.FOXELECTRONICS.RS

 by smiat	LED TV UREĐAJ MODEL: 32WH4471E
NAPAJANJE: 100-240V – 50/60Hz SNAGA POTROŠNJE: 60W	
UPOZORENJE: KAKO BISTE SPREČILI POŽAR I LI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREĐAJ KISI I LI VLAZI. NE POSTAVLJAJTE PREDMETE ISPLJUNJE TEČNOŠĆU NA I OKO UREĐAJA. KABL ZA NAPAJANJE ISKLJUČITE IZ UTIČNICE ANO UREĐAJ NE KORISTITE DUGI VREMENSKI PERIOD. OVAJ UREĐAJ PRI RADU KORISTI VISOKI NAPON. NE UKLANJAJTE ZADNJI POKLOPAČ. OBRATITE SE KVALIFIKOVANOJ SERVISNOJ SLUŽBI ZA OBAVLJANJE SERVISIA.	   
Proizvođač: JinPin Electrical Company Ltd, No. 55, Jinchuan Road, Hongqi Town, Jinwan District, Zhuhai City, Guangdong Province, China.	UVOZNIK ZA SRBIJU: VIMPORT DOO BEOGRAD, BATAJNIČKI DRUM 9 DEO 10A, 11080 BEOGRAD-ZEMUN, SRBIJA SERVISKI BROJ: <input type="text"/>

Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu: