



HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model:32ATV141D

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR

Informacije o proizvodu (lista sa podacima)

Informacije	Vrednost	Jedinica
1. Ime ili zaštitni znak isporučioća	VIMPORT DOO BEOGRAD	
Adresa isporučioća	Batajnički drum 9 deo 10a, Beograd(Zemun)	
2. Identifikaciona oznaka modela	32ATV141D	
3. Klasa energetske efikasnosti za SDR mod	E	
4. Snaga u uključenom stanju za standardni dinamički raspon (SDR)	26,0	W
5.Klasa energetske efikasnosti (HDR)		
6. Snaga u uključenom stanju za mod velikog dinamičkog raspona (HDR), ako je primenljivo		W
7. Snaga u isključenom stanju, ako je primenljivo		W
8. Snaga u stanju pripravnosti, ako je primenljivo	0,4	W
9. Snaga u umrežanom stanju pripravnosti, ako je primenljivo		W
10. Kategorija elektronskog ekrana	Televizor	
11. Odnos veličina	16 : 9	
12. Rezolucija ekrana (u pikselima)	1366 x 768	piksela
13. Dijagonala ekrana	32,0	inča
14. Dijagonala ekrana	81,0	cm
15. Vidljivo područje ekrana	27,4	dm²
16. Tehnologija panela koja se koristi	LCD sa LED	
17. Automatska regulacija sjajnosti (ABC) koja je dostupna	Ne	
18. Senzor za prepoznavanje glasa koji je dostupan	Ne	
19. Senzor prisutnosti u prostoriji koji je dostupan	Ne	
20. Učestalost osvežavanja slike (zadata postavka)	60	Hz
21. Minimalna garantovana raspoloživost ažuriranja softvera i integrisanog softvera uređaja, ako je propisana, od datuma završetka stavljanja na tržište do	3	godina
22. Minimalna garantovana raspoloživost rezervnih delova, ako je propisana, od datuma završetka stavljanja na tržišt do	3	godina
23. Minimalno trajanje opšte garancije koju daje isporučilac	3	godina
24. Vrsta napajanja:	Unutrašnje	
25.Spoljašnje napajanje (priloženo uz proizvod, nije standardizovano)		
i.		
ii.	Ulazni napon	V
iii.	Izlazni napon	V
26.Spoljašnje standardizovano napajanje (ako nije priloženo uz proizvod, drugo odgovarajuće napajanje)		
i.	Podržani standadni naziv ili popis	
ii.	Potreban izlazni napon	V
iii.	Potrebna jačina struje (minimalna)	A
iv.	Potrebna frekvencija struje	Hz

Tehničke karakteristike : napajanje 100-240 Vac 50/60Hz
snaga potrošnje : 50 W

Bezbednost

Detaljno pročitajte ova uputstva pre korišćenja TV-a.

Sačuvajte ovo uputstvo, popunjen garantni list kao i kutiju od uređaja. Mere bezbednosti smanjuju rizik od požara, električnog šoka i povreda ako se pročitaju do kraja i pridržavaju upozorenja.

Molimo Vas pratite sva uputstva i upozorenja!



Poklopac (ili zadnji deo) uređaja ne treba skidati da biste sprečili rizik od strujnog udara.

Ovaj uređaj mora servisirati samo kvalifikovano servisno osoblje.



Simbol munje unutar trougla ima za cilj da vas upozori na neizolovani opasni napon u kućištu proizvoda koji može biti dovoljne veličine da stvori rizik od strujnog udara.



Uzvičnik unutar trougla ima za cilj da vas upozori na prisustvo važnih uputstava za rad i održavanje u dokumentima priloženim uz proizvod.

VAŽNE INFORMACIJE!

- Koristite komodu ili postolje koje preporučuje proizvođač televizora.
- Koristite samo nameštaj koji može bezbedno da podrži proizvode.
- Uverite se da proizvod ne visi preko ivice nosećeg nameštaja.
- Ne postavljajte proizvod na visok nameštaj bez pričvršćivanja proizvoda za stabilan oslonac.
- Ne stavljajte tkaninu na proizvod ili druge provodne materijale.
- Upozorite decu na opasnosti penjanja na nameštaj da bi došla do televizora ili njegovih komandi.

OPŠTA BEZBEDNOSNA UPUTSTVA (nastavak)

VAŽNE INFORMACIJE

- Ne izlažite ovaj uređaj kiši ili vlazi jer to može dovesti do požara ili strujnog udara
- Nemojte menjati ili modifikovati proizvod na bilo koji način.
- Koristite samo dodatnu opremu koju je naveo i preporučio proizvođač.
- Ne izlažite proizvod prskanju ili kontaktu sa vodom
- Nemojte stavljati nikakve predmete na proizvod, uključujući predmete napunjene tečnošću, kao što su vaze.
- Opasnost od eksplozije ako je baterija pogrešno postavljena. Zamenite je istom ili ekvivalentnom vrstom.

Instalacija

Molimo Vas da pratite uputstva kada instalirate ovaj proizvod u skladu sa uputstvom za upotrebu. Ovaj proizvod mora biti postavljen na dovoljno stabilnoj lokaciji, može biti potencijalno opasan zbog pada i može izazvati povrede, posebno kod dece ako se nepravilno postavi.

- Pre instaliranja ovog televizora, uverite se da napon na Vašoj utičnici odgovara naponu navedenom na nalepnici sa ocenom proizvoda
- Nemojte koristiti oštećeni kabl za napajanje, utikač ili labavu utičnicu. To može izazvati strujni udar.
- Nemojte uključivati nekoliko uređaja u istu utičnicu. To može dovesti do pregrevanja utičnice i izazivanja požara. Uverite se da je utičnica lako dostupna tokom rada opreme.
- Nemojte preterano uvtati kabl za napajanje.
- Ne dozvolite da se bilo šta naslanja na kabl za napajanje ili antenski kabl ili da prelazi preko njega. To može izazvati požar ili strujni udar.
- Ne provlačite kabl za napajanje u blizini uređaja koji proizvode toplotu, kao što su radijatori, peći ili pegle. Prekomerna toplota može da istopi izolaciju i izloži žice pod naponom, što može dovesti do požara ili strujnog udara.
- Isključite ovaj televizor iz struje tokom oluja sa grmljavinom ili kada ga ne koristite duže vreme. Ako to ne uradite, to može dovesti do požara ili strujnog udara.
- Nemojte prekrivati ventilacione otvore proizvoda predmetima kao što su novine, stolnjaci, zavese itd. niti umetati predmete u otvore na proizvodima jer to može dovesti do porasta temperature proizvoda i može izazvati požar.
- Ako primetite neobične mirise ili dim oko uređaja, odmah isključite uređaj iz utičnice i kontaktirajte servisni centar. Ako to ne uradite, može doći do požara ili strujnog udara.
- Kada ne koristite jedinicu duži vremenski period ili kada je pomerate, obavezno izvucite kabl za napajanje iz zidne utičnice.

OPŠTA BEZBEDNOSNA UPUTSTVA (nastavak)

- Imajte na umu da se prašina može akumulirati tokom vremena na uređaju i uzrokovati njegovo pregrevanje i/ili pogoršanje izolacije, što zauzvrat može dovesti do električnog požara.
- Proizvod nije namenjen za upotrebu od strane osoba (uključujući decu) sa smanjenim fizičkim, senzornim ili mentalnim sposobnostima. Proizvod mora biti pod nadzorom osobe odgovorne za njihovu bezbednost.
- Baterije iz daljinskog upravljača sme da izvadi samo odrasla osoba, odrasla osoba mora da obezbedi da ih drži van domašaja beba i dece. Odmah potražite medicinsku pomoć ako je dete progutalo bateriju.
- Baterije (paketi baterija ili instalirane baterije) ne smeju biti izložene preteranoj toploti kao što je sunce, vatra ili slično.
- Da biste održavali proizvod, ne koristite nikakve hemikalije ili sredstva za čišćenje ili mokru krpu. Molimo Vas da koristite samo suhu krpu da biste obrisali uređaj od prašine, i to tek nakon što isključite proizvod iz električne utičnice.
- Obavezno kontaktirajte naš pozivni centar za bilo kakvu popravku ili uslugu koja je potrebna za proizvode.

UPOZORENJE!

STROGO PREPORUČUJEMO da ovaj proizvod POSTAVITE STABILNO.

Rušenje nameštaja i televizora može izazvati ozbiljne povrede ili smrt.

KAKO BI SE IZBEGLJE BILO KAKVE OZBILJNE ILI SMRTONOSNE POVREDE, PREPORUČUJEMO DA OVAJ PROIZVOD BUDE TRAJNO FIKSIRAN NA ZID ILI NA DRUGU ODGOVARAJUĆU POVRŠINU. UREĐAJI ZA FIKSIRANJE NISU UKLJUČENI UZ PROIZVOD POŠTO RAZLIČITI POVRŠINSKI MATERIJALI ZAHTEVAJU RAZLIČITE TIPOVE PRIKLJUČAKA. MOLIMO VAS ZATRAŽITE STRUČNI SAVET AKO STE U SUMNJI KOJI UREĐAJ ZA FIKSIRANJE DA KORISTITE.

Ako televizor nije postavljen na dovoljno stabilnu lokaciju, može biti potencijalno opasan zbog pada. Mnoge povrede, posebno kod dece, mogu se izbeći preduzimanjem jednostavnih mera predostrožnosti kao što su:

- Korišćenje ormara ili postolja koje preporučuje proizvođač televizora.
- Koristite samo nameštaj koji može bezbedno da izdrži televizor.
- Uverite se da televizor ne visi preko ivice nosećeg nameštaja.
- Edukacija dece o opasnostima penjanja na nameštaj kako ne bi došla do televizora ili njegovih kontrola.

OPŠTA BEZBEDNOSNA UPUTSTVA (nastavak)

Uverite se prilikom pozicioniranja ovog proizvoda, da je mesto:

- Suvo i dobro provetreno
- Dalje od direktne sunčeve svetlosti ili grejača.
- Dalje od prskanja tečnost ili hrane.
- Zaštićeno od prekomerne prašine ili masnoće.
- **Ne postavljajte ovaj proizvod u skućeni prostor kao što je polica za knjige ili slična jedinica.**
- **Ne postavljajte televizor u blizini izvora toplote kao što su radijatori, peći ili drugi audio uređaj i vizuelna oprema koja proizvodi toplotu.**
- Ne stavljajte posude sa tečnostima, ako tečnost upadne u proizvod, to može dovesti do kratkog spoja, požara ili strujnog udara.
- Ne stavljajte male metalne predmete unutar uređaja, to može dovesti do kratkog spoja, požara ili strujnog udara.
- Nemojte koristiti ili skladištiti zapaljive materijale u blizini uređaja. To može dovesti do požara ili eksplozije. Ne stavljajte izvore otvorenog plamena, kao što su upaljene sveće, cigarete ili mirisni štapići na televizor.
- Antena mora biti postavljena dalje od visokonaponskog dalekovoda,
- Obratite se profesionalnom instalateru antene da instalira antenu kako biste izbegli pogrešnu instalaciju koja može dovesti do požara, strujnog udara ili ozbiljnih povreda.
- Instalirajte uređaj na razumnoj udaljenosti od zida kako biste obezbedili dovoljnu ventilaciju.
- Ako se utikač za napajanje koristi kao uređaj za isključivanje, treba da bude u ispravnom stanju.



Termini HDMI i HDMI High-Definition Multimedia Interface, komercijalni izgled HDMI i logotipi HDMI su zaštitni znaci ili registrovani zaštitni znaci u vlasništvu kompanije HDMI Licensing Administrator, Inc.

INSTALACIJA


Instalirajte postolje kao što je opisano u nastavku, ili ako želite da ga montirate na zid, obratite se profesionalnom instalateru.

Uverite se da televizor nije uključen u zidnu utičnicu i pored toga preporučujemo da pozovete drugu osobu koja će Vam pomoći u sledećem zadatku.

Pričvršćivanje postolja

Korak 1

 Na sto stavite mekani obloženi materijal ravne površine kako biste sprečili oštećenje panela ekrana. Zatim postavite TV ekran na obloženi materijal, sa stranom ekrana okrenutom nadole, kao što je prikazano na desnoj strani.

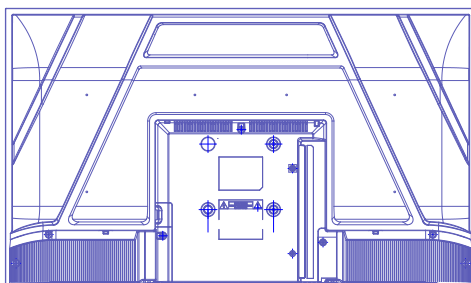

Korak 2

Poravnajte nogu postolja sa rupom ugradnje, kao što je prikazano na desnoj strani.



Korak 3

Zategnite šrafove (isporučene) pomoću odvijača da biste pričvrstili postolje na uređaj, kao što je prikazano na desnoj strani.

OPREZI

Nemojte primenivati preteranu silu jer to može oštetiti rupe za šrafove.

 
INSTALACIJA (nastavak)

Uputstva za montažu na zid

Uverite se da televizor nije uključen u zidnu utičnicu i pored toga preporučujemo da pozovete drugu osobu koja će Vam pomoći u sledećem zadatku.



- Preporučujemo vam da koristite profesionalnog instalatera jer ne preuzimamo odgovornost za eventualnu štetu koja može nastati na proizvodu ili povredu ako sami montirate televizor.

POZADINA TV-A
32 inča VESA standard: 100 x 100 mm

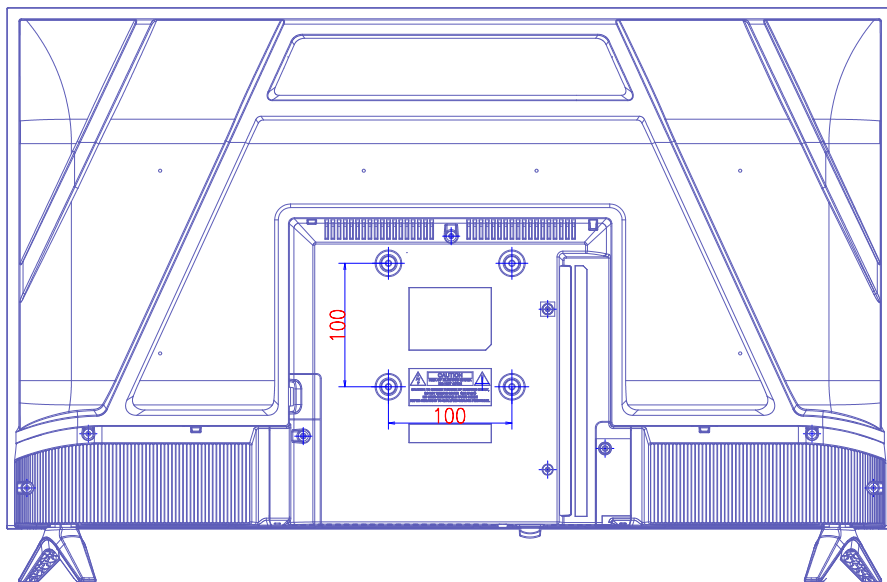

NAPOMENA: Ako televizor montirate na zid, to bi trebalo da uradi kvalifikovani instalater.

  KONTROLE I KONEKCIJE

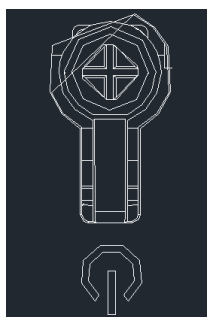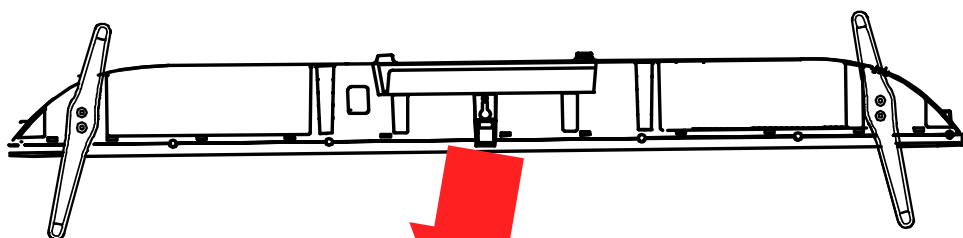

KONTROLE I KONEKCIJE



1. RF **ULAZ** (ANTENNA)
2. COAX **IZLAZ**
3. HDMI 1
4. HDMI 2
5. HDMI 3
6. CVBS/ AUDIO LEVO & DESNO
7. **IZLAZ ZA SLUŠALICE**
8. USB **ULAZ** *2

Priključite USB uređaj u USB port za snimanje i reprodukciju video.
zapisa/fotografije/muzike

Daljinski upravljač

Dugmići daljinskog upravljača izgledaju kao što je prikazano:



BELEŠKA:

- Sve slike u ovom priručniku su primeri, samo za referencu, stvarni proizvod se može razlikovati od slika.
- Tasteri koji ovde nisu pomenuti se ne koriste.

Definicija tastera na daljinskom upravljaču

1. **STANDBY:** Udjite ili izadjite iz stanja pripravnosti.
2. **MUTE:** Isključivanje ili uključivanje zvuka.
3. **NUMBER BUTTONS:** Koristite za izbor kanala.
4. **-/- :** Promenite cifre kanala koje želite da unesete.
5. **↺ :** Povratak na poslednji gledani program.
6. **P.MODE:** Pritisnite da biste prešli na raspoloživi režim video slike.
7. **S.MODE:** Pritisnite za kretanje kroz različite postavke zvuka.
8. **MENU:** Pritisnite za prikaz/nestajanje menija na ekranu ili za prekid nekih operacija.
9. **SLEEP:** Podestite za automatsko isključivanje TV.
10. **INPUT:** Izaberite izvor signala.
11. **AUDIO:** Prelazite između: NICAM DUAL /NICAM DUAL /NICAM DUAL+ /MONO I prebacite Audio jezik u DTV režimu.
12. **OK:** Izaberite ili potvrdite MENU.
13. **▲/▼/◀/▶:** Izaberite pravac.
14. **MENI** Pritisni da bi prikazao glavni meni/da bi nestao prikaz menija/da bi završili neke operacije.
15. **EXIT:** Zatvorite trenutni prikaz.
16. **VOL+/VOL-:** Povećajte / smanjite jačinu zvuka.
17. **CH+/CH-:** Dodajte do sledećeg / predhodnog kanala.
18. **ASPECT:** Podesite prikazani odnos strane ekrana.
19. **INFO:** Prikaži informacije o programu.
20. **LIST :** Lista kanala.
21. **COLOR BUTTONS:** Crveno/Zeleno/Žuto/Plavo tasteri za navigaciju.
 - ◀◀: Brzo vraćanje (u MEDIA režimu)
 - ▶▶: Ubzraj(u MEDIA režimu)
 - ◀◀: Predhodna(u MEDIA režimu)
 - ▶▶: Sledeći (u MEDIA režimu)
 - ⏸: Pusti / Pauziraj (u MEDIA režimu)
 - : Zaustavi (u MEDIA režimu)
22. **FAV:** Prikažite omiljeni program.
23. **MIX:** Grafička funkcija
24. **TEXT:** Udjite u Teletext, ponovo pritisnite za MIKS režim, ponovo pritisnite taster da biste izašli
25. **HOLD:** Držite stranicu teleteksta na ekranu, ponovo pritisnite da biste je zatvorili.
26. **INDEX:** Idite na indeks stranicu/unestite snimljenu listu (u PVR režimu).
27. **REVEAL:** Otkrijte skrivene informacije nekih stranica teleteksta.
28. **SIZE:** Promenite veličinu ekrana teleteksta u režimu prikaza.

ULAZNI IZVOR

Pritisnite taster INPUT da biste ušli u izbor ulaznog izvora.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali željeni ulazni izvor.

 
Pritisnite taster OK da biste potvrdili ulazni izvor. Pritisnite taster EXIT da biste izašli.



Rad u glavnom meniju


Meni kanala

Pritisnite taster MENU da uđete u glavni meni. Pritisnite taster **【◀】** / **【▶】** da biste izabrali KANAL..

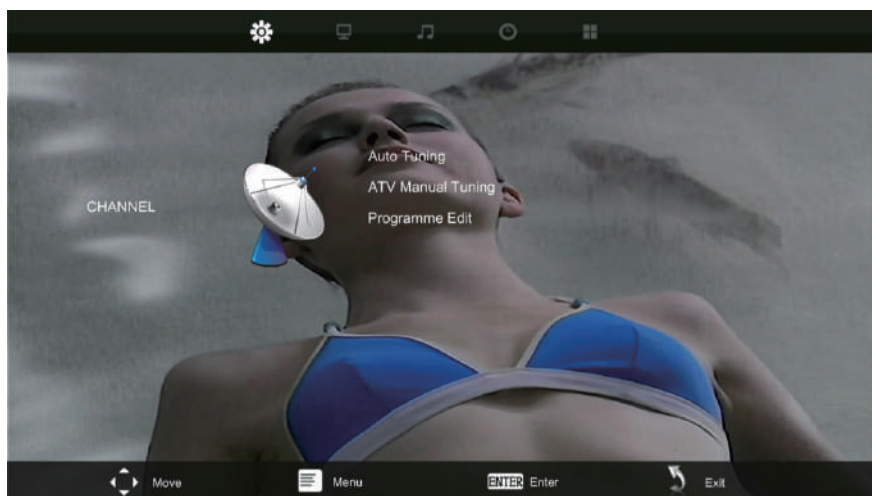


Pritisnite taster **【▼】** / **【▲】** da biste izabrali Tip tjunera, a zatim pritisnite taster **【◀】** / **【▶】** da biste izabrali Antena / Kabl.

 Pritisnite taster **【▼】** / **【▲】** da biste izabrali Automatsko podešavanje, a zatim pritisnite taster OK da biste započeli pretragu kanala.

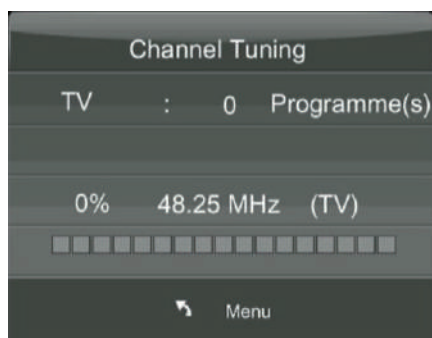

Automatsko podešavanje:
Automatsko podešavanje programa.

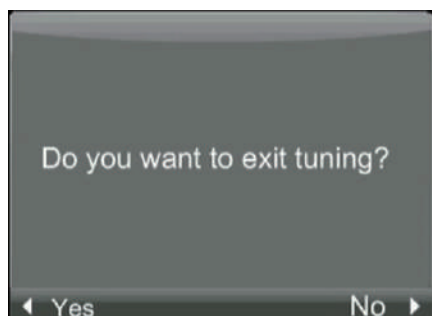

Pritisnite taster EXIT da biste zaustavili pretragu.

Meni slike

Pritisnite taster MENU da uđete u glavni meni.

Pritisnite taster **◀** / **▶** da biste izabrali Slika.



Pritisnite taster **▼** / **▲** da biste izabrali Režim slike, a zatim pritisnite **▶** / OK da biste ušli u podmeni.

Pritisnite taster **▼** / **▲** da biste izabrali Standardni / Dinamički / Umereni / Korisnički.

Pritisnite taster **▼** / **▲** da biste izabrali Kontrast / Svetlinu / Boju / Nijansu / Oštrinu, i pritisnite taster **◀** / **▶** da biste podesili.

Pritisnite taster **▼** / **▲** da biste izabrali Temperaturu boje, a zatim pritisnite **▶** / OK da uđete u podmeni.

Pritisnite taster **▼** / **▲** da biste izabrali Hladno / Srednje / Toplo.

Pritisnite taster **▼** / **▲** da biste izabrali Smanjenje šuma, a zatim pritisnite **▶** / OK da uđete u podmeni.

Pritisnite taster **▼** / **▲** da biste izabrali Isključeno / Nisko / Srednje / Visoko.

Meni zvuka

Pritisnite taster [◀] / [▶] da biste izabrali Zvuk.



Pritisnite taster [▼] / [▲] da biste izabrali Režim zvuka, a zatim pritisnite [▶] / OK da uđete u podmeni.

Pritisnite taster [▼] / [▲] da biste izabrali Standardni / Film / Muzika / Sport / Korisnički.

Pritisnite taster [▼] / [▲] da biste izabrali Visoke / Niske / Balans, i pritisnite taster [◀] / [▶] da biste podesili.

Pritisnite taster [▼] / [▲] da biste izabrali Prostorni zvuk, i pritisnite taster [◀] / [▶]

da biste izabrali Uključeno / Isključeno.

Pritisnite taster [▼] / [▲] da biste izabrali Automatska jačina zvuka, i pritisnite taster [◀] / [▶]

da biste izabrali Uključeno / Isključeno.

Pritisnite taster [▼] / [▲] da biste izabrali SPDIF, i pritisnite taster [◀] / [▶] da biste izabrali PCM / Isključeno / Automatski.

Meni vremena

Pritisnite taster [◀] / [▶] da biste izabrali Vreme.



Pritisnite taster [▼] / [▲] da biste izabrali Tajmer za isključivanje, a zatim pritisnite [▶] / OK da uđete u podmeni. Pritisnite taster [▼] / [▲] da biste izabrali Isključeno / 10min / 20min / 30min / 60min / 90min / 120min / 180min / 240min.

Pritisnite taster [▼] / [▲] da biste izabrali Automatsko isključivanje, a zatim pritisnite [▶] / OK da uđete u podmeni.

Pritisnite taster [▼] / [▲] da biste izabrali Isključeno / 3h / 4h / 5h.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Tajmer OSD-a, a zatim pritisnite **【▶】** / OK da uđete u podmeni.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali 5s / 10s / 15s / 20s / 25s / 30s.

Meni opcija

Pritisnite taster **【◀】** / **【▶】** da biste izabrali Opcije.



Pritisnite taster **【▼】** / **【▲】** da biste izabrali Jezik OSD-a / Odnos širine i visine / Plavi ekran / Zaključavanje tastera.

/ HDMI CEC / Titl / Podešavanje roditeljske kontrole / Snimanje logotipa.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Jezik OSD-a, a zatim pritisnite **【▶】** / OK da uđete u podmeni.

Pritisnite taster **【◀】** / **【▶】** da biste izabrali jezik.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Odnos širine i visine.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Plavi ekran, i pritisnite taster **【◀】** / **【▶】** da biste izabrali Uključeno / Isključeno.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Zaključavanje tastera, i pritisnite taster **【◀】** / **【▶】** da biste izabrali Uključeno / Isključeno.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali HDMI CEC, a zatim pritisnite **【▶】** / OK da uđete u podmeni.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Kontrola CEC / Audio prijemnik / Automatsko isključivanje uređaja / Automatsko uključivanje TV-a / Lista uređaja / Meni uređaja.

Napomena: Sve opcije su dostupne samo kada je HDMI CEC podešen na Uključeno.

Kontrola CEC

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Kontrola CEC, i pritisnite taster **【◀】** / **【▶】** da biste izabrali Uključeno / Isključeno.

Sledeće opcije su dostupne samo kada je CEC postavljen na Uključeno.

Audio prijemnik

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Audio prijemnik, i pritisnite taster **【◀】** / **【▶】** da biste izabrali Uključeno / Isključeno.

Automatsko isključivanje uređaja

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Automatsko isključivanje uređaja, i pritisnite taster **【◀】** / **【▶】** da biste izabrali Uključeno / Isključeno.

Automatsko uključivanje TV-a

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Automatsko uključivanje TV-a, i pritisnite taster **【◀】** / **【▶】** da biste izabrali Uključeno / Isključeno.

Lista uređaja

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Lista uređaja, a zatim pritisnite taster **【▶】** / OK da biste ušli.

Meni uređaja

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Meni uređaja, a zatim pritisnite taster **【▶】** / OK da biste ušli.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Titl, i pritisnite taster **【◀】** / **【▶】** da biste izabrali Uključeno / Isključeno.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Podešavanje roditeljske kontrole, a zatim pritisnite taster **【▶】** / OK da biste otvorili.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Snimanje logotipa, a zatim pritisnite taster **【▶】** / OK da biste otvorili izabrano.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Podrazumevani logotip ili Snimljeni logotip.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Resetovanje, a zatim pritisnite taster **【▶】** / OK da biste ušli.

Pritisnite taster **【◀】** / **【▶】** da biste izabrali Da / Ne.

Medija meni

Pritisnite taster INPUT.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali Medija meni, i zatim pritisnite taster OK da uđete. Ili pritisnite taster MEDIA da direktno uđete.



Pritisnite taster **【◀】** / **【▶】** da biste izabrali Fotografije, i pritisnite taster OK da otvorite.

 


Pritisnite taster **【▼】** / **【▲】** / **【◀】** / **【▶】** da biste izabrali fotografiju koju želite, i pritisnite taster OK da započnete.

Na stranici reprodukcije pritisnite taster OK da prikazete meni, i pritisnite taster **【◀】** / **【▶】** da biste izabrali opciju.



Ako stanete na fotografiji koju želite da izaberete, pojaviće se mini prikaz te fotografije sa prikazom informacija o fotografiji.

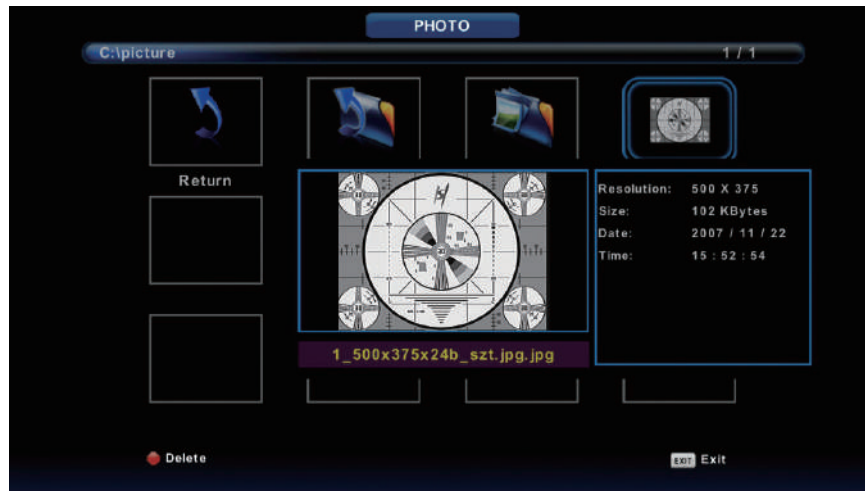


Pritisnite taster **【◀】 / 【▶】** da biste izabrali Muziku, i pritisnite taster OK da otvorite.



Pritisnite taster **【▼】 / 【▲】 / 【◀】 / 【▶】** da biste izabrali pesmu koju želite, i pritisnite taster OK da započnete reprodukciju.

 Na stranici reprodukcije pritisnite taster OK da prikazete meni, i pritisnite taster **【◀】 / 【▶】** da biste izabrali opciju.

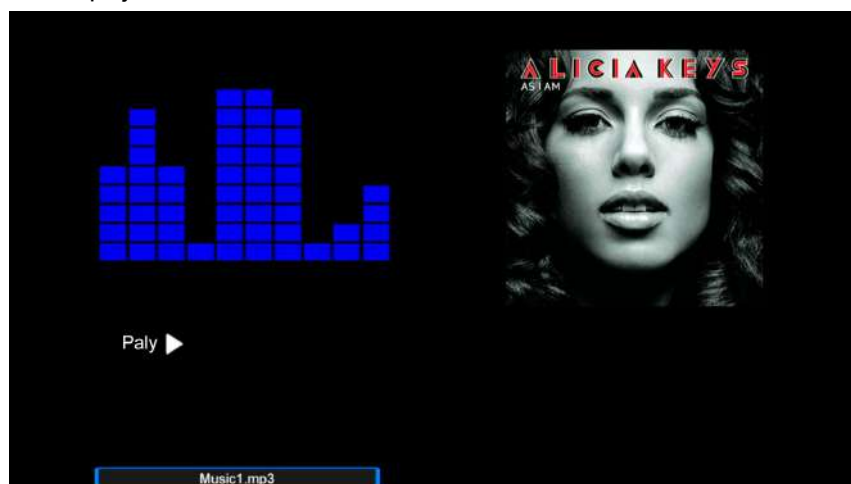

Ako stanete na pesmi koju želite da izaberete, pojaviće se mini prikaz te pesme sa informacijama o pesmi.

 


Pritisnite taster [◀] / [▶] da biste izabrali Film, i pritisnite taster OK da uđete.




Pritisnite taster [▼] / [▲] / [◀] / [▶] da biste izabrali film koji želite, i pritisnite taster OK da započnete reprodukciju.

Na stranici reprodukcije pritisnite taster OK da prikazete meni, i pritisnite taster [◀] / [▶] da biste izabrali opciju.

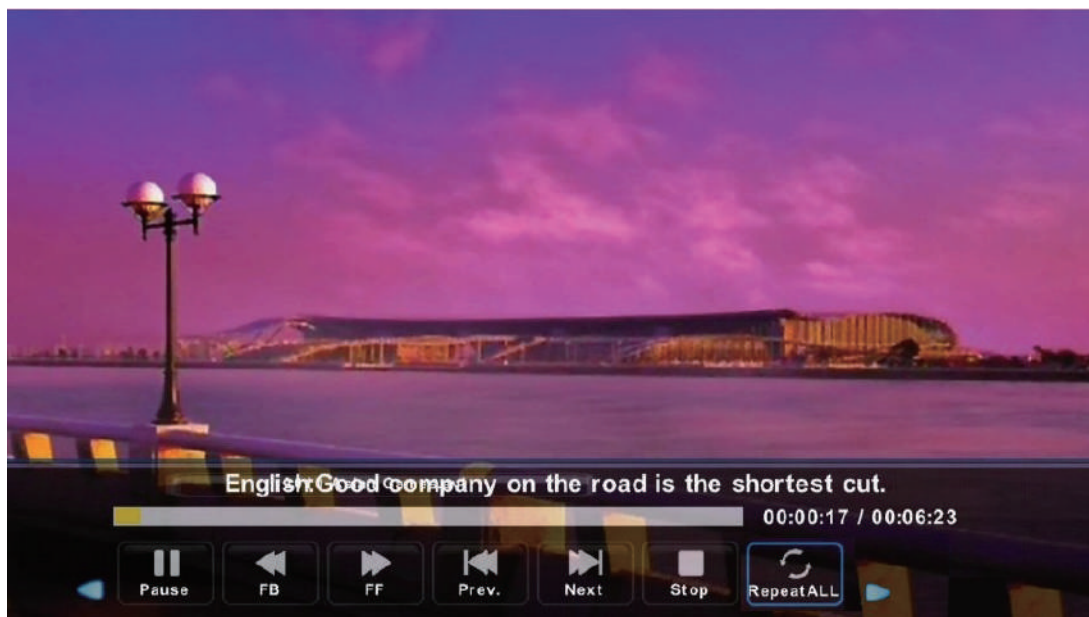

Ako stanete na video koji želite da izaberete, pojaviće se mini prikaz tog videa sa informacijama o videu.

 Pritisnite tastere ◀ / ▶ da biste izabrali TEKST.

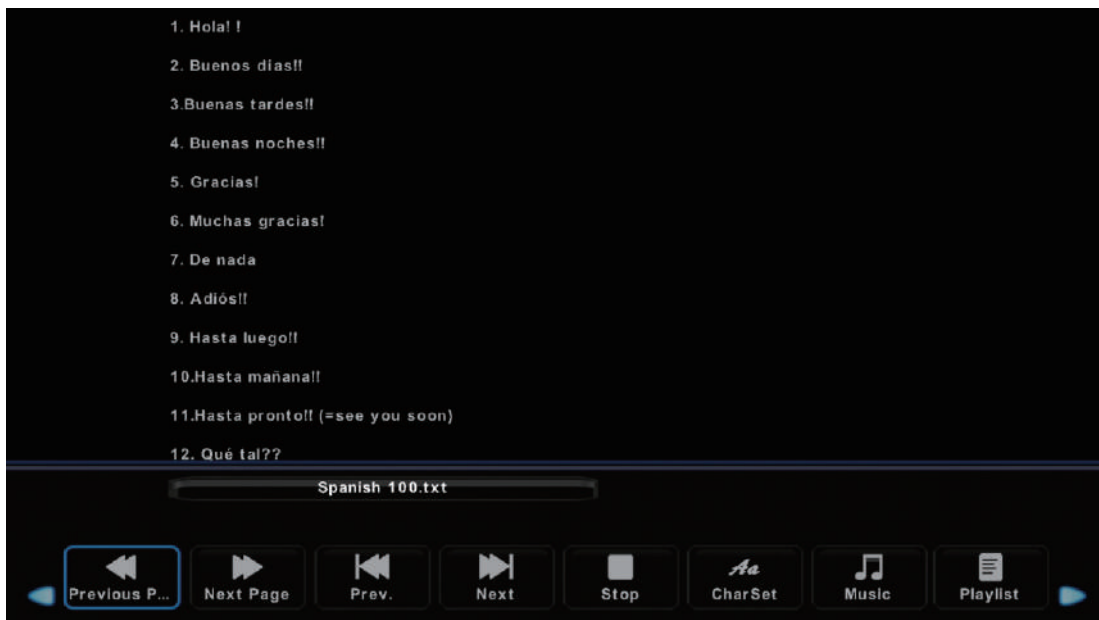

REŠAVANJE PROBLEMA

REŠAVANJE PROBLEMA

Pre nego što pozovete servis, sprovedite dole navedene provere. Ako ne uspete da rešite problem na ovaj način, isključite TV iz struje i pozovite servis.

PROBLEM	MOGUĆA REŠENJA
Nema zvuka ni slike	- Proverite da li je glavni kabl uključen u struju - - Priverite da li ste pritisnuli POWER taster - Proverite podešavanje kontrasta i jačine svetla
Normalna slika, ali nema zvuka	- Proverite jačinu zvuka - Proverite da li je MUTE opcija uključena - Promenite kanal, problem može da bude u emitovanju - Da li su svi kablovi vezani za zvuk priključeni kako treba?
Daljinsko upravljanje ne radi	- Proverite da li je neki objekat između daljinskog upravljača i proizvoda - Da li su baterije postavljene ispravno? Proverite polove + i - - Da li je postavljen ispravan mod upravljanja: TV, VCR itd.? - Promenite baterije
TV se iznenada isključio	- Da li je postavljen Sleep Timer? - Proverite podešavanja uključivanja i isključivanja. - Nema emitovanja na određenom kanalu, automatsko gašenje posle nekog vremena
Slika se pojavljuje postepeno nakon uključivanja uređaja	- Ovo je normalno, slika je isključena tokom uključivanja proizvoda. Molimo Vas da se obratite serviserima u slučaju da se slika ne pojavi nakon 5 minuta.
Slika ili boje su loše ili ih uopšte nema	- Podesite boju u meniju - Promenite kanal, problem može biti u emitovanju - Da li su svi kablovi vezani za VIDEO priključeni ispravno? - Aktivirajte bilo koju funkciju kako bi povratili normalnu jačinu svetlosti slike
Pojava horizontalnih ili vertikalnih linija, slika se trese	- Proverite da li postoje lokalne smetnje kao što su električni aparati i slično.
Loš signal kod nekih kanala	- Televizijska stanica ima nekih problema. Promenite kanal - Signal je slab, promenite položaj antene - Proverite da li postoje neki izvori mogućih smetnji
Linije ili pruge na slikama	- Proverite antenu (Promenite njen položaj)
Nema zvuka u jednom zvučniku	- Podesite ravnotežu u meniju zvuka.

REŠAVANJE PROBLEMA

PROBLEM	MOGUĆE REŠENJE
Signal je van dometa	- Podesite rezoluciju, horizontalnu frekvenciju ili vertikalnu frekvenciju - Proverite da li je kabl vezan za signal povezan ispravno ili labavo - Proverite izvor
Vertikalna linija ili pruga u pozadini / horizontalna buka / nepravilna pozicija	- Odradite autokonfiguraciju ili podesite sat, fazu ili H/V poziciju
Boja ekrana je nestabilna / jedna boje je nestabilna	- Proverite kabl za signal - Ponovo instalirajte PC video karticu

ODRŽAVANJE

- Rani kvarovi mogu biti sprečeni. Pažljivo i redovno čišćenje može da produži vreme rada Vašeg televizora. Isključite televizor i izvadite kabl iz struje pre nego što započnete čišćenje. Čišćenje ekrana

1. Evo jednog sjajnog načina da očistite Vaš ekran od prašine na duže vreme. Meku krpu pokvasite u mekoj vodi pomešanoj sa malo omekšivača ili deterdženta. Prosušite krpu dok ne bude skoro potpuno suva, a zatim obrišite ekran.
2. Višak vode ne sme biti na ekranu. Budite sigurni da ga nema pre nego što ponovo uključite televizor.

Čišćenje okvira

Prilikom čišćenja koristite meku, suhu krpu bez vlakana. Molimo Vas, proverite da krpa nije mokra.

Produženo odsustvo



Ako planirate da ostavite svoj TV isključen na duži vremenski period (npr. tokom odmora), trebalo bi da isključite kabl za napajanje iz struje kako bi izbegli moguću štetu koja može nastati usled udara groma ili izliva struje.

Odlaganje starih električnih uređaja



 
 
 
 
 
Evropska direktiva 2002/96/EC o električnoj i elektronskoj opremi za otpad (WEEE) kaže da se stari električni uređaji za domaćinstvo ne smeju odlagati sa normalnim, nesortiranim komunalnim otpadom. Stari električni uređaji moraju se sakupljati odvojeno kako bi se optimizovao oporavak i recikliranje okoline.

Simbol precrtane kante za smeće tu je kako bi Vas podsetio da odložite ovaj uređaj zasebno. Potrošači bi trebalo da kontaktiraju lokalnu vlast ili prodavača kako bi dobili sve potrebne informacije o odlaganju aparata.

Beleška: Podaci na slici su samo reference.

STAND INSTALLATION

Stand Installation

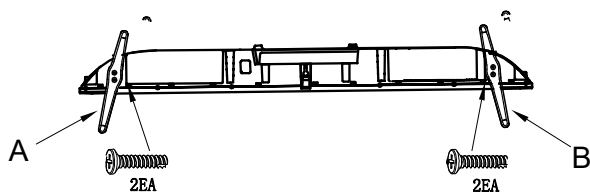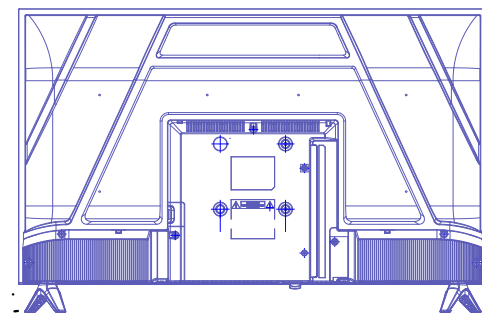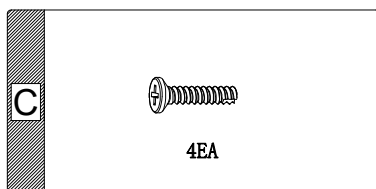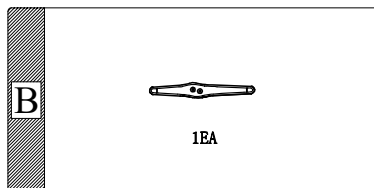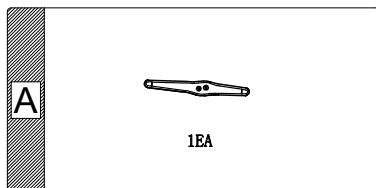



HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE

USER MANUAL

LED TELEVISION Model:32ATV141D

Thank you for purchasing this device.

FOX LED TVs are known for their excellent technical features, as well as their modern, functional, and elegant design.

In addition, we have an efficient and widespread service network that gives our proud users a sense of security.

You have made the right choice. Below you will find the user manual. It's not complicated, but you must follow it carefully.

EN

GENERAL SAFETY

Read this manual thoroughly before you start using the TV.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock.

This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

- Using Cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the television or its controls and to call for an adult to assist.

GENERAL SAFETY INSTRUCTIONS (Cont.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.
- Danger of explosion if battery is incorrectly placed. Replace with same or equivalent type.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this TV set, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- Do not allow anything to rest on or roll over the power cord and antenna cable. Doing so may cause a fire or an electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this TV during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the wall socket.

GENERAL SAFETY INSTRUCTIONS (Cont.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

WARNING!

It is STRONGLY RECOMMENDED that you ANCHOR this product.

Toppling furniture and TV's can cause serious injury or death.

TO HELP AVOID ANY SERIOUS OR FATAL INJURY, WE STRONGLY RECOMMEND THAT THIS PRODUCT BE PERMANENTLY FIXED TO THE WALL OR OTHER SUITABLE SURFACE. FIXING DEVICES ARE NOT INCLUDED SINCE DIFFERENT SURFACE MATERIALS REQUIRE DIFFERENT ATTACHMENTS. PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT WHAT FIXING DEVICE TO USE.

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

GENERAL SAFETY INSTRUCTIONS (Cont.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the TV set near heat sources such as radiators, stoves or other audio

visual equipment that produce heat.

- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the TV set.
- The antenna must be installed away from high-voltage power line,
- Please contact an antenna professional installer to install the antenna to avoid incorrect installation which could result in fire, electric shock or serious injury.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.
- If mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

INSTALLATION

 
Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer.

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

Attaching the stand

Step 1

Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right.

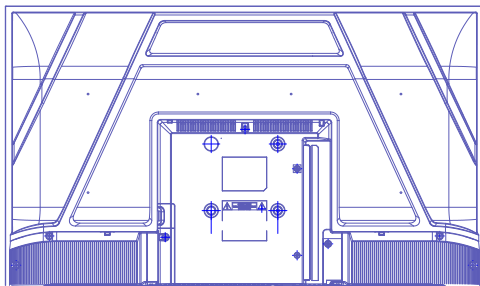

Step 2

Align the stand leg to the installation point, as illustrated below



Step 3

Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated on the right.

CAUTION!

Do not apply excessive force as this may damage the screw holes.

INSTALLATION (Cont.)

 
Wall-Mounting Instructions

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

- We recommend you use a professional installer as we assume no liability for any eventual damage to the product or injury to yourself if you mount the TV on your own.



BACK OF TV

32 inch VESA PATTERN: 100 x 100mm

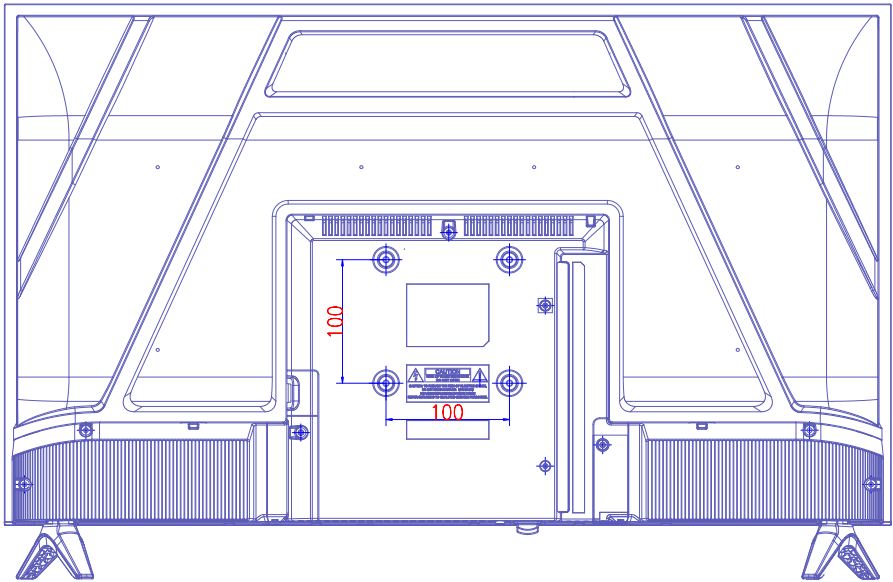

NOTE: If you are wall-mounting the TV, this should be done by a qualified installer.

  CONTROLS AND CONNECTIONS

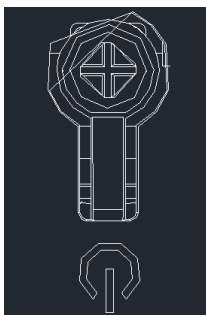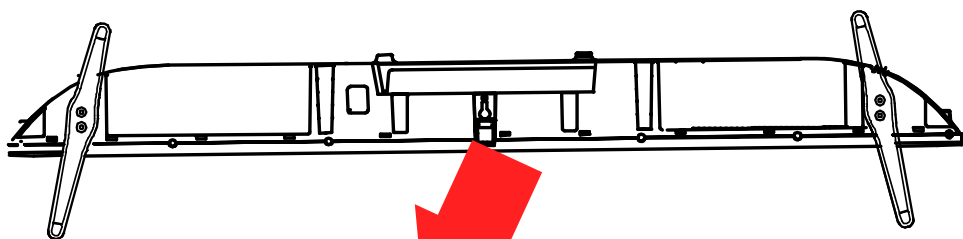

CONTROLS AND CONNECTIONS



1. RF IN (ANTENNA)
2. COAX OUT
3. HDMI 1
4. HDMI 2
5. HDMI 3
6. CVBS/ AUDIO LEFT & RIGHT
7. HEADPHONE OUT
8. USB INPUT*2

USB connection

Insert a USB storage device into the USB port to record, playback of video/
photo/music

REMOTE CONTROL

The buttons of the original remote control are as following:



NOTE:

- All pictures in this manual are examples, only for reference, actual product may differ from the pictures.
- The buttons not mentioned here are not used.

Definition of the buttons on remote control:

1. **STANDBY:** Enter or quit the stand by mode.
2. **MUTE:** Mute or restore sound.
3. **NUMBER BUTTONS:** Use to choose channels.
4. **-/- :** Change the channel bits want to input
5. **↺ :** Return to last viewed program
6. **P.MODE:** Pressto cycle through the available video picture mode.
7. **S.MODE:** Pressto cycle through the different sound settings.
8. **MENU:** Press to display/disappe ar the on screen menus or to quit some operations.
9. **SLEEP:** Set the sleep time r.
10. **INPUT:** Select signal source.
11. **AUDIO:** Switch between NICAM DUAL /NICAM DUAL /NICAM DUAL + /MONO and switch Audio language in DTV mode.
12. **OK:** Select or confirm menu item.
13. **▲/▼/◀/▶ :** Select direct ion.
14. **MENU:** Press to display/disappear the on screen menus or to quit some operations.
15. **EXIT:** Quit the current interface.
16. **VOL+/VOL-:** Increase/Decrease audio volume.
17. **CH+/CH-:** Scroll to next/ previous s channel.
18. **ASPECT:** Adjust displayable aspect ratio.
19. **INFO:** Show channel program information.
20. **LIST :** Channel List Key.
21. **COLOR BUTTONS:** Red/g reen/yello w/bl ue key navigation link.
 - ◀◀: Fastreverse (in MEDIA mode)
 - ▶▶: Fastforwa rd (in MEDIA mode)
 - ◀◀: Previous (in MEDIA mode)
 - ▶▶: Next (in MEDIA mode)
 - ▶|: Play / Pause (in MEDIA mode)
 - : Stop (in MEDIA mode)
22. **FAV:** Display the favorites program .
23. **MIX:** Graphics function.
24. **TEXT:** Enter the Teletext, press again for MIX mode, press this button again to exit .
25. **HOLD:** Hold the teletext page on display press again to release .
26. **INDEX:** Go to index page/Enter the recorded list.(In PVR mode).
27. **REVEAL:** Reveal the hidden information of some teletext pages.
28. **SIZE:** Change the size of Teletext screen in display mode.

SOURCE INPUT

Press INPUT button to enter the input source.

Press 【▼】 / 【▲】 button to select the input source you want.

 
Press <OK> button to enter the input source. Press EXIT button to quit.



Main Menu Operation


Channel Menu

Press the MENU to enter the main menu. Press 【◀】/【▶】 button to select CHANNEL.

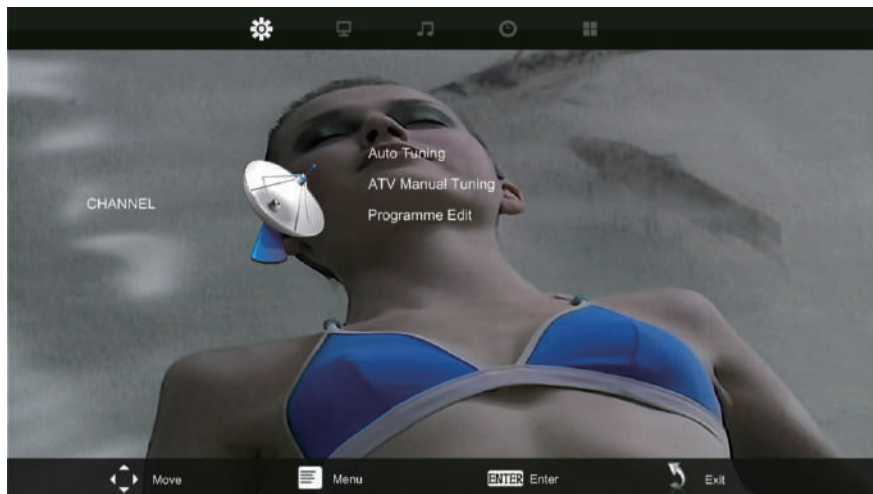


Press 【▼】/【▲】 button to select Tuner Type, and press 【◀】/【▶】 button to select Air/ Cable.

 Press 【▼】 / 【▲】 button to select Auto Tuning, and press <OK> button to start tuning.

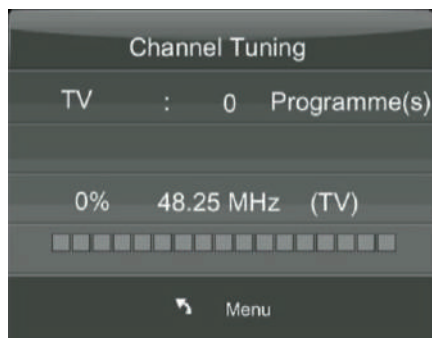

Auto Tuning : Tuning the program automatically.

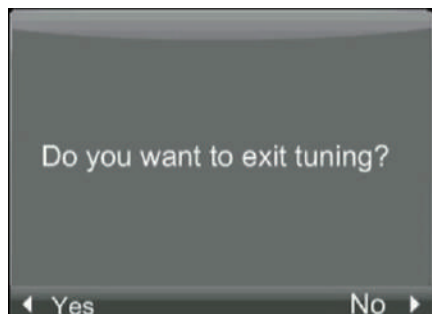

Press the EXIT to stop searching.

Picture Menu

Press the MENU to enter the main menu. Press **【◀】 / 【▶】** button to select Picture.



Press **【▼】 / 【▲】** button to select Picture Mode, and press **【▶】 / <OK>** to enter the sub-menu. Press **【▼】 / 【▲】** button to select Standard / Dynamic/ Mild/ User.

Press **【▼】 / 【▲】** button to select Contrast/ Brightness/ Color/ Tint/ Sharpness ,and press **【◀】 / 【▶】** button to adjust.

Press **【▼】 / 【▲】** button to select Color Temperature, and press **【▶】 / <OK>** to enter the sub-menu. Press **【▼】 / 【▲】** button to select Cool/ Medium/ Warm.

Press **【▼】 / 【▲】** button to select Noise Reduction, and press **【▶】 / <OK>** to enter the sub-menu. Press **【▼】 / 【▲】** button to select Off/ Low/ Middle/ High.

Sound Menu

Press 【◀】 / 【▶】 button to select Sound.



Press 【▼】 / 【▲】 button to select Sound Mode, and press 【▶】 / <OK> to enter the sub-menu. Press 【▼】 / 【▲】 button to select Standard/ Movie/ Music/ Sports/ User.

Press 【▼】 / 【▲】 button to select Treble/ Bass/ Balance, and press 【◀】 / 【▶】 button to adjust.

Press 【▼】 / 【▲】 button to select Surround, and press 【◀】 / 【▶】 button to select On/Off.

Press 【▼】 / 【▲】 button to select Auto Volume, and press 【◀】 / 【▶】 button to select On/Off.

Press 【▼】 / 【▲】 button to select SPDIF, and press 【◀】 / 【▶】 button to select PCM/ Off/ Auto.

Time Menu

Press the 【◀】 / 【▶】 button to select TIME.



Press 【▼】 / 【▲】 button to select Sleep Timer, and press 【▶】 / <OK> to enter the sub-menu. Press 【▼】 / 【▲】 button to select Off/ 10min/ 20min/ 30min/ 60min/ 90min/ 120min/ 180min/ 240min.

Press 【▼】 / 【▲】 button to select Auto Sleep, and press 【▶】 / <OK> to enter the sub-menu. Press 【▼】 / 【▲】 button to select Off/ 3H/ 4H/ 5H.

Press 【▼】 / 【▲】 button to select OSD Timer, and press 【▶】 / <OK> to enter the sub-menu. Press 【▼】 / 【▲】 button to select 5S/ 10S/ 15S/ 20S/ 25S/ 30S.

Option Menu

Press the 【◀】 / 【▶】 button to select Option.



Press 【▼】 / 【▲】 button to select OSD Language/ Aspect Ratio/ Blue Screen/ Key Lock / HDMI CEC/ Close Caption/ VChip Set/ Capture Logo.

Press 【▼】 / 【▲】 button to select OSD Language, and press 【▶】 / <OK> to enter the sub-menu. Press 【◀】 / 【▶】 button to select the language.

Press 【▼】 / 【▲】 button to select Aspect Ratio.

Press 【▼】 / 【▲】 button to select Blue Screen, and press 【◀】 / 【▶】 button to select On/Off.

Press 【▼】 / 【▲】 button to select Key Lock, and press 【◀】 / 【▶】 button to select On/Off.

Press 【▼】 / 【▲】 button to select HDMI CEC, and press 【▶】 / <OK> to enter the sub-menu. Press 【▼】 / 【▲】 button to select CEC Control/ Audio Receiver/ Device Auto Standby/ TV Auto Power On/ Device List/ Device Menu.

Note: All the Options are available only when the HDMI CEC select On.

CEC Control

Press **【▼】 / 【▲】** button to select CEC Control, and press **【◀】 / 【▶】** button to select On/Off. The following terms are available only when "On" is selected in CEC.

Audio Receiver

Press **【▼】 / 【▲】** button to select Audio Receiver, and press **【◀】 / 【▶】** to select On/Off.

Device Auto Standby

Press **【▼】 / 【▲】** button to select Device Auto Standby, and press **【◀】 / 【▶】** to select On/Off.

TV Auto Power On

Press **【▼】 / 【▲】** button to select TV Auto Power On, and press **【◀】 / 【▶】** button to select On/Off.

Device List

Press **【▼】 / 【▲】** button to select Device List, and press **【▶】 / <OK>** button to enter.

Device Menu

Press **【▼】 / 【▲】** button to select Device Menu, and press **【▶】 / <OK>** button to enter.

Press **【▼】 / 【▲】** button to select Close Caption, and press **【◀】 / 【▶】** to select On/Off.

Press **【▼】 / 【▲】** to select VChip Set, and press **【▶】 / <OK>** button to enter.

Press **【▼】 / 【▲】** button to select Capture Logo, and press **【▶】 / <OK>** button to enter. Press **【▼】 / 【▲】** to select Default logo or Capture Logo.

 
Press **【▼】 / 【▲】** button to select Reset, and press **【▶】 / <OK>** button to enter. Press **【◀】 / 【▶】** to select Yes/ No.

Media Menu

Press the INPUT. Press 【▼】/【▲】button to select Media Menu, and press <OK> button to enter. Or press MEDIA to enter.




Press 【◀】 / 【▶】 button to select Photo, and press <OK> button to enter.

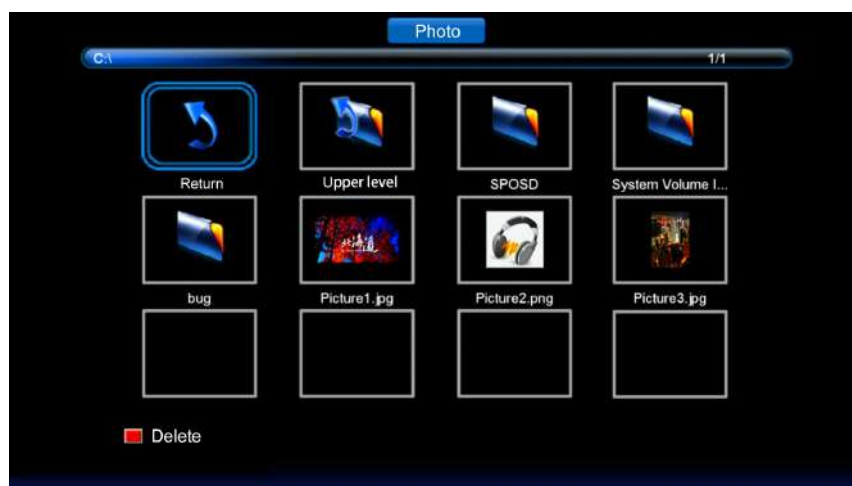

Press 【▼】 / 【▲】 / 【◀】 / 【▶】 button to select the photo you want, and press the <OK> button to start. Press the <OK> button on the playback page to display the menu and press 【◀】 / 【▶】 button to select.



If you stop at the photo you want to select, a miniature view of that photo will appear showing the photo information.

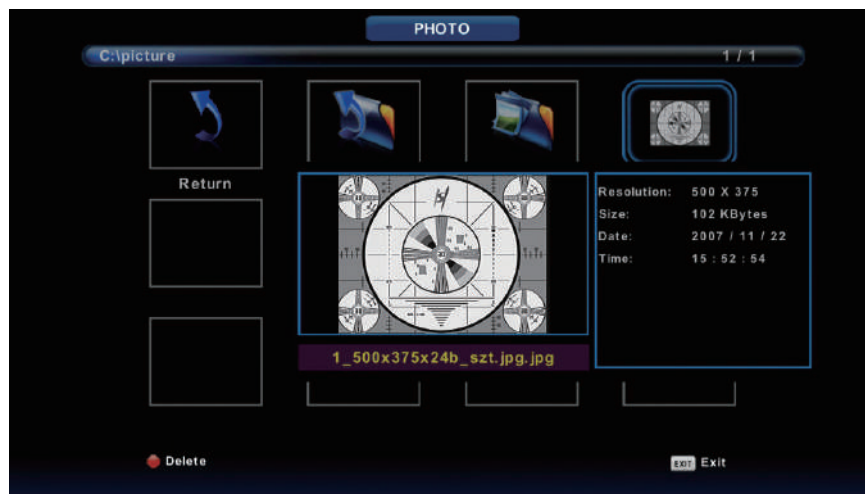 


Press [◀] / [▶] button to select Music, and press the <OK> button to enter.



Press [▼] / [▲] / [◀] / [▶] button to select the music you want, and press <OK> button to start.

 Press the <OK> button on the playback page to display the menu and press [◀] / [▶] button to select.

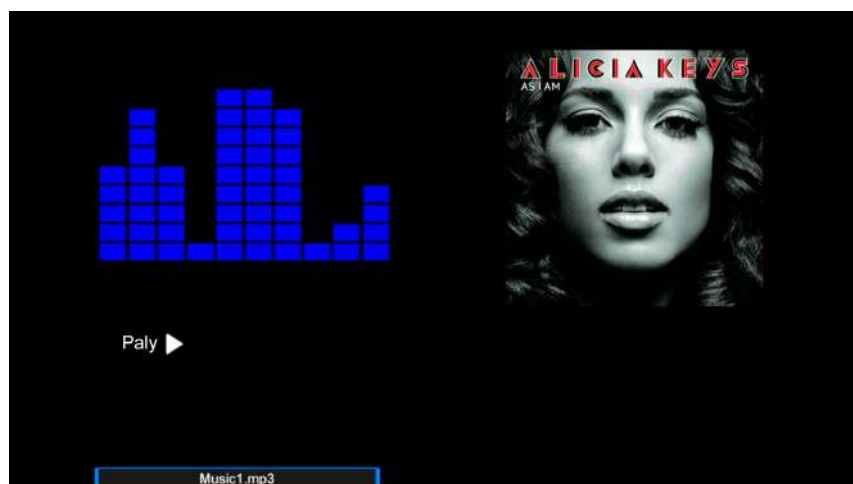


If you stop at the music you want to select, a miniature view of that music will appear showing the music information.



Press 【◀】 / 【▶】 button to select Movie, and press the <OK> button to enter.




 Press 【▼】 / 【▲】 / 【◀】 / 【▶】 button to select the movie you want, and press <OK> button to start. Press the <OK> button on the playback page to display the menu and press 【◀】 / 【▶】 button to select.

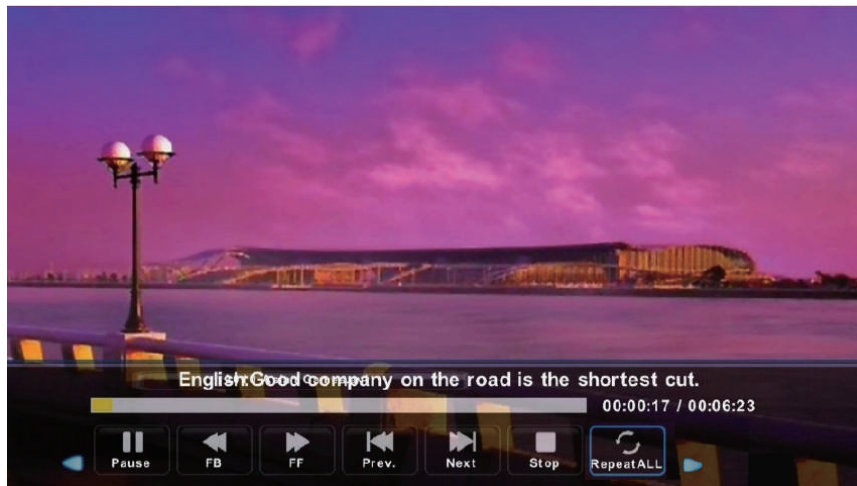

If you stop at the video you want to select, a miniature view of that video will appear showing the video information.

 Press the ◀ / ▶ to select the **TEXT**.

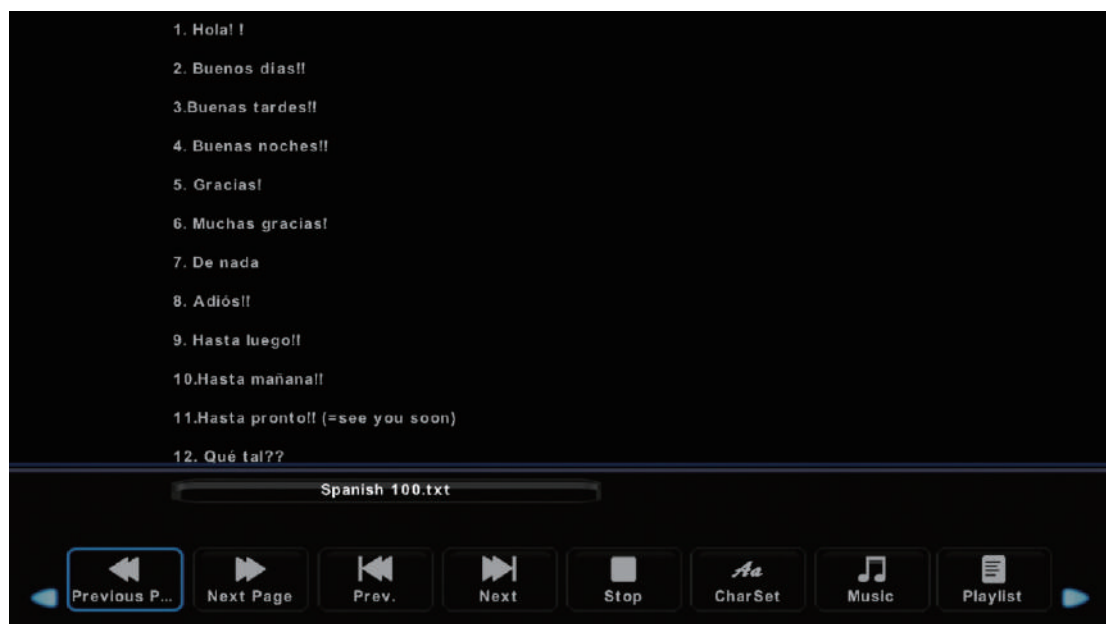

Troubleshooting Guide

Troubleshooting

Before contrast the service technician, perform the following simple checks. If any program still persists, unplug the TV and calling for serving.

PROBLEM	POSSIBLE SOLUTION
No sound and picture	- Check whether the main plug has been connected to a wall let. - Check whether you have pressed the POWER button on the front of TV set. - Check the picture contrast and brightness settings.
Normal picture but no sound	- Check the volume. - Sound muted? Press the MUTE button. - Try another channel, the problem may be with the broadcast. - Are the audio cables installed properly?
The remote control does not work	- Check to see if there any object between the product and remote control Causing obstruction. - Are batteries installed with correct polarity (+ to +, - to -)? - Correct remote operating mode set: TV, VCR etc.? - Install new batteries
Power is suddenly turned off	- Is the sleep timer set? - Check the power control settings. Power interrupted. - No broadcast on station tuned with auto activated.
Picture appears slowly after switching on	- This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.
No or poor color or poor picture	- Adjust the color in menu option. - Keep a sufficient distance between the product and the VCR. - Try another channel, the problem may be with the broadcast. - Are the VIDEO cables installed properly? - Activate the any function to restore the brightness of the picture.
Horizontal/vertical bars or picture shaking	- Check for local interference such as an electrical appliance or power tool.
Poor reception on some channels	- Station or cable product experiencing problems. Tune to another station. - Station signal is weak, reorient antenna to receive weaker station. - Check for sources of possible interference.
Lines or streaks in pictures	- Check the antenna (Change the direction of the antenna).
No output from one of the speakers	- Adjust balance in menu option.

NOTE: There is a problem in VGA mode [Only VGA mode applied].

Troubleshooting Guide

PROBLEM	POSSIBLE SOLUTION
The signal is out of range.	- Adjust resolution, horizontal frequency, or vertical frequency. - Check it whether the signal cable is connected or loose. - Check the input source.
Vertical bar or stripe on back ground & Horizontal Noise & Incorrect position.	- Work the auto configure or adjust clock, phase, or H/V position.
Screen color is unstable or single color.	- Check the signal cable. - Reinstall the PC video card.

Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then used it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

Extended Absence



If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

Disposal of old electrical appliances

 
 
 
 
 


The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

STAND INSTALLATION

Stand Installation

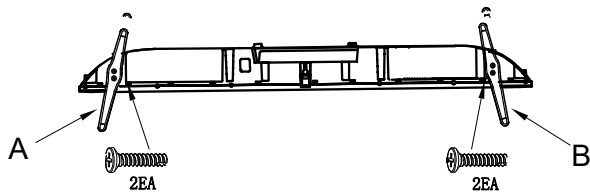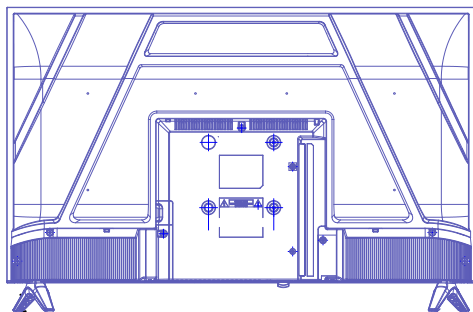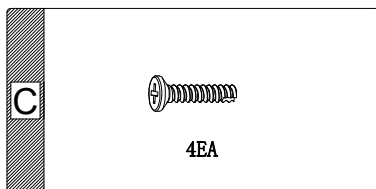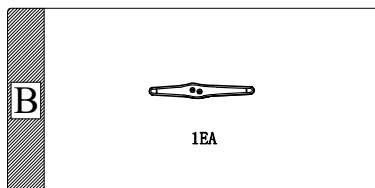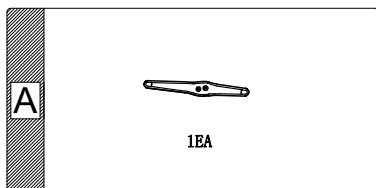



LED TV UREĐAJ
MODEL: 32ATV141D

NAPAJANJE: 100-240V~ 50/60 Hz
SNAGA POTROŠNJE: 50W



UPOZORENJE: KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREĐAJ KIŠI ILI VLAZI. NE POSTAVLJAJTE PREDMETE ISPUJENE TEČNOŠĆU NA I OKO UREĐAJA. KABL ZA NAPAJANJE ISKLJUČITE IZ UTIČNICE AKO UREĐAJ NE KORISTITE DUŽI VREMENSKI PERIOD. OVAJ UREĐAJ PRI RADU KORISTI VISOKI NAPON. NE UKLANJAJTE ZADNJI POKLOPAC. OBRATITE SE KVALIFIKOVANOJ SERVISNOJ SLUŽBI ZA OBAVLJANJE SERVISA.

SERIJSKI BROJ:

PROIZVOĐAČ:
VIEW ELECTRONIC CO., LTD
East Industrial Zone, Jiahuia,
Nantong, China.

UVOZNIK ZA SRBIJU:
VIMPORT DOO
BATAJINIČKI DRUM 93do 10a,
11080 BEOGRAD- ZEMUN, SRBIJA



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs