



HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE

USER MANUAL

LED TELEVISION

Model: 32DTV240D

Thank you for purchasing this device.

FOX LED televisions are known for their great performance, as for modern, functional and elegant design. Besides that, we constantly improve our customer support, we have highly efficient and wide network of services, that make our proud customers feel safe.

You made a right choice.

Now it's time for instructions, they are not complicated, but you have to follow them.

EN

SR

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

WARNING:



TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

REGULATORY INFORMATION

This equipment generates and uses can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

DO not attempt to modify this product in any way without written authorization from supplier. Unauthorized modification could void the user's authority to operate this product.

It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen.

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

WARNING

To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.

Don't use the apparatus in tropical climates.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

The Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.

Keep minimum distances (5cm) around the apparatus for sufficient ventilation; (Minimum distance around the apparatus for sufficient ventilation.)

No naked flame sources, such as lighted candles, should be placed on the apparatus;

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Safety instructions

The device may malfunction when under electrostatic discharge. It can be manually resumed by power off and power on again.

CAUTION

Connecting the Power Cord

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and its if appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

The MAINS plug is used as the disconnect device, and the disconnect device shall remain readily operable.

BOMARE COMPANY SARL declare that the product BM4392 complies with the essential health and safety requirements of the R&TTE directive 1999/5/CE.

Power source of this TV : 100-240V 50/60HZ.

This TV complies with CE standard.

 
Alternating current:

To indicate on the rating plate that the equipment is suitable for alternating current only, to identify the relevant terminals.

Safety instructions

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.

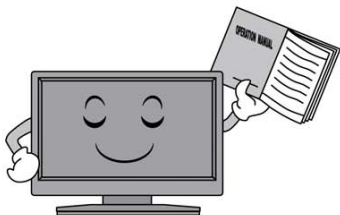


7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.




5. Do not use this apparatus near water.



 8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

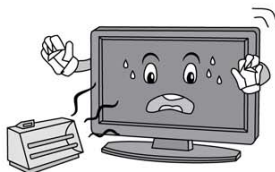

 6. Clean only with a dry cloth.

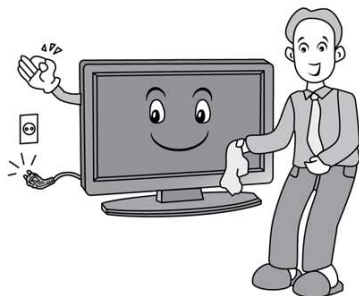

9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Safety instructions

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



13. Unplug power cord and antenna during lightning storms or when unused for long periods of time.



11. Only use the attachments/accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



ON DISPOSAL

- The fluorescent lamp used in this product contain a small amount of mercury.
- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.

NOTE

- If the TV feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with TV.
- Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However these have no adverse effect on the monitor's performance.
- Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effect on the screen.

Getting Started

 
Using the remote control

When using the remote control, aim it at remote sensor on the television. If there is an object between the remote control and the remote sensor on the unit, the unit may not operate.

- ◆ Point the remote control at the REMOTE SENSOR located on the television.
- ◆ When using this television in a very brightly lit area, the infrared REMOTE CONTROL SENSOR may not work properly.
- ◆ The recommended effective distance for using the remote control is about 7 metres.

Installing Batteries in the Remote Control

1. Open the cover at the back of the remote control.
2. Install two AAA size batteries. Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.
3. Replace the cover.

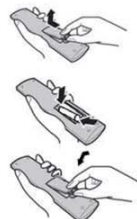

Battery replacement

You will need to install the batteries into the remote control to make it operate following the instruction below.

When the batteries become weak, the operating distance of the remote control will be greatly reduced and you will need to replace the batteries.

Notes on Using Batteries:

The use of the wrong type of batteries may cause chemical leakage and/or explosion. Please note the following:

- ◆ Always ensure that the batteries are inserted with the + and - terminals in the correct direction as shown in the battery compartment.
- ◆ Different types of batteries have different characteristics. Do not mix different types.
- ◆ Do not mix old and new batteries. Mixing old and new batteries will shorten battery life and/or cause chemical leakage.
- ◆ Replace batteries as soon as they do not work.
- ◆ Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately with a dry cloth.
- ◆ The batteries may have a shorter life expectancy due to storage conditions. Remove the batteries whenever you anticipate that the remote control will not be used for an extended period.
- ◆ The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION:

- ◆ It may result in an explosion if batteries are replaced incorrectly.
- ◆ Only replace batteries with the same or equivalent type.

Cable Installation

Please read the relevant content in "Notice for Maintenance and Safety" carefully before the installation and use.

1. Take out the TV from the package and put it in a drafty and flat place.

NOTE:

- ◆ When you plug or unplug the TV, computer or other equipments, you must make sure that the AC power has been already shut down; when unplugging the power cable or signal cable, please hold the plug (the insulated part), do not draw the body of the cable.
2. The RF output terminal can be connected with the RF input port of the TV.
 3. The output AV terminal of DVD can be connected with the AV input port of the TV through AV cable.
 4. Connect one end of the VGA cable with the VGA port on computer, connect the other end of the VGA cable with the VGA port on the TV, and tighten the bolts clockwise on the each end of VGA cable.

NOTE:

- ◆ While connecting the 15-pin VGA, please do not insert the plug overexertedly, for fear the pin might be broken.
5. Connect one end of the HDMI cable with HDMI output port, connect the other end of the HDMI cable with the HDMI port on the TV.

NOTE:

- ◆ While connecting the HDMI, please aim at carefully, do not insert overexertedly, for fear the pin might be broken.
6. Check and make sure that all AV cables are connected with the corresponding ports correctly.
 7. Connect the AC power cable with 100-240V~ power supply.

NOTE:

- ◆ The range of power input for the TV is 100-240V~ 50/60Hz, do not connect the TV power input port with the AC power out of the above range.
 - ◆ Please hold the insulated part of the plug when you are unplugging the power cable, do not touch directly the metallic part of the cable.
-

QUICK START GUIDE

- **Connection**

1. Connect the mains and antenna.
2. Press the  button on remote control to turn on TV from standby mode.

- **Initial Setup**

When the TV is initially powered on, a sequence of on-screen prompts will assist in configuring basic settings.

1. Select the desired OSD (On Screen Display) language.
Press the /// button, then press the **OK** button.
2. Select the appropriate country.
Press the /// button to select the country, then press the **OK** button to Start Channel Tuning.

Turning on and off the TV

- **Turn on the TV**

Connect the AC input cable. At this time the TV will enter standby mode.
Press the  button on remote control to turn on TV from standby mode.

- **Turn off the TV**

Press the  button on the remote control to enter standby mode.
Do not leave your set in standby mode for long periods of time. It is best to unplug the set from the mains and aerial.

- **No signal**

There is No Signal menu on screen when there is no input signal. In TV/DTV mode, if there is no signal in fifteen minutes, the TV will turn off automatically. In PC mode, the TV set will automatically turn off in five minutes if no input signal. When VGA cable is connected, the TV turns on automatically.

Programme Selection

- **Using the CH+ /CH- on the panel of TV or on the remote control.**

Press CH+ to increase channel number.
Press CH- to decrease channel number.

- **Using 0-9 digital buttons.**

You can select the channel number by pressing 0 to 9. (In TV, DTV mode)

- **Using -/-- button**

Using -/-- button enables you to enter double digit channel numbers

Volume adjustment

- Press the **VOL+/-** button to adjust the volume.
- If you want to switch the sound OFF, press the .
- You can release mute by pressing the  or increase/decrease the volume.

Changing the Input Source

You can select the input source by pressing the **INPUT** button on the remote control.
Press the / button to cycle through the input source, and press the **OK** button to confirm your choice.

REMOTE CONTROL

The button of the original remote control are as following:



NOTE:

● All pictures in this manual are examples, only for reference, actual product may differ from the pictures.

● The buttons not mentioned here are not used.

Definition of the buttons on remote control:

1. **STANDBY:** Enter or quit the standbymode.
2. **MUTE:** Mute or restore sound.
3. **NUMBER BUTTONS:** Use to choose channels.
4. **-/- :** Change the channel bits want to input
5. **↶ :** Return to last viewed program
6. **P.MODE:** Press to cycle through the available video picture mode.
7. **S.MODE:** Press to cycle through the different sound settings.
8. **MENU:** Press to display/disappear the on screen menus or to quit some operations.
9. **SLEEP:** Set the sleep timer.
10. **INPUT:** Select signal source.
11. **AUDIO:** Switch between NICAM DUAL /NICAM DUAL /NICAM DUAL + /MONO and switch Audio language in DTV mode.
12. **OK:** Select or confirm menu item.
13. **▲/▼/◀/▶ :** Select direction.
14. **MENU:** Press to display/disappear the on screen menus or to quit some operations.
15. **EXIT:** Quit the current interface.
16. **VOL+/VOL-:** Increase/Decrease audio volume.
17. **CH+/CH-:** Scroll to next/previous channel.
18. **ASPECT:** Adjust displayable aspect ratio.
19. **INFO:** Show channel program information.
20. **LIST :** Channel List Key.
21. **COLOR BUTTONS:** Red/green/yellow/blue key navigation link.
 - ◀◀: Fast reverse (in MEDIA mode)
 - ▶▶: Fast forward (in MEDIA mode)
 - ◀◀: Previous (in MEDIA mode)
 - ▶▶: Next (in MEDIA mode)
 - ⏮: Play / Pause (in MEDIA mode)
 - : Stop (in MEDIA mode)
22. **FAV:** Display the favorites program
23. **TEXT:** Enter the Teletext, press again for MIX mode, press this button again to exit
24. **HOLD:** Hold the teletext page on display press again to release
25. **SUBTITLE:** Enter subtitle mode
26. **INDEX:** Go to index page/Enter the recorded list.(In PVR mode).
27. **REVEAL:** Reveal the hidden information of some teletext pages.
28. **EPG:** Call up the EPG(Electronic Program Guide),using in the DTV mode
- 29.**SUBPAGE:** Enter the subpage.
- 30.**SIZE:**Change the size of Teletext screen in display mode.
- 31.**REC:** To start recording(InPVR Mode).

INPUT



Press **【▼】** / **【▲】** button to select Inputs menu.

 
Press **【▼】** / **【▲】** / **【◀】** / **【▶】** button to select.

Press ENTER to select input.

First Time Setup


OSD Language

Press **【▼】** / **【▲】** button to select the language to be used for menus and message.

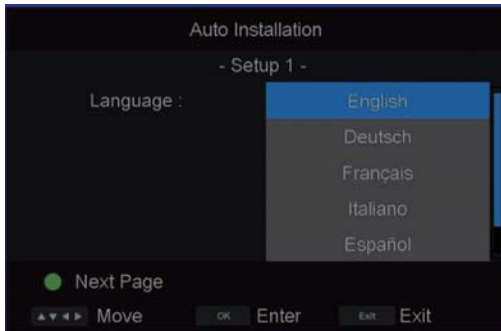


Country/region

 Press **【▼】** / **【▲】** button to select the country/region you want to.

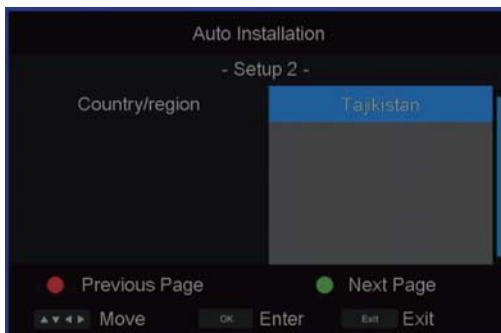


Antenna Type

 Press 【▼】 / 【▲】 button to select Air/cable/satellite.

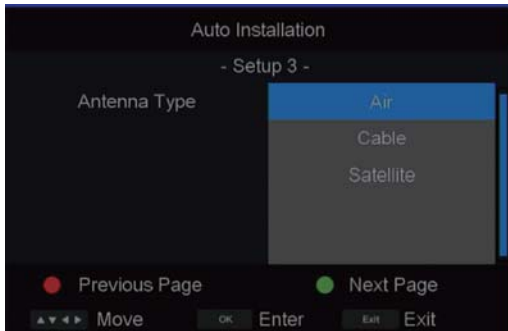

Auto Scan

 
Press 【▼】 / 【▲】 button to select Mode: DTV+ATV, ATV,DTV .

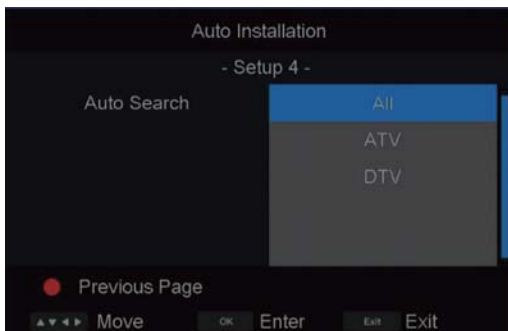

Picture Menu

Press MENU button to display the main menu.

 Press 【◀】 / 【▶】 button select PICTURE in the main menu, then press ENTER / ▼ to enter.

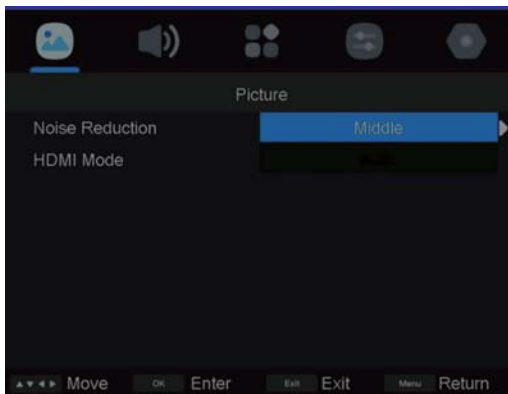

1. Press 【▼】 / 【▲】 button to select the option that you want to adjust in the PICTURE menu.

2. Press Enter 【◀】 / 【▶】 button to adjust.

3. After finishing your adjustment, Press MENU button to return back to the previous menu.

Picture MODE

Picture MODE

Press **【▼】** / **【▲】** button to select Picture Mode, then press **【▶】** button to select. (Available Picture mode: Standard/Dynamic/Movie/Soft/Eco/User).

Brightness/Contrast/ Sharpness/Saturation/Hue

Press **【▼】** / **【▲】** button to select option, then press **【▶】** button to adjust.

Brightness Adjust the visual perception output of the entire picture, it will effect the iuminousness of the picture.

Contrast Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Sharpness Adjust the peaking in the detail of the picture.

Colour Color adjustment of pictures

Tint Use in compensating color changed with the transmission in the NTSC code.

Colour Temperature Change the overall color cast of the picture.

Press **【▼】** / **【▲】** button to select Color Temperature, then press **【▶】** button to select Standard/Cool/Warm.

Standard Produces a vivid image.

Cool Produces a gentle blue-hued image.

Warm Produces a red-hued image.

Aspect Ratio

Press **【▼】** / **【▲】** button to select Aspect Ratio, then press **【▶】** button to select Full/Zoom1/Zoom2/Auto/4:3.

Noise Reduction

Select the High/Middle/Low/Off to improve the quality of the picture.

HDMI Mode

Screen Mode(It only available on HDMI source.)

Sound Menu

Press MENU button to display the main menu.

Press 【◀】 / 【▶】 button select SOUND in the main menu, then press ENTER / ▼ to enter.



1. Press 【▼】 / 【▲】 button to select the option that you want to adjust in the SOUND menu.

2. Press Ente 【◀】 / 【▶】 button to adjust.

3. After finishing your adjustment, Press MENU button to return back to the previous menu.

Sound Mode

Press 【▼】 / 【▲】 button to select Audio Mode, then press 【◀】 / 【▶】 button to select.

(Available Sound mode: Standard, Movice, Music, Speech, User).

TIPS: You can press SMODE button on the remote control to change the Sound Mode directly.

Standard Produces a balanced sound in all environments.

Movie Enhances treble and bass for a rich sound experience.

Music Increase bass gain for better bass

Speech Reduce treble and bass gain to accentuate vocal effects

User Select to customize sound settings.

Bass Adjust the bass effect. Increases or decreases lower-pitched sounds.

Treble Adjust the treble effect. Increases or decreases high-pitched sounds.

Surround

Press 【▼】 / 【▲】 button to select Surround Sound, then press 【◀】 / 【▶】 button to select On or Off.

AVL

Automatically reduces sudden volume changes,for example,when switching between the channels. Press 【▼】 / 【▲】 button to select AVL, then press 【◀】 / 【▶】 button to select On or Off.

Digital Audio Out

Press 【▼】 / 【▲】 button to select Digital Audio Out, then press 【◀】 / 【▶】 button to select Off / Auto/PCM .

Audio Description

Press 【▼】 / 【▲】 button to select Audio Description , then press Enter / ▶ button to enter sub-menu.

MTS

Press 【▼】 / 【▲】 button to select MTS , then press Enter / ▶ button to enter sub-menu.

Channel Menu



Press MENU button to display the main menu.

Press 【◀】 / 【▶】 button to select CHANNEL in the main menu,then press ENTER / ▼ to enter. .

- 1.Press 【▼】 / 【▲】 button to select the option that you want to select in the CHANNEL menu.
- 2.Press Enter button to enter sub-menu.
- 3.Press MENU button to return back to the previous menu.

Channel Edit

Press【▼】/【▲】button to select Channel Edit , then press Enter / ►button to enter sub-menu.

Favorite List

Press【▼】/【▲】button to select Favorite List, then press Enter / ►button to enter sub-menu.

Country/region

Press【▼】/【▲】button to select Country/region, then press Enter / ►button to enter sub-menu.

Antenna Type

Press【▼】/【▲】button to select Antenna Type,then press【◀】/【▶】button to select.

(Air/Cable/Satelite).

Auto Search

Press【▼】/【▲】button to select Auto Search , then press Enter / ►button to enter sub-menu.

DTV Manual Search

Press【▼】/【▲】button to select DTV Manual Search , then press Enter / ►button to enter sub-menu.

ATV Manual Search

Press【▼】/【▲】button to select ATV Manual Search , then press Enter / ►button to enter sub-menu.

 
 
LCN

Press【▼】/【▲】button to select LCN,then Press【◀】/【▶】button to select LCN: On/Off.

Feature Menu

Press MENU button to display the main menu.

Press 【◀】 / 【▶】 button select Feature in the main menu, then press ENTER / ▼ to enter.

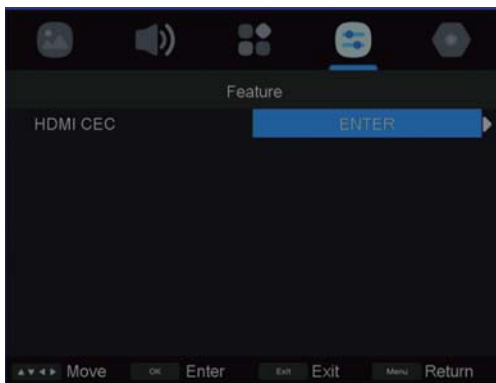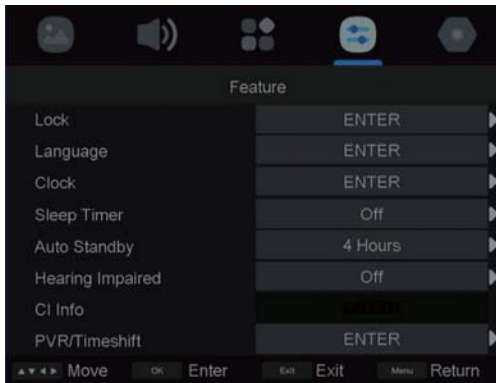

1. Press 【▼】 / 【▲】 button to select the option that you want to adjust in the Feature menu.

2. Press Enter/ 【◀】 / 【▶】 button to adjust.

3. After finishing your adjustment, Press MENU button to return back to the previous menu.

Lock

Press 【▼】 / 【▲】 button to select Lock , then press Enter / ▶ button to enter sub-menu.

Language

Press 【▼】 / 【▲】 button to select Language , then press Enter / ▶ button to enter sub-menu.

Clock

Press **【▼】 / 【▲】** button to select Clock , then press Enter / **▶** button to enter sub-menu.

Sleep Timer

Press **【▼】 / 【▲】** button to select Sleep Timer, then press **【◀】 / 【▶】** button to select Off / 10mins/20mins/30mins/60mins/90mins/120mins/180mins/240mins.

Auto Standby

Press **【▼】 / 【▲】** button to select Sleep Timer, then press **【◀】 / 【▶】** button to select Off / 3Hours/4Hours/5Hours.

Hearing Impaired

 
Press **【▼】 / 【▲】** button to select Hearing Impaired, then press **【◀】 / 【▶】** button to select On or Off.

CI Into

Press **【▼】 / 【▲】** button to select CI Into , then press Enter / **▶** button to enter sub-menu.


PVR/Timeshift

Press **【▼】 / 【▲】** button to select PVR/Timeshift , then press Enter / **▶** button to enter sub-menu.(Partition Select/Auto Timeshift/Timeshift Buffer/Schedule/List/Record List/Recorder Start).

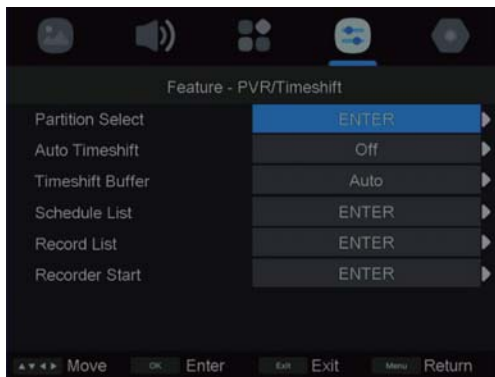

HDMI CEC

 Press **【▼】** / **【▲】** button to select HDMI CEC , then press Enter / **▶** button to enter (CEC Control/TV Auto Power on/Device Auto Power off/Speaker Preference/HDMI ARC/Device List).

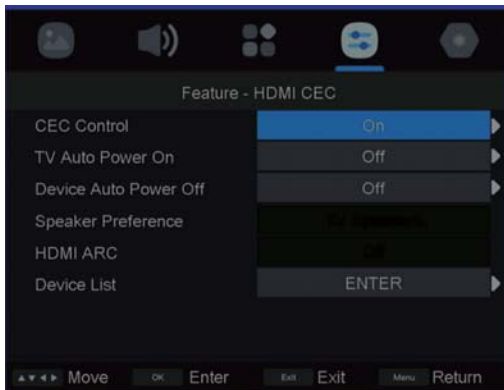

Setup Menu

Press MENU button to display the main menu.

Press **【◀】** / **【▶】** button select SETUP in the main menu, then press ENTER / **▼** to enter.



1. Press **【▼】** / **【▲】** button to select the option that you want to adjust in the SETUP menu.
2. Press Enter/ **【◀】** / **【▶】** button to adjust.
3. After finishing your adjustment, Press MENU button to save and return back to the previous menu.

OSD Timer

Press **【▼】 / 【▲】** button to select OSD Timer, then press **【◀】 / 【▶】** button to select Never 5 Seconds/10 Seconds/15 Seconds/20 Seconds/25 Seconds/30 Seconds.

Blue Screen

Press **【▼】 / 【▲】** button to select Blue Screen, then press **【◀】 / 【▶】** button to select On or Off.

ECO

 
Press **【▼】 / 【▲】** button to select Blue Screen, then press **【◀】 / 【▶】** button to select On or Off.

Reset TV Setting

Press **【▼】 / 【▲】** button to select Reset TV Setting , then press Enter / **▶** button to enter sub-menu.

USB OPERATION


Note: Before operating USB menu, Plug in USB device, then press INPUT button to set the Input Source to USB . Press 【◀】 / 【▶】 button to select USB in the Source menu, then press Enter button to enter.

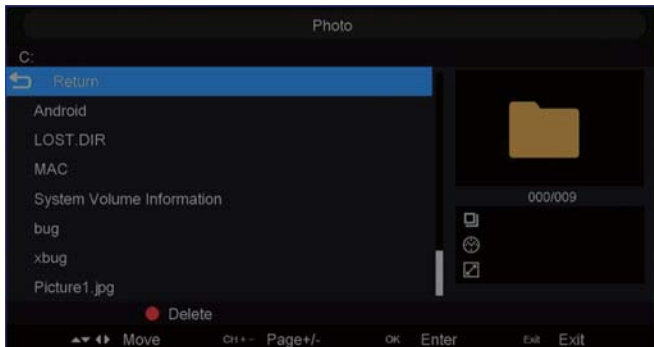

Press 【◀】 / 【▶】 button to select the option you want to adjust in the main USB menu, then press Enter button to enter.

Photo

 
Press 【◀】 / 【▶】 button to select PHOTO in the main menu, then press OK button to enter.
Press 【▼】 / 【▲】 button to select drive disk you want to watch, then press OK button to enter.

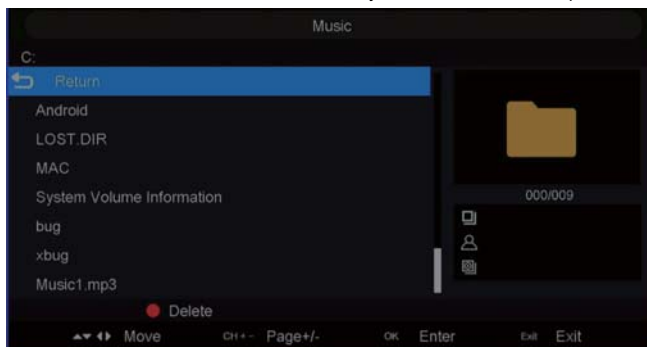

Music

Press **【◀】 / 【▶】** button to select MUSIC in the main menu, then press OK button to enter.

 
Press **【▼】 / 【▲】** button to select drive disk you want to watch, then press OK button to enter.

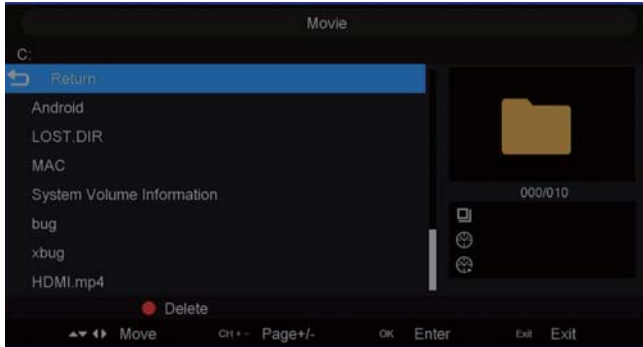

Movie

Press **【◀】 / 【▶】** button to select MOVIE in the main menu, then press OK button to enter.

 
Press **【▼】 / 【▲】** button to select drive disk you want to watch, then press OK button to enter.

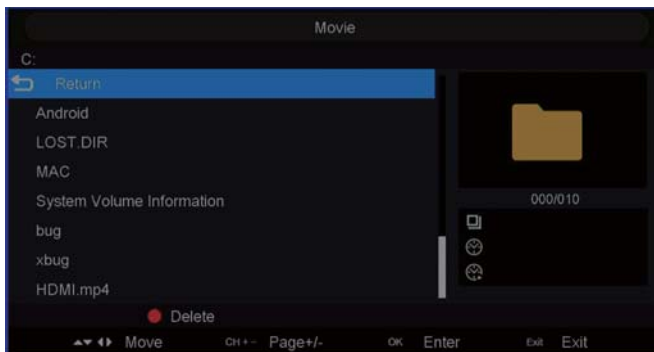

E-Book






Press 【◀】 / 【▶】 button to select E-Book in the main menu, then press OK button to enter.

 Press 【▼】 / 【▲】 button to select drive disk you want to watch, then press OK button to enter.

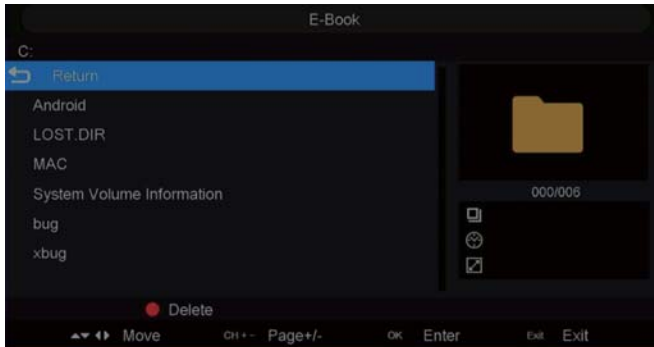

STAND INSTALLATION

     Stand Installation

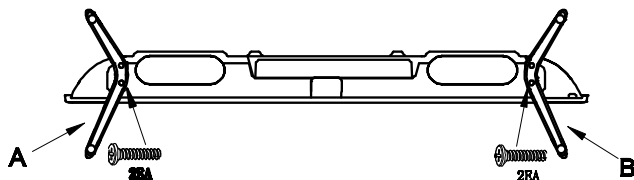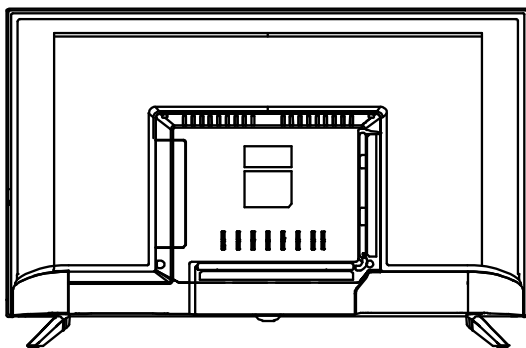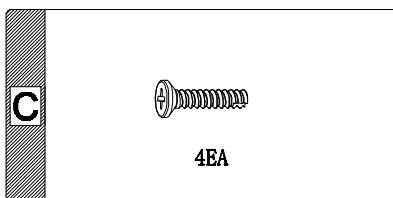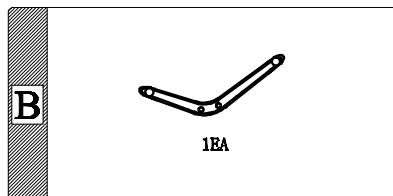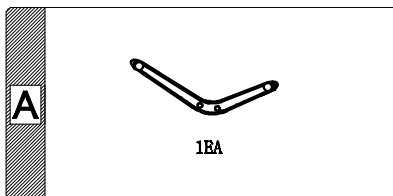



HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model: 32DTV240D

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu posprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

EN

SR



UPOZORENJE:
KAKO BI SMANJILI RIZIK OD STRUJNOG UDARA NE UKLANJAJTE
POKLOPAC (ILI ZADNJI DEO). UNUTAR UREĐAJA NEMA DELOVA
KOJE SAMI MOŽETE ZAMENITI. OBRATITE SE KVALIFIKOVANIM
SERVISERIMA.



Simbol munje u jednakostraničnom trouglu upozorava korisnika na neizolovane opasne delove pod naponom unutar uređaja, koji može biti dovoljne jačine da predstavlja rizik od električnog udara.



Znak uzvika u jednakostraničnom trouglu obaveštava korisnika na postojanje važnih operacionih instrukcija kao i instrukcija za održavanje u literaturi koja prati proizvod.

INFORMACIJE O PROPISIMA:

Ovaj uređaj stvara, koristi i zrači radiofrekvenciju i ako nije instaliran i korišćen u skladu sa uputstvom, može izazvati štetne smetnje u radio komunikaciji. Ipak, ne postoji garancija da se smetnje neće pojaviti prilikom određenih instalacija. Ako ovaj uređaj ipak izazove štetne smetnje pri radio ili TV prijemu signala, što se može utvrditi tako što se uređaj isključi pa ponovo uključi, korisnik se savetuje da ukloni smetnje pomoću jedne ili više ponuđenih mera:

- Premestite prijemnu antenu.
- Povećajte razdaljinu između uređaja i prijemnika.
- Uređaj i prijemnik uključite u različite strujne utičnice.
- Posavetujte se sa prodavcem ili sa iskusnim radio/TV serviserom.

Sve izmene ili modifikacije koje nisu izričito odobrene od strane koja je ovlašćena da izda saglasnost, mogu da ponište garanciju.

OPREZ:

NE pokušavajte da modifikujete ovaj proizvod u bilo kom smislu bez pismenog odobrenja prodavca. Neovlašćena modifikacija proizvoda može da poništi garanciju.

Nije preporučljivo da određena statična slika bude stalno prikazana na ekranu duže vreme ili da prikazujete ekstremno svetle slike.

Ilustracije u ovom uputstvu su obezbeđene samo kao preporuke i mogu se razlikovati od stvarnog izgleda proizvoda.

UPOZORENJE:

Kako bi umanjili rizik od požara i strujnog udara NE izlažite ovaj uređaj kiši ili vlazi. Ne koristite ovaj uređaj u tropskoj klimi.

Ventilacija ne bi trebala da bude blokirana pokrivanjem ventilacionih otvora sa predmetima kao što su novine, krpe, zavese i slično.

Uređaj ne bi trebalo da bude izložen kapljanju ili prskanju. Takođe ni jedan predmet napunjen tečnošću, kao što je na primer vaza za cveće, ne bi trebalo da bude stavljen na njega.

Treba obratiti pažnju na ekološke aspekte prilikom odlaganja baterija. Ne bacajte baterije u kantu za otpatke. Molimo vas da kontaktirate vašeg prodavca kako bi očuvali životnu okolinu.

Održavajte minimalnu razdaljinu (5cm) oko uređaja kako bi aparat imao dovoljnu ventilaciju i hlađenje.

Na uređaj ne stavljati izvore otvorenog plamena.

Da bi sprečili širenje vatre, držite sveće i ostale izvore otvorenog plamena dalje od ovog uređaja u svakom trenutku.

Moguće je zastoaj rada uređaja prilikom elektrostatičkog pražnjenja. Može se ponovo pokrenuti ručnim gašenjem pa ponovnim paljenjem.

OPREZ

Povezivanje na strujnu mrežu.

Preporučljivo je da se uređaj uključi u samostalnu strujnu utičnicu, odnosno na strujni kabl na koji nije priključen nijedan drugi potrošač ili produžni kabl.

Ne preopterećujte strujne utičnice. Preopterećene, labave ili oštećene strujne utičnice i produžni kablovi, spaljeni strujni kablovi sa oštećenom izolacijom su opasni. Bilo koji od ovih uslova može dovesti do strujnog udara ili požara. Periodično proveravajte kablove vašeg uređaja i ako primetite oštećenje ili propadanje istih, isključite uređaj i prestanite da ga koristite sve dok ovlašćeni serviser ne otkloni kvar. Štitite naponski kabl od fizičkog i mehaničkog oštećenja, kao na primer od uvrtnja, prignječenja, priklještenja i gaženja po njemu. Obratite posebnu pažnju na utičnice, utikače naročito u delu gde kablovi izlaze iz aparata.

Mrežni (naponski) utikač se koristi i kao deo za isključivanje aparata i tako isključen aparat je spreman za ponovno uključivanje.

 
VAŽNE INFORMACIJE

Ako TV nije postavljen na dovoljno stabilnu podlogu može predstavljati opasnost ako padne. Mnoge povrede, naročito kod dece, mogu biti izbegnute ako primenite sledeće jednostavne mere:

- Koristite postolja preporučene od strane proizvođača.
- Koristite nameštaj koji može da izdrži TV.
- Postarajte se na TV ne visi sa ivice nameštaja.
- Ne postavljajte TV u visoki nameštaj (kao što su na primer šifonjeri i ormani za knjige), a da ge prethodno niste sigurno pričvrstili za odgovarajuću podlogu.
- Ne postavljajte tekstil ili neki drugi materijal između TV-a i nameštaja na kom se on nalazi.
- Podučite decu o opasnostima kod pokušaja da dohvate TV ili njegove komande.

VAŽNE MERE OPREZA:


1. Pročitajte ovo uputstvo.
2. Sačuvajte ovo uputstvo.
3. Poslušajte sva upozorenja.
4. Pratite sve instrukcije.

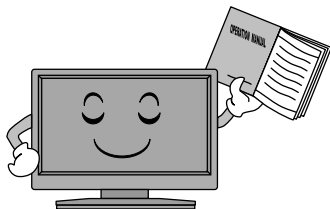


7. Ne blokirajte bilo koji ventilacioni otvor. Montirajte TV u skladu sa uputstvom proizvođača.



 
5. Ne koristiti proizvod u blizini vode.

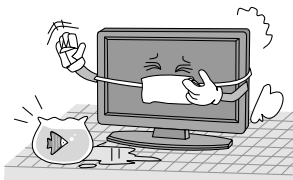

 8. Ne postavljati u blizini izvora toplote kao što su radijatori, peći ili drugi objekti (uključujući i pojačavače) koji emituju toplotu.

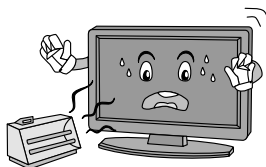

 6. Brisati samo sa suvom krpom.

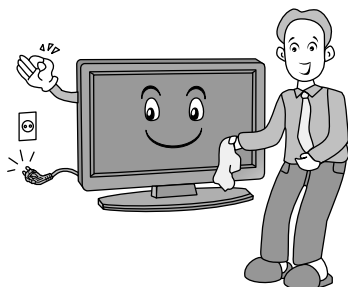

9. Utikač aparata priključite u odgovarajuću utičnicu, odnosno voditi računa da li je utikač sa polarizovanim viljuškama ili sa uzemljenjem pa shodno tome odabrati i utičnicu.

Mere opreza:

10. Čuvajte mrežni kabl od gaženja ili od priklještenja naročito kod utikača, razvodne kutije i izlaza iz aparata.

 


11. Koristite samo one dodatke navedene od strane proizvođača.


12. Koristiti samo sa kolicima, stalkom, tronožcem, podupiračem ili stolom naznačenim od strane proizvođača ili sa onim dobijenim uz aparat. Kada koristite kolica obratite pažnju kada ih pomerate da bi izbegli povredu ako dođe do prevrtanja.



13. Isključite iz struje ovaj aparat za vreme oluja sa munjama ili ako ga duže vreme ne koristite.

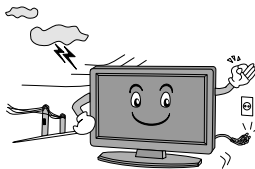

 14. Prepustite servisiranje kvalifikovanim osobama. Servis je potreban kad je uređaj oštećen u bilo kom smislu, kao na primer oštećenje utikača ili naponskog kabla, ako je po njemu prosuta tečnost ili je neki predmet upao u njega, ako je bio izložen kiši ili vlazi, ako ne radi normalno ili ako je ispušten.

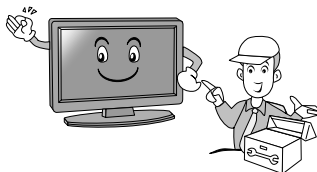

PRILIKOM ODLAGANJA (BACANJA):

- Fluorescentna lampa koja se koristi u ovom uređaju sadrži male količine žive.
- Ne bacajte ovaj uređaj sa ostalim kućnim smećem.
- Odlaganje (bacanje) ovog uređaja mora da se uradi u skladu sa regulativama zemlje u kojoj živite.

OBRATITI PAŽNJU:

- Ako je uređaj hladan na dodir, može doći do malog treperenja prilikom paljenja. Ovo je normalno, nema ničeg nepravilnog u radu vašeg TV-a.
- Nekoliko minuta mogu biti vidljive tačkaste nepravilnosti na ekranu, pojavljujući se kao sićušne crvene, zelene ili plave tačke. Ova pojava nema štetan uticaj na performanse vašeg TV-a.
- Izbegavajte dodirivanje ili držanje vašeg prsta duže vreme na ekranu. Ako to uradite može doći do privremene iskrivljenosti vašeg ekrana.

Početak:

Upotreba daljinskog upravljača:

Kada koristite daljinski upravljač usmerite ga ka senzoru na TV-u. Ako postoji predmet između daljinskog i senzora, uređaj možda neće reagovati.

 
- Uperite daljinski upravljač ka senzoru na TV-u.

- Kada koristite TV u veoma osetljivoj prostoriji infra crveni senzor možda neće raditi kako treba.

- Preporučena daljina za nesmetan rad daljinskog upravljača je oko 7 metara.

Postavljanje baterija u daljinski upravljač:

1. Otvorite poklopac na zadnjem delu daljinskog upravljača.
2. Postavite dve baterije veličine AAA. Budite sigurni da ste ih postavili pravilno tako da + i - baterija odgovaraju dijagramu unutar upravljača.
3. Vratite poklopac.

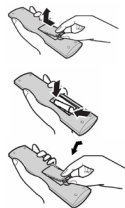

Zamena baterija:

Potrebno je da postavite baterije u daljinski upravljač tako što ćete pratiti sledeće instrukcije. Kada baterije oslabe operativna razdaljina daljinskog upravljača će drastično opasti i moraćete ih zameniti.

Preporuka kako koristiti baterije:

Korišćenjem pogrešnih vrsta baterija može dovesti do hemijskog curenja ili eksplozije. Molimo vas obratite pažnju na sledeće:

- Budite sigurni da ste polove + i - baterija postavili kako je prikazano na dijagramu u odeljku za baterije daljinskog upravljača.
- Različite vrste baterije imaju drugačije karakteristike. Ne mešajte različite vrste baterija.
- Ne mešajte nove i stare baterije. Ako to uradite smanjujete životni vek baterije i može doći do curenja iste.
- Promenite baterije istog trenutka kada prestanu da rade.
- Hemikalije koje cure iz baterije mogu izazvati iritaciju kože. Ako hemikalije počnu da cure iz baterije odmah ih obrišite sa suvom krpom.
- Baterije mogu da imaju kraći životni vek zbog stanja prilikom skladištenja. Izvadite baterije kad znate da nećete koristiti daljinski upravljač duže vreme.
- Baterije ne izlažite prekomernoj toploti kao što su sunčeva svetlost, vatra ili slično.

Oprez:

- Može doći do eksplozije ako baterije nisu zamenjene pravilno.
- Zamenite baterije sa istom ili sličnom vrstom baterija.

Povezivanje i podešavanje:

Управління

Povezivanje kablova:

Molimo vas da pročitate pažljivo važne stavke u delu "Održavanje i bezbednost" pre povezivanja i korišćenja proizvoda.

1. Izvadite TV iz pakovanja i stavite ga na ravnu podlogu.

Obratiti pažnju:

- Kada uključujete ili isključujete TV, kompjuter ili drugi uređaj budite sigurni da je neizmenična struja već isključena. Kada isključujete naponski ili signalni kabl, držite ga za utikač (izolovani deo), a ne za telo kablova.

2. RF izlazni terminal može se povezati sa RF ulazom TV-a.

3. AV terminal DVD-a može se povezati sa AV ulazom TV-a putem AV kablova.

4. Povežite jedan kraj VGA kablova sa VGA portom kompjutera, a drugi kraj sa VGA portom TV-a, a zatim zategnite šrafove u smeru okretanja kazaljke sata na priključcima na oba kraja kablova.

Obratiti pažnju:

Pri priključivanju 15-to pinskog VGA kablova vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

5. Priključite jedan kraj HDMI kablova sa HDMI izlazom nekog uređaja, a drugi sa HDMI ulazom TV-a.

Obratiti pažnju:

Pri priključivanju HDMI kablova vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

6. Proverite da su odgovarajući AV kablovi spojeni sa odgovarajućim AV ulazima na TV-u.

7. Povežite naponski kabl sa izvorom struje od 100-240V.

Obratiti pažnju:

-Opseg izvora napajanja TV-a je 100-240V, 50/60Hz. Ne priključivati ga na izvor napajanja koji nije u tom opsegu.

-Molimo vas da držite izolovani deo utikača naponskog kablova kada ga isključujete i nemojte da dodirujete direktno njegove metalne delove.

Osnovne operacije:

Vodič za brz start

-Povezivanje:

1. Priključite napajanje i antenu.
2. Pritisnite taster  na daljinskom upravljaču da uključite TV.

-Početno podešavanje:

Kada je TV uključen po prvi put pojaviće se niz uputstava na ekranu koji će vam pomoći u podešavanju osnovnih parametara.

1. Izaberite željeni jezik.

Pritiskajte tastere     a zatim taster OK.

2. Izaberite odgovarajuću zemlju.

Pritiskajte tastere     a zatim taster OK da bi izabrali zemlju posle čega će početi traženje kanala.

Upaliti/ ugasiti TV

-Upaliti TV

Priključite kabl za napajanje. U tom trenutku TV će preći u stanje mirovanja (standby). Pritisnite taster  na daljinskom upravljaču kako bi iz stanja pripravnosti upalili TV.

Pritisnite taster  na daljinskom upravljaču kako bi ga prebacili u stanje mirovanja (standby). Ne ostavljajte vaš TV u stanju mirovanja duže vreme. Najbolje je da TV isključite iz napajanja i da ga odvojite od kabla za antenu.

-Nema signala

Ako nema ulaznog signala pojaviće se poruka koja vas na to upozorava. U TV/DTV modu ako nema signala 15 minuta, TV će se sam ugasiti. U PC modu TV će se sam ugasiti ako ulaznog signala nema 5 minuta. Kada spojite VGA kabl, TV će se sam upaliti.

Biranje programa

- Korišćenje CH+/CH- tastera na TV u i na daljinskom upravljaču

Pritisnite taster CH+ da bi prešli na viši kanal.

Pritisnite taster CH- da bi prešli na niži kanal.

-Korišćenje tastera sa brojevima (0-9)

Birajte željeni kanal pritiskanjem odgovarajućih brojeva od 0 do 9 (u TV i DTV modu) -Korišćenje tastera -/--

Možete da izaberete deo broja kanala pritiskanjem tastera -/--

Podešavanje zvuka

-Pritisnite taster VOL +/- da podesite jačinu zvuka

-Ako želite da isključite zvuk pritisnite taster 

-Ako želite da ponovo uključite zvuk pritisnite taster  ili VOL +/-

Promena izvora ulaznog signala

Možete da birate izvor ulaznog signala tako što ćete pritisnuti taster INPUT na daljinskom upravljaču.

Zatim pomoću dugmića   se krećite između datih izvora ulaznih signala i pritisnite taster OK da potvrdite izbor.

Daljinski upravljač

Tasteri daljinskog upravljača izgledaju kao što je prikaz:



Definisanje tastera na daljinskom upravljaču:

1. **STANDBY:** Uključite TV ili pristupite standbymodu.
2. **MUTE:** Isključite/Uključite zvuk.
3. **BROJEVI:** "0-9" se koriste za direktno pristupanje kanalima.
4. **-/- :** Unesite broj kanala koji želite da gledate
5. **↺ :** Pritisnite za menjanje između trenutnog i kanala koji ste prethodno gledali.
6. **P.MODE:** Direktno odaberite mod slike.
7. **S.MODE:** Direktno odaberite mod zvuka.
8. **MENU:** Otvorite meni ili se vratite na glavni.
9. **SLEEP:** Podesite vreme isključenja.
10. **INPUT:** Izaberite izvor signala.
11. **AUDIO:** Izbor između NICAM DUAL / NICAM DUAL / NICAM DUAL+/ MONO standard zvuka i u DTV režimu rada izbor jezika koji se sluša.
12. **OK:** Potvrdite odabranu opciju.
13. **↕ :** Pritisnite **↕** za odabir stavke.
Pritisnite dugme **↔** da je podesite.
14. **MENU:** Otvorite meniji se vratite na glavni.
15. **EXIT:** Pritisnite da napustite OSD meni.
16. **VOL+/VOL-:** Povećava jačinu zvuk./Smanjuje jačinu zvuka.
17. **CH+/CH-:** Programi unapred./Programi unazad.
18. **ASPECT:** Aspekt funkcija.
19. **INFO:** Prikaži informacije o sadržaju trenutnog kanala
20. **LIST :** Pristup listi kanala.
21. **COLOR BUTTONS: ZELENI/ CRVENI/ ŽUTI/ PLAVI taster**
◀ : Brz pregled sadržaja unazad (u MEDIA režimu rada)
▶ : Brz pregled sadržaja unapred (u MEDIA režimu rada)
◀◀ : Prethodno (u MEDIA režimu rada)
▶▶ : Sledeće (u MEDIA režimu rada)
▶|| : Reprodukcijska / pauza (u MEDIA režimu rada)
■ : Zaustavi (u MEDIA režimu rada)
22. **FAV:** Pritisnite da dodate ili uklonite Vaš omiljeni kanal u okviru tv menija.
23. **TEXT:** Uključivanje i isključivanje Teletext moda
24. **HOLD:** Uključenje i isključenje prikaza trenutne stranice.
25. **SUBTITLE:** Prikazivanje titla u USB modu.
26. **INDEX:** Zatraži Index stranicu u Teletext modu.
Isključenje reprodukcije u PVR modu ili Media Player modu.
27. **REVEAL:** REVEAL-OTKRIJ - Otkrivanje skrivenih informacija nekih stranica teleteksta.
28. **EPG:** Pozovite EPG (Elektronski programski vodič), samo u DTV režim rada
29. **SUBPAGE:** Unesite podstranicu.
30. **SIZE:** Promena veličine prikaza u Teletext modu.
31. **REC:** Započinjanje snimanja u PVR modu

NAPOMENE:

- Sve fotografije u ovom priručniku su primeri, samo za referencu, stvarni proizvod može se razlikovati od prikazanih fotografija
- Tasteri koji nisu pomenuti, u ovom modelu se ne koriste

Ulazi



Pritisnite taster **【▼】** / **【▲】** da biste izabrali meni Input.

 
Pritisnite taster **【▼】** / **【▲】** / **【◀】** / **【▶】** da biste izabrali.

Pritisnite ENTER da izaberete ulaz.

Prvo podešavanje


OSD jezik

Pritisnite taster [▼] / [▲] da izaberete jezik koji će se koristiti za menije i poruke.

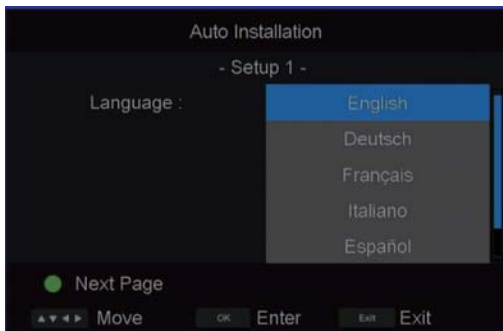


Država/regija

 Pritisnite taster [▼] / [▲] da biste izabrali zemlju/region koji želite.

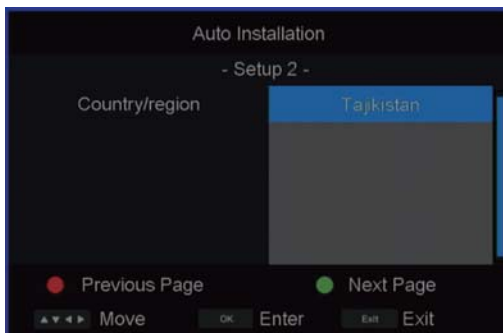


Tip antene

 Pritisnite taster 【▼】 / 【▲】 da biste izabrali Air/Cable/Satelit.

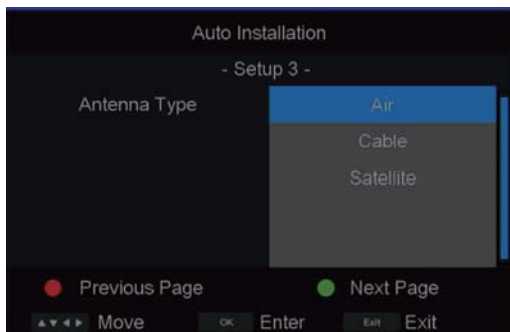

Automatsko skeniranje

 
Pritisnite taster 【▼】 / 【▲】 da izaberete režim: DTV+ATV, ATV,DTV .

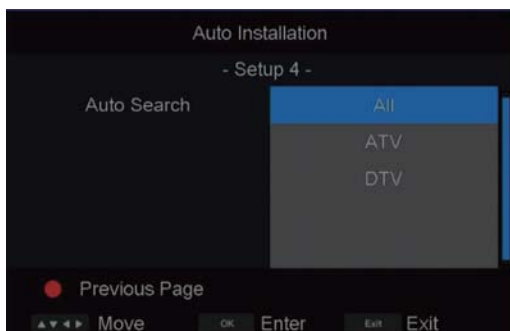

Meni slika

Pritisnite taster MENU za prikaz glavnog menija.

 Pritisnite taster [◀] / [▶] izaberite SLIKA u glavnom meniju, a zatim pritisnite ENTER / ▼ za ulazak.

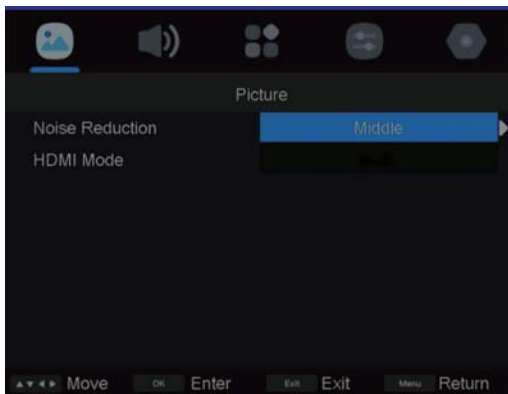

1. Pritisnite taster [▼] / [▲] da biste izabrali opciju koju želite da podesite u meniju SLIKA.
2. Pritisnite taster Enter [◀] / [▶] za podešavanje.
3. Nakon što završite podešavanje, pritisnite taster MENU da biste se vratili na prethodni meni.

Režim slike

Pritisnite taster **【▼】** / **【▲】** da izaberete Režim slike, a zatim pritisnite taster **【▶】** da izaberete. (Dostupan režim slike: Standardni/Dinamički/Filmski/Meko/Eko/Korisnički).

Osvetljenost/kontrast/oštrina/zasićenost/nijansa

Pritisnite taster **【▼】** / **【▲】** da izaberete opciju, a zatim pritisnite taster **【▶】** da biste podesili.

Osvetljenje Podesite izlaz vizuelne percepcije cele slike, to će uticati na svetlu sliku.

Kontrast Podesite intenzitet osvetljenja slike, ali senka slike je nepromenljiva.

Oštrina Podesite vrhunac u detaljima slike.

Boja Podešavanje boja na slikama

Nijansa Upotreba u kompenzacionoj boji promenjena sa prenosom u NTSC kodu.

Temperatura boje Promenite ukupnu boju slike.

Pritisnite taster **【▼】** / **【▲】** da biste izabrali temperaturu boje, a zatim pritisnite taster **【▶】** da biste izabrali Standardno/Hladno/Toplo.

Standardni Daje živopisnu sliku.

Hladno Stvara nežnu sliku plave boje.

Toplo Stvara nežnu sliku crvene boje.

Razmera

Pritisnite taster **【▼】** / **【▲】** da izaberete Aspect Ratio, a zatim pritisnite taster **【▶】** da izaberete Full/Zoom1/Zoom2/Auto/4:3.

Smanjenje šuma

Izaberite Visoko/Srednje/Nisko/Isključeno da poboljšate kvalitet slike.

HDMI Mod

Režim ekrana (dostupan samo na HDMI izvoru.)

Meni zvuka

Pritisnite taster MENU za prikaz glavnog menija.

Pritisnite taster [◀] / [▶] izaberite ZVUK u glavnom meniju, a zatim pritisnite ENTER / ▼ za ulazak.



1.Pritisnite taster [▼] / [▲] da biste izabrali opciju koju želite da podesite u meniju ZVUK. 2.

Pritisnite taster Enter [◀] / [▶] za podešavanje.

3.Nakon što završite podešavanje, pritisnite taster MENU da biste se vratili na prethodni meni.

Režim zvuka

Pritisnite taster [▼] / [▲] da biste izabrali Audio režim, a zatim pritisnite taster [◀] / [▶] da biste izabrali.

(Dostupan režim zvuka: standardni, pokret, muzika, govor, korisnik).

SAVETI: Možete pritisnuti taster SMODE na daljinskom upravljaču da direktno promenite režim zvuka. Standard Proizvodi uravnotežen zvuk u svim okruženjima.

Movie Poboljšava visoke tonove i bas za bogat doživljaj zvuka.

Muzika Povećajte pojačanje basa za bolji bas

Govor Smanjite pojačanje visokih tonova i basa da biste naglasili vokalne efekte

Korisnik Izaberite da biste prilagodili podešavanja zvuka.

Bas Podesite efekat basa. Povećava ili smanjuje niže tonove.

Visoki tonovi Podesite efekat visokih tonova. Povećava ili smanjuje visoke tonove.

Okruženi zvuk

Pritisnite taster [▼] / [▲] da izaberete Okruženi zvuk, a zatim pritisnite taster [◀] / [▶] da izaberete Uključeno ili Isključeno.

AVL

Automatski smanjuje nagle promene jačine zvuka, na primer, prilikom prebacivanja između kanala. Pritisnite taster [▼] / [▲] da izaberete SVE, a zatim pritisnite taster [◀] / [▶] da izaberete Uključeno ili Isključeno.

Digitalni audio izlaz

Pritisnite taster [▼] / [▲] da biste izabrali Digitalni audio izlaz, a zatim pritisnite taster [◀] / [▶] da biste izabrali Off / Auto/PCM .

Audio opis

Pritisnite taster [▼] / [▲] da izaberete Audio opis , zatim pritisnite taster Enter / ► da uđete u podmeni.

MTS

Pritisnite taster [▼] / [▲] da izaberete MTS , a zatim pritisnite taster Enter / ► da uđete u podmeni.

Meni kanala



Pritisnite taster MENU za prikaz glavnog menija.

Pritisnite taster [◀] / [▶] da biste izabrali KANAL u glavnom meniju, a zatim pritisnite ENTER / ▼ za ulazak. .

- 1.Pritisnite taster [▼] / [▲] da biste izabrali opciju koju želite da izaberete u meniju KANAL.
- 2.Pritisnite taster Enter da biste ušli u podmeni.
- 3.Pritisnite taster MENU da biste se vratili na prethodni meni.

Uređivanje kanala

Pritisnite taster **【▼】** / **【▲】** da izaberete Uređivanje kanala , zatim pritisnite taster Enter / **▶** da uđete u podmeni.

Favorite List

Pritisnite taster **【▼】** / **【▲】** da izaberete listu favorita, a zatim pritisnite taster Enter / **▶** da uđete u podmeni.

Država/regija

Pritisnite taster **【▼】** / **【▲】** da biste izabrali zemlju/region, a zatim pritisnite taster Enter / **▶** da biste ušli u podmeni.

Antenna Tipe

Pritisnite taster **【▼】** / **【▲】** da izaberete tip antene, a zatim pritisnite taster **【◀】** / **【▶】** da izaberete.

Auto Search

Pritisnite taster **【▼】** / **【▲】** da izaberete Auto Search , a zatim pritisnite taster Enter / **▶** da uđete u podmeni.

DTV ruč na pretraga

Pritisnite taster **【▼】** / **【▲】** da izaberete DTV Manual Search , zatim pritisnite taster Enter / **▶** da uđete u podmeni.

Ruč na pretraga ATV-a

Pritisnite taster **【▼】** / **【▲】** da izaberete ATV Manual Search , zatim pritisnite taster Enter / **▶** da uđete u podmeni.

LCN

 
 
Pritisnite taster **【▼】** / **【▲】** da izaberete LCN, a zatim pritisnite taster **【◀】** / **【▶】** da izaberete LCN: On/Off.

Meni funkcija

Pritisnite taster MENU za prikaz glavnog menija.

Pritisnite taster [◀] / [▶] izaberite Funkcija u glavnom meniju, a

zatim pritisnite ENTER / ▼ da biste ušli.

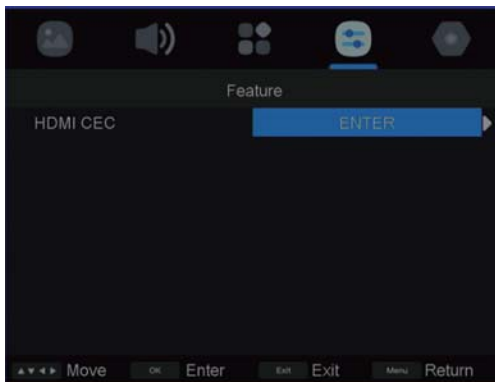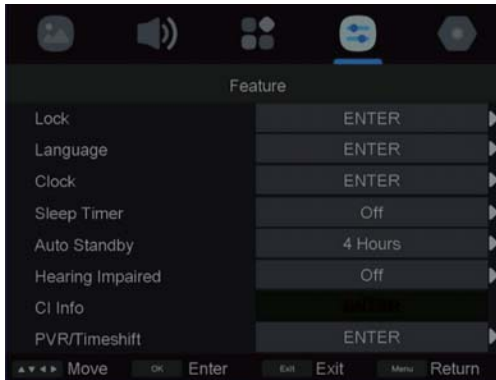

1. Pritisnite taster [▼] / [▲] da biste izabrali opciju koju želite da podesite u meniju funkcije.
2. Pritisnite taster Enter/ [◀] / [▶] za podešavanje.
3. Nakon što završite podešavanje, pritisnite dugme MENU da biste se vratili na prethodni meni.

Zaključati

Pritisnite taster [▼] / [▲] da izaberete Zaključaj , zatim pritisnite taster Enter / ▶ da uđete u podmeni.

Jezik

Pritisnite taster [▼] / [▲] da izaberete Jezik, a zatim pritisnite taster Enter / ▶ da uđete u podmeni.

Sat

Pritisnite taster [▼] / [▲] da izaberete Sat , zatim pritisnite taster Enter / ► da uđete u podmeni.

Tajmer mirovanja

Pritisnite taster [▼] / [▲] da izaberete Tajmer za isključivanje, a zatim pritisnite taster [◀] / [▶] da izaberete Isključeno / 10 min/20 min/30 min/60 min/90 min/120 min/140 min/2.

Auto Mriovanje

Pritisnite taster [▼] / [▲] da izaberete Tajmer za isključivanje, a zatim pritisnite taster [◀] / [▶] da izaberete Isključeno / 3 sata/4 sata/5 sati.

Oslabljen sluh

 
Pritisnite taster [▼] / [▲] da izaberete opciju Osobe oštećenog sluha, a zatim pritisnite taster [◀] / [▶] da izaberete Uključeno ili Isključeno.

CI ulaz

Pritisnite taster [▼] / [▲] da izaberete CI ulaz, zatim pritisnite taster Enter / ► da uđete u podmeni.

PVR/Odlaganje


Pritisnite taster [▼] / [▲] da izaberete PVR/Odlaganje , a zatim pritisnite taster Enter / ► da uđete u podmeni.(Izbor particije/Automatski vremenski pomak/Bafer vremenskog pomeranja/Raspored/Listu/Listu zapisa/Početak snimača).

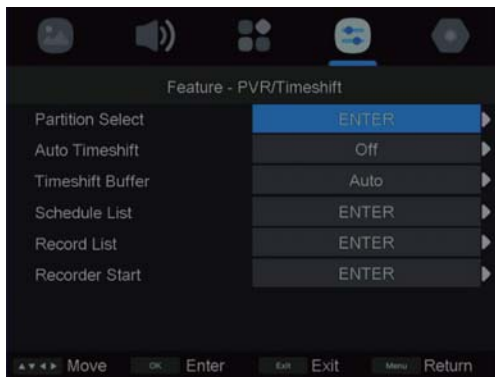

HDMI CEC

Pritisnite taster [▼] / [▲] da izaberete HDMI CEC , a zatim pritisnite taster Enter / ► da uđete.

 (CEC kontrola/Automatsko uključivanje TV-a/Automatsko isključivanje uređaja/
Preference zvučnika/HDMI ARC/Lista uređaja).

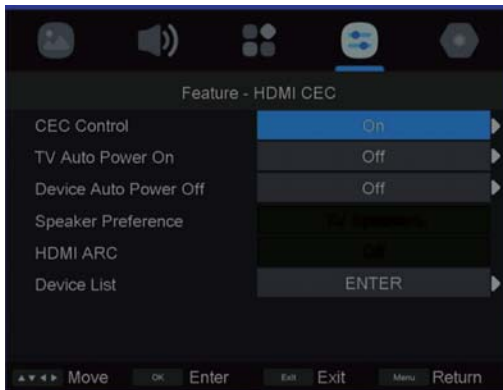

Meni za podešavanje

Pritisnite taster MENU za prikaz glavnog menija.

Pritisnite taster [◀] / [▶] izaberite SETUP u glavnom meniju, a zatim pritisnite ENTER / ▼ da biste ušli.



1. Pritisnite taster [▼] / [▲] da biste izabrali opciju koju želite da podesite u meniju SETUP.
2. Pritisnite taster Enter/ [◀] / [▶] za podešavanje.
3. Nakon što završite podešavanje, pritisnite taster MENU da biste sačuvali i vratili se na prethodni meni.

OSD tajmer

Pritisnite taster 【▼】 / 【▲】 da izaberete OSD tajmer, zatim pritisnite taster 【◀】 / 【▶】 da izaberete Nikad 5 sekundi/10 sekundi/15 sekundi/20 sekundi/25 sekundi/30 sekundi.

Plavi ekran

Pritisnite taster 【▼】 / 【▲】 da izaberete Plavi ekran, a zatim pritisnite taster 【◀】 / 【▶】 da izaberete Uključeno ili Isključeno.

ECO

 
Pritisnite taster 【▼】 / 【▲】 da izaberete Plavi ekran, a zatim pritisnite taster 【◀】 / 【▶】 da izaberete Uključeno ili Isključeno.

Resetujte TV podešavanja

Pritisnite taster 【▼】 / 【▲】 da izaberete Reset TV Setting , a zatim pritisnite taster Enter / ▶ da uđete u podmeni.

USB FUNKCIJA


Napomena: Pre nego što počnete da koristite USB meni, priključite USB uređaj, a zatim pritisnite taster INPUT da biste izvor ulaza postavili na USB. Pritisnite taster [◀] / [▶] da biste izabrali USB u meniju Izvor, a zatim pritisnite taster Enter da biste ušli.

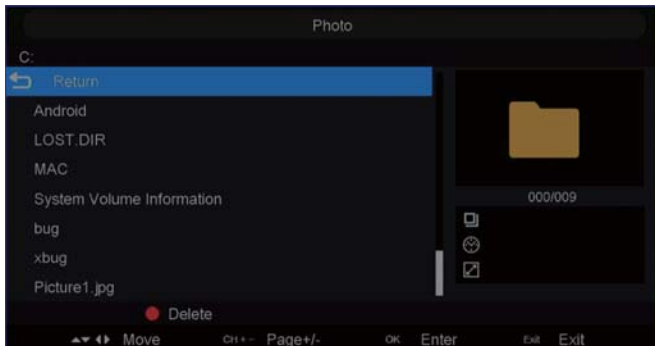

Pritisnite taster [◀] / [▶] da biste izabrali opciju koju želite da podesite u glavnom USB meniju, a zatim pritisnite taster Enter da biste ušli.


Foto

 Pritisnite taster [◀] / [▶] da biste izabrali FOTOGRAFIJA u glavnom meniju, a zatim pritisnite taster OK da biste ušli. Pritisnite taster [▼] / [▲] da biste izabrali disk koji želite da gledate, a zatim pritisnite taster OK da biste ušli.

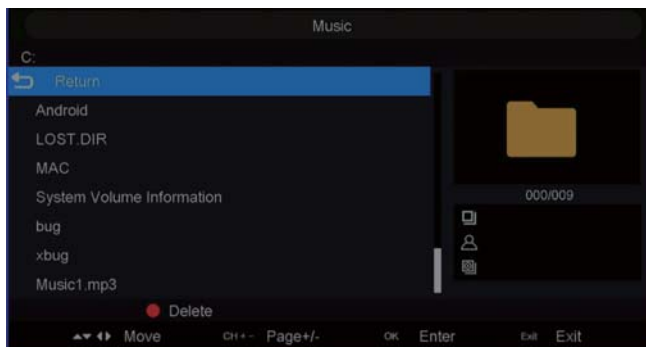


Muzika

 Pritisnite taster [◀] / [▶] da biste izabrali MUZIKA u glavnom meniju, a zatim pritisnite taster OK da biste ušli. Pritisnite taster [▼] / [▲] da biste izabrali disk koji želite da gledate, a zatim pritisnite taster OK da biste ušli.

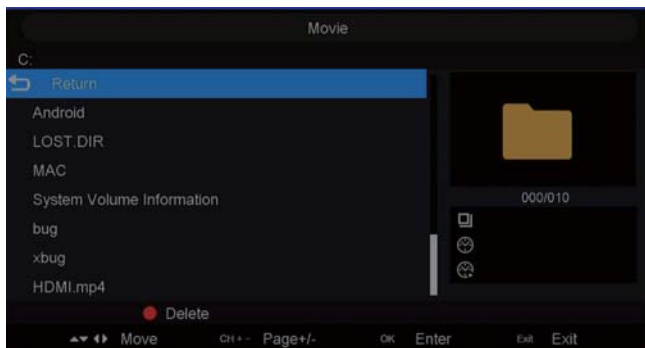


Film

 Pritisnite taster [◀] / [▶] da biste izabrali FILM u glavnom meniju, a zatim pritisnite taster OK da biste ušli. Pritisnite taster [▼] / [▲] da biste izabrali disk koji želite da gledate, a zatim pritisnite taster OK da biste ušli.





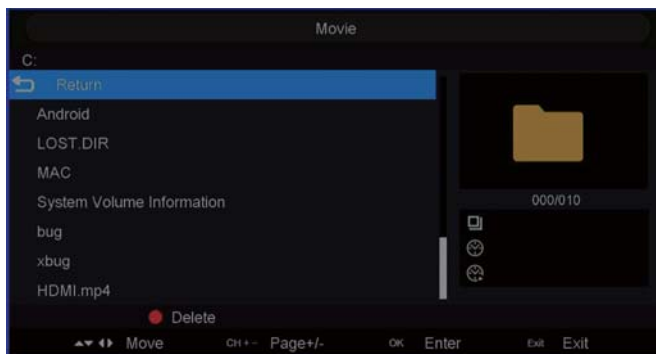


E-Knjiga

 Pritisnite taster [◀] / [▶] da biste izabrali E-knjigu u glavnom meniju, a zatim pritisnite taster OK da biste ušli. Pritisnite taster [▼] / [▲] da biste izabrali disk koji želite da gledate, a zatim pritisnite taster OK da biste ušli.

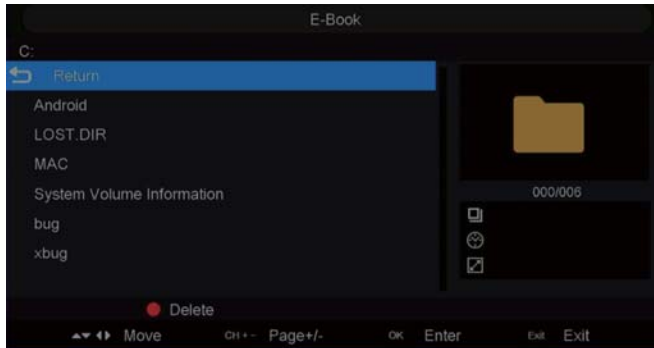

Uputstvo za instalaciju postolja

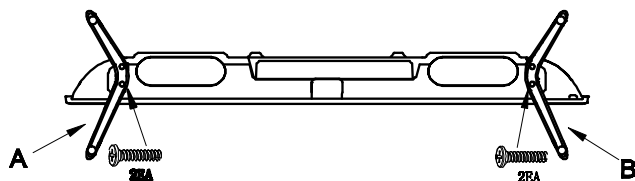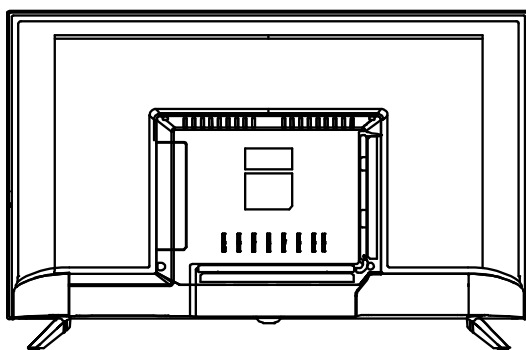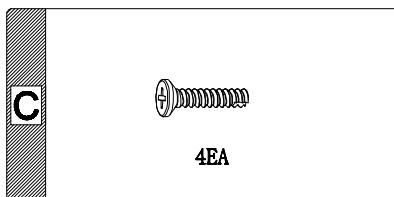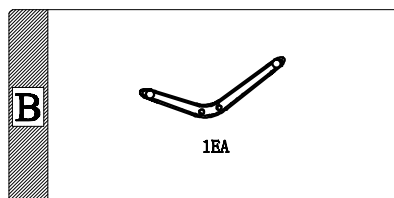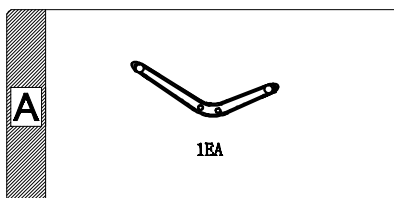     



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs